



instruction booklet

Hair Designer™ 2000
with twice the straightening power

VS5720A

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following: Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: Unplug unit when not in use. All appliances are electrically live even when switched off.

WARNING: This appliance must not be taken into a bathroom.



- Do not immerse in water or other liquids. Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Attachments may get hot during use. Allow them to cool before handling.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.
- Never drop or insert any object into an opening.

Hair Designer™ 2000

The VS Sassoon Hair Designer™ 2000 is a unique dryer designed to straighten, smooth, add shine and volume as you dry. With two rows of tourmaline-ceramic straightening slides, it grips the hair for twice the straightening power to create a straight, silky, shiny smooth finish. A high powered 2000W dryer with Ionic and Tourmaline-Ceramic technology™, it delivers the ultimate in straight high shine finish thanks to its ultra slim concentrator nozzle, straightener attachment with patented triple-action control and Tensio Control System™.

How to use your Hair Designer™ 2000

- Always towel-dry your hair before using the dryer.
- Ensure that the appliance is set to the 'O' (off) setting before plugging into a suitable power outlet.
- There are 3 heat and 2 speed settings, plus the cool shot button. Select the required heat/speed setting to suit you. The lowest heat/speed setting combines an ideal airflow and temperature for shaping finer, damaged or weakened hair. The highest heat/speed setting combines a stronger airflow and higher temperature for pre-drying hair (with or without the concentrator nozzle) before using the straightener attachment. It is also useful for shaping and straightening thick hair. To pre-dry hair, use the highest heat/speed settings, and use the lower heat/speed settings when using the straightener attachment. Please refer to 'Styling Tips using the Hair Designer™ 2000' section.
- Use the cool shot button on warm hair to rapidly cool hair and set the style in place for a longer-lasting effect.

The Attachments

- To attach the straightening attachment or concentrator nozzle, simply place the attachment over the end of the dryer barrel.
- To remove the attachment, press the 2 buttons on either side of the dryer barrel while gently loosening the attachment.


Concentrator Nozzle



Use the concentrator nozzle for directing airflow just where you want it, to ease styling and straightening. For additional control, use one of the lower settings and point the airflow along the surface of the hair to be dried.

NB: Take care not to direct the airflow directly onto the skin (e.g. scalp, neck, ears, face, etc) as hot air from hair dryers can, particularly if held too close, cause discomfort or even burns.

Straightener Attachment

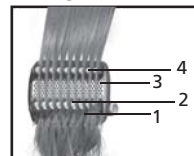

This unique straightener attachment features a patented triple action control with three functions in one. It dries, straightens and shines your hair in one simple move:

1. Untangle: detangling comb to prepare your hair for straightening
2. Straighten: the first row of 9 tourmaline-ceramic slides gently straighten your hair and reduce static and frizz
3. Shine: ceramic smoothing plate adds sleekness and shine
4. Smooth: the second row of 9 tourmaline-ceramic slides gives an extra straight finish for the ultimate smooth results

How to use the Tensio Control System™



The Tensio Control System™ adjusts the slide tension on the straightening attachment to suit each hair type for perfect straightening.



Wavy Hair



Curly Hair



Very Curly
Hair



Thick Hair

To set the Tensio Control System™, turn the dial clockwise to the recommended number for your hair type.

How to use the 360° Rotating Head

This system makes the Hair Designer™ 2000 an exceptional appliance to use. It allows for styling lengths, fringes, roots and touch-ups. It also contours to the head and allows you to style both sides of your head. This is highly suggested in order to manoeuvre the Hair Designer™ 2000 easily to create a desired hairstyle. To change the positions simply follow this easy step:



Horizontal



Diagonal



Vertical

1. Snap the straightening attachment onto the barrel and release the buttons on either side of the barrel. Turn and rotate the attachment nozzle until it reaches the desired position.

To change the position, simply release the buttons on either side of the barrel. Turn and rotate the attachment nozzle.

How does the Ionic feature work?

Ionic Conditioning Technology™: Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution, add to the buildup of static electricity in the hair. Even brushing and towel-drying the hair can increase these levels.

This static charge causes the scales, or cuticle, of the hair to push each other apart, resulting in a rough hair surface where the hairs cannot lie smoothly against each other. Consequently, hair may have a dull appearance. High levels of static charge cause hair to become 'flyaway' and difficult to style. The internal ionic ports emit a stream of negative ions which act to neutralise the static charge.

What is Tourmaline Technology™?

Tourmaline-Ceramic Technology™: Delivers even heat distribution without hot spots. Tourmaline is a semiprecious crystal which is a natural source of negative ions and far-infrared (FIR) rays.

The production of negative ions from tourmaline eliminates static in the hair, and far infrared rays assist in the deep penetration of heat, thus preventing hair damage. When in contact with wet hair, Tourmaline Technology™ works to ionize and alkalise moisture, and provides antibacterial and deodorant qualities.

Styling Tips using the Hair Designer™ 2000



NB: For best styling results: while maintaining tension, slowly pull the Hair Designer™ 2000 and straightener attachment down along the hair section, towards the ends of the hair. (It is very important to hold the hair firmly taut when using the straightener attachment, as you would with a straightener.)

At the end of the hair section, release the pressure and allow the hair section to slide out. Repeat process as necessary until the desired effect is achieved. (It may be necessary to repeat this process on certain areas, depending on the texture and thickness of your hair.)

These are recommendations only. Practice makes perfect; please practice using your Hair Designer™ 2000 to guarantee the best results for your hair type.

1. Ensure that your hair is clean, towel-dried and combed through before using the dryer.
2. Pre-dry your hair using the highest heat/speed settings and the concentrator nozzle until the hair is slightly damp.
3. Attach the straightener attachment and select the tension recommended for your hair type. When first using the straightener attachment, it is advised to use tension 1 (the weakest tension) to familiarize yourself with the dryer.
4. It is best to work in sections when straightening the hair. Clip together the upper layer of the hair on top of your head, and begin with the hair underneath and at the nape of the neck.
5. Move on to the hair on the back of the neck and then onto the sides.
6. Finish with the upper layers of your hair.

TIP: To reduce the volume of thick or voluminous hair, place the dryer on top of the section of hair. If your hair is quite fine or lifeless, place the dryer underneath the section of the hair – it will straighten whilst lifting the roots and giving more life and volume.

Straightening the Lengths:

1. Select the horizontal position on the straightener attachment.
2. Separate the hair into equal sections approximately 5cm wide. Place the dryer (Detangling Comb facing down) at the roots of the hair ensuring that the teeth of the detangling comb completely penetrate the hair.
3. With a slight twisting motion of the wrist, turn the appliance under and slide it down slowly along the length of the hair – this will give the tourmaline-ceramic slides and ceramic smoothing plate the maximum effect.
4. Repeat process if necessary and finish with a push of the Cool Shot button for better hold.



Curling the Ends Up Under:

1. Select the horizontal position on the straightener attachment.
2. Separate the hair into equal sections about 5cm wide. Place the dryer (Detangling Comb facing down) under the section of the hair.
3. With a slight twisting motion of the wrist, turn the appliance under and slide it slowly towards the ends of the hair, using your free hand to turn the hair up.
4. Hold it for 5 to 10 seconds; this will allow the tourmaline-ceramic slides and ceramic smoothing plate to give you the maximum effect.
5. Repeat process if necessary and finish with a push of the Cool Shot button for better hold.



Curling the Ends Outwards:

1. Select the vertical position on the straightener attachment.
2. Separate the hair into equal sections about 5cm wide. Hold the dryer (Detangling Comb facing down) over the section of the hair.
3. With a slight twisting motion of the wrist, turn the appliance over and slide it slowly towards the ends of the hair, using your free hand to turn the hair up.
4. Hold it for 5 to 10 seconds; this will allow the tourmaline-ceramic slides and ceramic smoothing plate to give you the maximum effect.
5. Repeat process if necessary and finish with a push of the Cool Shot button for better hold.



Creating Volume from the roots and Working around the face:

1. Select the vertical position on the straightener attachment.
2. Separate the hair into equal sections about 5cm wide. Hold the dryer (Detangling Comb facing up) under the section of the hair and place it at the roots, ensuring that the teeth of the detangling comb completely penetrate the hair.
3. Gently pull the dryer to about 3cm from the roots and turn under; this will allow tourmaline-ceramic slides and ceramic smoothing plate to give you the maximum effect.
4. Hold the dryer parallel to your scalp for 5 seconds, and then slide the appliance slowly towards the ends.
5. Repeat if necessary and finish with a push of the Cool Shot button for perfect hold.



Working the Fringe:

1. Select the vertical position on the straightener attachment.
2. Separate the hair into equal sections about 5cm wide. Place the dryer (Detangling Comb facing up) under the section of the hair.
3. With a slight twisting motion of the wrist, turn the dryer upwards to lift the roots and slide it slowly over the ends.
4. Hold for 5 to 10 seconds; the tourmaline-ceramic slides and ceramic smoothing plate work best this way.
5. Repeat if necessary and finish with a push of the Cool Shot button for perfect hold.



Round Fringe

Finishing with the Concentrator:

Once the straightening process is finished, set your style with a shot of ionic cool air to reduce all traces of static electricity.

1. Detach the straightener attachment by pressing the 2 attachment release lock buttons on each side of the barrel and gently remove attachment.
2. Click the concentrator attachment into position on the appliance. Using the attachment release lock buttons, you can position the concentrator to desired angle for maximum styling control.
3. Turn on the Hair Designer™ 2000, set on lower heat/speed setting position.
4. Press the Cool Shot button, aiming the airflow at the top of your head first and working down the hair. This will set your style for lasting effect.



Cleaning and Maintenance

To help maintain optimum performance and prevent overheating, the rear filter should be cleaned on a regular basis.

- Ensure that the appliance is switched off, unplugged from the power outlet and has cooled down.
- Holding the handle of the appliance firmly, push the top of the rear filter away from the appliance.
- Using a soft brush, clean any hair and other debris that may have built up in the filter.
- Replace the filter by clicking into place.

It is advised to clean the straightener attachment on a regular basis to prevent buildup of hair and styling products between the straightening slides.

Limited Two Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair



©2008 Conair Corporation USA, 1 Cummings Point Rd,
Stamford, Connecticut, 06902 USA

Conair Australia Pty Ltd
Suites 20 and 21,
7 Narabang Way, Belrose NSW 2085
Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: aus_info@conair.com

Conair New Zealand Ltd.,
PO Box 251159, Pakuranga, Auckland, 2140, New Zealand
Customer Service Hotline (New Zealand): 0800 266 247