

The Attachments:



Concentrator Nozzle:

Use the concentrator nozzle for directing airflow just where you want it, to ease styling and straightening. For additional control, use one of the lower settings and point the airflow along the surface of the hair to be dried.

CAUTION: Take care not to direct the airflow directly onto the skin (e.g. scalp, neck, ears, face, etc.) as hot air from hairdryers can, particularly if held too close, cause discomfort or even burns.

What is Quietone Technology™?

The quietone technology™ fan feature provides full power with half the noise of a standard DC motor hairdryer.

What is Ceramic Technology™?

Ceramic technology™ delivers even heat distribution, helping to reduce harmful and damaging hotspots. Ceramic helps to retain heat longer and provides quicker results than non-ceramic styling tools.

Cleaning and Maintenance

To help maintain optimum performance and prevent overheating of the hairdryer, the rear filter should be cleaned on a regular basis.

- Ensure that the appliance is switched off, unplugged from the power outlet and has cooled down.
- Holding the handle of the appliance firmly, twist the rear filter to remove.
- Using a soft brush, clean any hair and other debris that may build up in the filter.
- Replace the rear filter and twist until it clicks into place.

Limited Two-Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under licence by Conair

©2007 Conair Corporation USA, 1 Cummings Point Rd, Stamford, Connecticut, 06902 USA

Conair Australia Pty Ltd
Suites 20 and 21,
7 Narabang Way, Belrose NSW 2085
Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: aus_info@conair.com

Conair New Zealand Ltd.,
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: Unplug unit when not in use. All appliances are electrically live even when switched off.



WARNING: This appliance must not be taken into a bathroom.


- Do not immerse in water or other liquids. Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described in this instruction booklet.
- This appliance is not intended for commercial use.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Attachments may get hot during use. Allow them to cool before handling.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.
- Never drop or insert any object into any opening.

Quietone 2000

The VS Sassoon Quietone 2000 is a powerful hairdryer that features 2000 watts for super fast drying and styling. A quietone technology™ fan feature provides the full power of a standard DC hairdryer, but with half the noise - this means you can talk, listen to music or TV while you dry! With 3 heat and 2 speed settings, cool shot, concentrator nozzle and removable rear filter, the Quietone 2000 hairdryer gives you the comfort and confidence to achieve your own desired look!

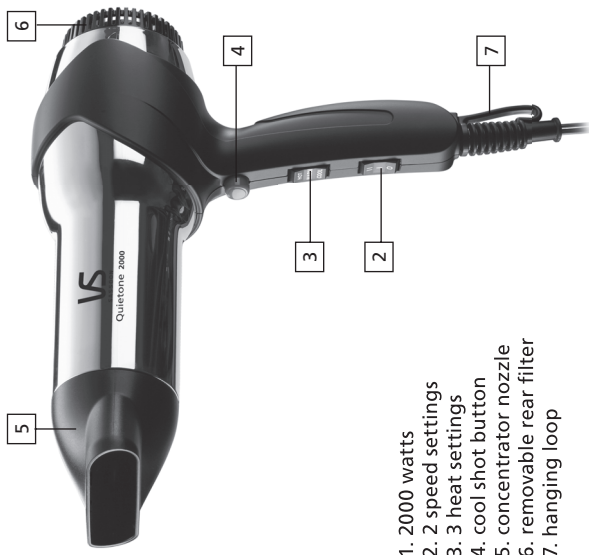

1. 2000 watts
2. 2 speed settings
3. 3 heat settings
4. cool shot button
5. concentrator nozzle
6. removable rear filter
7. hanging loop

Additional features:

- Ceramic Technology™
- Quietone Technology™

How to use your Quietone 2000

This hairdryer features the latest in Quietone Technology™ to give you powerful airflow with half the noise.

1. A plastic cover has been placed over the plug to protect it from damage during transportation. Remove the plastic cover from the plug before use.
2. Wash and condition your hair as usual.
3. Always towel-dry your hair before using the dryer.
4. Ensure the switch is set to the '0' - off setting before plugging into a suitable power outlet.
5. There are 3 heat and 2 speed settings, plus the cool shot button.
 - a. Use the low heat and speed settings as the hair begins to dry and for styling and scrunch drying. The low heat is also best for fine or damaged hair.
 - b. Use the medium heat/speed settings for normal hair.
 - c. Use the high heat and speed settings for initial drying. The highest setting is ideal for thick or hard to style hair.
- Use the cool shot button on warm hair to rapidly cool the hair and set the style in place for a longer-lasting effect.