

Important Safety Instructions

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following: Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: Unplug unit when not in use. All appliances are electrically live even when switched off.



WARNING: This appliance must not be taken into a bathroom.

- Do not immerse in water or other liquids. Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Attachments may get hot during use. Allow them to cool before handling.
- Do not use outdoors or operate where aerosol (spray) products are being used

or where oxygen is being administered.

- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Never drop or insert any object into any opening
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

Ultimate Nano High Torque 2000

Ultimate Nano High Torque 2000

The VS Sassoon Ultimate High Torque 2000 is a revolutionary dryer that combines the benefits of a high torque fan system™ with 2000 watts to deliver 2x the air pressure of a normal dryer. It features nano tourmaline ceramic™ for the ultimate shine and gloss and an internal ionic generator to leave hair silky and shiny with reduced frizz.

This stylish professional dryer has power, precision and is ideal for drying and styling all hair types, giving you the confidence to achieve your own desired look.



FEATURES:

1. 2000 watts
2. ionic generator
3. high torque fan system™
4. 3 heat settings
5. 2 speed settings
6. cool shot button
7. concentrator nozzle
8. volumising diffuser with adjustable airflow
9. hinged rear filter
10. 360° rotating swivel power cord

Additional features:

- High Torque Fan System™ Technology
- Nano Tourmaline Ceramic™
- Ionic Conditioning Technology™

Instructions For Use

How to use your Ultimate High Torque 2000

1. Remove all packaging and point of sale labels before use.
2. A plastic cover has been placed over the plug to protect it from damage during transportation. Remove the plastic cover from the plug before use.
3. Wash and condition your hair as usual.
4. Always towel-dry your hair and ensure that the hair is combed through and detangled before using the dryer, then divide hair into equal sections.
5. Ensure the switch is set to the 'off' setting before plugging into a 230/240v power outlet.
6. Turn the dryer on by selecting the required heat and speed setting.
7. There are 3 heat and 2 speed settings, plus the cool shot button.
 - a. Use the low heat and speed setting as the hair begins to dry and for styling and scrunch drying. The low heat is also best for fine or damaged hair.
 - b. Use the medium heat/low speed setting for normal hair.
 - c. Use the high heat and speed setting for initial drying. The highest setting is ideal for thick or hard to style hair.
8. Use the cool shot button on warm hair to rapidly cool the hair and set the style in place for a longer-lasting effect.

The Attachments:

Concentrator Nozzle -

Use the concentrator nozzle for directing airflow just where you want it, to ease styling and straightening. For additional control use one of the lower settings and point the airflow along the surface of the hair to be dried.

CAUTION: Take care not to direct the airflow directly onto the skin (e.g. scalp, neck ears, face, etc.) as hot air from the hairdryers can, particularly if held to close, cause discomfort or even burns.

Diffuser with adjustable airflow -

Important: Only use the diffuser with your dryer on the lowest heat settings.

Use the diffuser to build life, volume and curls in short to medium length hair, or scrunch with your hands and follow with diffuser. Shampoo and towel dry your hair. Hang your head forward and aim the diffuser upwards so that the warm air circulates freely through your hair. When dry, toss your head back for a stunning casual look.

To use the adjustable airflow feature on the diffuser, simply choose from the two variable airflow settings for gentle drying or direct airflow for more volume.

To open, turn the dial to the right for greater airflow (follow arrows on diffuser).

For a gentler drying setting, turn dial to the left to close.



Diffuser open: more airflow is distributed through the diffuser, to provide extra volume and bounce



Diffuser closed: less airflow is distributed through the diffuser and the air is directed through the fingers, to provide more controlled styling

How does the ionic feature work?

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution add to the build-up of static electricity in the hair. Even brushing and towel-drying the hair can increase these levels. This static charge causes the scales, or cuticles of the hair, to push hair strands apart, resulting in a rough hair surface. Consequently, hair may have a dull appearance.

High levels of static charge cause hair to become 'flyaway' and difficult to style. The advanced internal ionic generator conditions hair by emitting negative ions to reduce static, by leaving hair silky and shiny with reduced frizz.

What is the High Torque Fan System™ Technology?

The High Torque Fan System™ technology features a light, high performance motor combined with a professional centrifugal turbine fan to optimize airflow (pressure, discharge and speed) for ultra-fast drying.

This advanced fan system:

- delivers 2x the air pressure of a normal dryer
- provides a powerful airflow for ultra-fast drying even on the thickest of hair
- dries the hair gently to style or blow dry easily, accurately and efficiently.

What is Nano Tourmaline Ceramic™?

Nano Tourmaline Ceramic™ technology unites micro particles of nano silver, tourmaline and ceramic for a unique combination that reduces static and quickly seals the hair cuticle layer, to leave hair with reduced frizz and increased shine.

Cleaning and Maintenance

To help maintain optimum performance and prevent overheating of the hairdryer, the rear filter should be cleaned on a regular basis.

- Ensure that the appliance is switched off, unplugged from the power outlet and has cooled down.
- Holding the handle of the appliance firmly, pull the rear filter down to remove.
- Using a soft brush, clean any hair and other debris that may build up in the filter.
- Replace the rear filter by pushing back and clicking into position

Limited Three Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for thirty-six months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

CONAIR®

Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under licence by Conair

©2007 Conair Corporation USA, 1 Cummings Point Rd, Stamford, Connecticut, 06902 USA

Conair Australia Pty Ltd
Suites 20 and 21,
7 Narabang Way, Belrose NSW 2085
Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: aus_info@conair.com

Conair New Zealand Ltd.,
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

VSP5560A

07FB0701

VS
SASSOON

premiere series

Ultimate Nano High Torque 2000

VSP5560A