

VS

SASSOON

FORMEN



PERSONAL GROOMING SYSTEM

Model VS7040A

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: Unplug unit when not in use. All appliances are electrically live even when switched off.

WARNING: This appliance must not be taken into a bathroom.



- Do not immerse in water or other liquids.
- Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always ensure the appliance is turned off when not in use or before cleaning. Do not leave unattended when switched on.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.

- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into any opening.
- Do not place appliance on any surface while it is operating.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.

PERSONAL GROOMING SYSTEM

Thank you for purchasing the VS For Men Personal Grooming System, are comprehensive 10 piece trimmer set for beard, moustache, sideburn trimming, nose, ear and eyebrow grooming. It comes with 3 different trimming heads:

- A beard, moustache, goatee, sideburn and finishing trimmer
- A hygienic trimmer for nose and ear hair
- And an eyebrow trimmer

It comes complete with a convenient storage stand, perfect for holding the trimmer and accessories.

GROWING A BEARD, MOUSTACHE OR GOATEE

- Determine which type of beard, moustache or goatee is suitable for you, depending on the shape and dimension of your face and the natural growth and the thickness of your beard/moustache/goatee. Once the beard/moustache/goatee has been styled, maintain its appearance by using the trimmer weekly.

- For best results, your beard/goatee should be slightly damp (not wet) before using the trimmer. This will prevent the trimmer from removing more hair than desired.

INSTRUCTIONS FOR USE

INSERTING BATTERIES

1. The battery compartment cover is located at the bottom of the trimmer. To remove, twist the bottom section of the trimmer in an anti-clockwise direction until the small mark located on the bottom section lines up with the base of the arrow located on the upper section of the trimmer. Pull to remove.
2. Insert 1xAA alkaline battery, positive end first, into the battery compartment. (Alkaline batteries will ensure the best performance and longest life for your appliance). If you are not going to use the unit for a long period of time, or if the battery is dead, remove the battery from the unit. This will increase the life of your trimmer.
3. To replace the battery compartment cover, line up the small mark located on the bottom section of the trimmer with the base of the arrow and push the bottom section onto the top section as far as it will go. Twist the bottom section of the trimmer in a clockwise direction until it locks into place, a soft click will be heard.

SWITCHING THE TRIMMER HEADS

1. Ensure that the trimmer is turned off before switching the heads.
2. With the trimmer head in the locked position hold the handle of the trimmer and turn the trimmer head anti-clockwise until the arrows line up with the «0» mark on the handle.
3. Lift the trimmer head from the handle.
4. To replace the trimmer head align the black arrows on the trimmer head with the «0» mark on the handle. Push the trimmer

head onto the handle. Turn in a clockwise direction until the 2 arrows on the trimmer head are aligned with the «0» mark on the handle.

USING THE TRIMMER

1. To use your trimmer, simply slide the ON/OFF switch upwards to the ON position.
2. After you finish using your trimmer, slide the switch down to the OFF position.

USE OF BEARD/MOUSTACHE TRIMMER/GOATEE HEAD

Outlining Your Beard/Goatee

After having combed through your beard in the direction of growth, outline the desired shape, starting under your jawline. Work backwards on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns and toward your hairline.



Trimming Your Beard/Goatee

Your trimmer comes with two 5-position attachment combs so you can have a length from 2mm to 20mm, as each position increases the length by 2mm (position 1 = 2mm & position 10 = 20mm). To use either of the 5-position combs, slide them over the trimmer blades and snap down into position.

Use the longest setting at first, until you become familiar with the adjustments. If you want a shorter cut, you can adjust the comb to a shorter position and go over your beard again until you achieve the desired length.

Trimming Your Moustache or Sideburns

Use the moustache comb to comb hairs in the direction of growth. Place one of the 5-position combs over the blades.

Always trim your moustache from the top down. After your moustache is trimmed to the desired length, remove the 5-position comb and use the blades only to define the outline of the bottom of your moustache.

USE OF EYEBROW TRIMMER HEAD

(N.B. Take care that any trimmed hair does not fall into your eyes)
The eyebrow trimmer comes with a 2-position comb guide. Use the longer setting at first, until you become familiar with the adjustments. Start trimming from the centre of your brow and work outwards using smooth even strokes. Never attempt to trim against the growth of the hair, because the hair will be cut too short. Use the trimmer without the comb guide to shape and define your brow.

USE OF NOSE/EAR TRIMMER HEAD

Gently insert nose trimmer head into your nose or ear and trim the hair by moving it in a circular motion. N.B. Use this trimmer only at the entrance to the ears or nose. Use any deeper than this can cause injury.

CLEANING AND MAINTENANCE

It is important to clean away any loose hairs that have collected in the trimmer after each use.

1. To clean the beard/moustache trimmer blades, place your thumb underneath the blade and gently push upwards until the trimmer head opens. Using the cleaning brush provided, brush away any loose hair and gently snap blade back into place.
2. To clean the eyebrow trimmer, push the latch at the neck of the trimmer down and gently lift off one side of the trimmer head. Using the cleaning brush provided, brush away any loose hair. To replace trimmer head, first place the top side of the panel with the blade over the lugs at the top of the main part of the trimmer

- head. Push carefully into place ensuring that the small latch is re-aligned at the neck of the trimmer. Slide the latch up to lock.
3. To clean the nose and ear trimmer, simply brush away any loose hairs. (N.B. blades on this trimmer head are not removable).

LIMITED TWO YEAR WARRANTY

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair



©2009 Conair Corporation USA
Conair Corporation USA, 1 Cummings Point Road,
Stamford, Connecticut 06902 USA

Conair Australia Pty Ltd, Suites 20 & 21,
7 Narabang Way, Belrose NSW 2085.
Australia Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: aus_info@conair.com

Conair New Zealand Limited, PO BOX 251159, Pakuranga, Auckland
1706 New Zealand
Customer Service Hotline (New Zealand): 0800 266 247