

VS

SASSOON

FORMEN



AQUA BODY SHAVE & GROOM

Model VS7261A

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: Unplug unit when not in use. All appliances are electrically live even when switched off.



WARNING:

- Do not use or leave the charging adaptor where it can become wet or there is danger of it falling into basins or other vessels containing water. Do not place or drop into water or any other liquid.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped.
- Do not use the appliance with damaged or broken shaving foils or with any teeth missing from the blades, as injury may occur.
- Do not use the appliance if the charging adaptor power cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a

person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always ensure the appliance is switched off when not in use or before cleaning. Do not leave the appliance unattended when switched on.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Always unplug the appliance when fully charged.
- Use this appliance only for its intended use as described in this instruction booklet.
- This appliance is not intended for commercial use.
- Do not place appliance on any surface while it is operating.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Never drop or insert any object into any opening.
- Always store the charging adaptor in a moisture-free location.
- Always switch off the appliance when cleaning or when not in use.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- This appliance contains Nickel Metal-Hydrate (Ni-Mh) batteries. To protect the environment, the appliance should be disposed of safely and not in household waste at the end of its useful life. Do not attempt to remove the batteries from the appliance.



AQUA BODY SHAVE & GROOM

The VS Sassoon Metro Aqua Body Shave & Groom is a 100% waterproof all-in-one body grooming system for shaving and trimming all body zones, including chest and stomach, underarms, back and shoulders, legs and the lower half of the body. It features two attachments for wet and dry shaving – ultra smooth hypoallergenic foil shaver attachment with dual independent trimmers and a precision body groomer with a click-on comb attachment for 4 adjustable cutting settings.

Features:

1. Precision body groomer attachment to trim longer hair
2. Maintenance free blades never require lubrication
3. Click-on comb attachment with 4 trimming settings 3mm-12mm
4. Hypoallergenic foil shaver attachment
5. Dual independent trimmers lifts and trims shorter hair
6. 100% waterproof for use in the shower
7. Recharging and storage stand
8. Shower hanger
9. AC/DC power adaptor



INSTRUCTIONS FOR USE

- A plastic cover has been placed over the adaptor plug to protect it from damage. Remove the plastic cover before inserting into a suitable power outlet.

Before Use:

Before using the appliance for the first time, the unit must be charged continuously for 16 hours. When charging, the unit must be switched off.

CHARGING

1. Place the unit into the recharging stand, ensuring that the appliance is switched off. Ensure that the on/off switch is facing forward and then gently push downward so that the appliance sits comfortably into the recharging stand. When pushing down you will feel the appliance click into place.
2. Insert the adaptor connection into the right hand side of the recharging stand. Plug the adaptor plug into a suitable power outlet and then switch on. The charging indicator on the front of the stand will illuminate red when the appliance is correctly inserted into the recharging stand and connected to the mains power.
3. Although there is no risk of over-charging, it is advisable to unplug the charging stand after a maximum of 24 hours. The appliance can be charged between uses.
4. Battery life can be improved by periodically allowing the appliance to run until the motor stops. Immediately switch the appliance off and recharge for 16 hours as detailed above.

CHANGING THE ATTACHMENTS

1. Remove the appliance from the recharging stand and ensure that the appliance is switched off.
2. To remove the head, hold the appliance firmly and pull the head away from the housing – it will click off the appliance.
3. To replace the head, align the indentations on the sides of the head with those on the housing and push and click back into position.

NOTE – Never hold the shaver head by the foil, as this could cause damage.

SHAVING

This appliance is designed for use shaving wet and shaving dry. Shaving aids such as foam and gel can be used with the product to achieve a cleaner shave.

- Attach the foil shaver attachment to the appliance.
- Always inspect the shaving foils for signs of damage.
Never shave with a damaged foil as this may cause injury.
- Ensure the appliance is sufficiently charged.

Wet Shaving:

1. Thoroughly wet the body with warm water and apply foam or gel. This will help to lubricate the body and enable the shaver to glide across the skin for increased closeness and reduced irritation.
2. Move the shaver over the skin, applying minimal pressure only as this allows the hairs to be shaved much more quickly and cleanly. Do not press.
3. Shave with and against the direction of hair growth, whichever is most comfortable, as most men have hair growing in various directions.

4. Tilt the shaver up and down whilst shaving for best results.
5. Rinse the shaver regularly whilst shaving, keeping the appliance running whilst rinsing the head for faster cleaning.

Dry Shaving:

1. Ensure the skin is dry, not damp.
2. Use your free hand to stretch the skin and make the body hair stand out.
3. Move the shaver slowly over the skin, allowing the shaver to fully shave tougher areas of hair. Do not press.
4. For the closest shave, shave against the direction of hair growth.

GROOMING

- Attach the precision body groomer blade to the appliance.
- The body groomer blade is designed to be used with and without the comb attachment. Use the body groomer blade without the comb attachment for closer trimming and cutting of the hair. Attach the click-on comb for trimming hair at a longer length.

4 Position Comb Guide:

1. To attach the comb guide, ensure that the appliance is switched off. Position the comb guide over the front of the trimmer blade and slide over the head. Push and click the rear of the comb into position.

2. To adjust the comb guide, push the button on the top of the guide to the required setting:

Setting	Hair Length
Position 1	3mm
Position 2	6mm
Position 3	9mm
Position 4	12mm

It is suggested to begin cutting at the longest setting to help familiarise yourself with the appliance and to avoid accidentally cutting off too much hair.

3. To remove the comb guide, ensure that the appliance is switched off. Push the rear of the comb guide away from the head and lift off.

Trimming:

1. Ensure that the appliance is sufficiently charged.
2. Attach the comb guide and select the required cutting length. Always start with the longest setting first.
3. Hold the body groomer with the teeth of the trimmer pointing upwards, yet flat against the skin.
4. Move through the hair, against the direction of hair growth.
5. The trimmer will work most efficiently when cutting through hair at its own speed. Never force the trimmer.

Shaping:

1. To outline or shape, do not attach the comb guide.
2. Hold the trimmer upside down, yet flat against the skin.
3. Move the trimmer in a downward direction.
4. Having defined the outline, hold the body groomer with the teeth of the trimmer pointing upwards, yet flat against the skin, and move the trimmer upward against the direction of the hair growth. This will trim the unwanted hair adjacent to the outline.

CLEANING AND MAINTENANCE

To maintain optimum performance, the appliance should be cleaned after each use:

1.Remove the comb guide after use. Rinse under running water and dry thoroughly before storage or use.

2.Remove the attachments from the appliance. Rinse the heads under running water and dry thoroughly before storage or use.

NOTE: Do not rub the shaver foil as this could cause the foil to tear.

3.Whilst the power handle is waterproof, it is recommended not to immerse unduly in hot soapy water.

Caution – Do not use harsh or corrosive cleaners on the unit or on the attachments.

LIMITED TWO YEAR WARRANTY

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair

CONAIR®

©2008 Conair Corporation USA, 1 Cummings Point Road,
Stamford, Connecticut 06902 USA

Conair Australia Pty Ltd, Suites 20 & 21,
7 Narabang Way, Belrose NSW 2085.
Australia Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: aus_info@conair.com

Conair New Zealand Limited, PO BOX 251159, Pakuranga, Auckland
2140 New Zealand
Customer Service Hotline (New Zealand): 0800 266 247