

VS

SASSOON

FORMEN



PRECISION GROOMER

Model VS7600A

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: Unplug unit when not in use. All appliances are electrically live even when switched off.

WARNING: This appliance must not be taken into a bathroom.



- Do not immerse power handle in water or other liquids. Do not use in the bath, shower, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always ensure the appliance is switched off when not in use or before cleaning. Do not leave unattended when switched on.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.

- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Use this appliance only for its intended use as described in this instruction booklet.
- This appliance is not intended for commercial use.
- Do not place appliance on any surface while it is operating.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Never drop or insert any object into any opening.
- Do not use the appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.

PRECISION GROOMER

The VS Sassoon Precision Groomer is a grooming system designed for trimming nose & ear hair and the neckline, sideburns and eyebrows. It safely and quickly trims unwanted hair and is easy to handle thanks to its sleek design and easy to change attachments.

* For best results, hair should be slightly damp (not wet) before using the trimmer. This will prevent the trimmer from removing more hair than desired.

Storage pouch – A convenient storage pouch has been included to store the trimmer and trimming head attachments. Ensure that the trimmer is cool before storing away.

INSTRUCTIONS FOR USE

INSERTING BATTERIES

1. The battery cover compartment is located at the bottom of the trimmer. To remove, twist bottom section of trimmer to the left until the 'o' mark located on the bottom section lines up with the base of the upper section, then pull straight down.
2. Insert 1x AA alkaline battery, positive end first into the battery compartment. (Alkaline batteries will ensure the best performance and longest life for your appliance). If you are not going to use the unit for a long time, or if the battery is dead, remove the battery from the unit. This will increase the life of your trimmer.
3. To replace the battery compartment cover, line up the 'o' mark on the bottom section with the small mark on the upper section. Push the bottom section onto the top section as far as it will go. Twist the bottom section of the trimmer to the right until it clicks into place.

SWITCHING THE TRIMMER HEADS

1. Ensure that the trimmer is switched off before changing the attachment heads.
2. To remove a trimming head attachment, twist the top section of the trimmer (trimming head attachment) to the right, until the arrow on the base of the trimming head attachment is positioned above the 'o' mark, then pull straight off.
3. To attach a trimming head attachment, position the arrow on the base of the trimming head above the 'o' mark. Then simply twist the head to the left until it clicks into place, with the two arrows positioned together.

USING THE TRIMMER

1. To use the trimmer, simply slide the on/off switch upwards to the on 'I' position.
2. After using the trimmer, slide the switch down to the off 'o' position.

TO REMOVE HAIR FROM THE NOSE AND/OR EARS

1. Select the rotary trimming head and switch on.
2. Gently insert the trimmer into your nostril or ear canal to remove unwanted hair.
3. Rotate trimmer in a circular motion around the opening of the nostril, or ear canal, taking care not to come too close to the border of the nostril or ear. For best results, gently move the trimmer in and out of the nose as you trim and rotate the hair.

NB – Always remember to turn the trimmer on before you insert into your nostril or ear canal to avoid painfully snagging hairs. Never insert the trimmer more than 6mm into your nose or ear. Use any deeper than this can cause injury.

TO REMOVE HAIR FROM THE NECKLINE, SIDEBURNS AND EYEBROWS

1. Select the fine line trimming attachment and switch on.
2. Move the trimmer upwards and outwards through the hair you wish to remove. It is suggested to trim the hair in the direction of the growth, if you trim the hair against the direction of growth, than this could cause a rash on the area.
3. Move the trimmer slowly and carefully, so incorrect hairs are not trimmed.

4. It is not recommended that you use the trimmer to completely remove the eyebrows.

CLEANING AND MAINTENANCE

It is important to clean away any loose hairs that have collected in the trimmer after use. Regular cleaning will help provide a longer cutting life performance.

1. Ensure that the trimmer is always switched off before cleaning.
2. Thoroughly brush or gently blow away any hair and debris that has built up on the cutters.

Washing the attachments:

The rotary trimmer and the fine line trimming attachments are washable, but cannot be submerged in water, as this will cause damage to the attachments.

After use, only the trimmer attachments can be removed from the power handle and cleaned by placing under cool running water.

- Do not use hot water to clean the attachments.
- Dry immediately and shake off excess water, then dry with a cloth.

LIMITED TWO YEAR WARRANTY

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair



©2008 Conair Corporation USA, 1 Cummings Point Road,
Stamford, Connecticut 06902 USA

Conair Australia Pty Ltd, Suites 20 & 21,
7 Narabang Way, Belrose NSW 2085.
Australia Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: aus_info@conair.com

Conair New Zealand Limited, PO BOX 251159, Pakuranga, Auckland
1706 New Zealand
Customer Service Hotline (New Zealand): 0800 266 247