

VS
SASSOON

FOR MEN



I-TRIM PRECISE STUBBLE TRIMMER

Model VS7890A

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, unplug after use since the proximity of water presents a hazard even when the unit is switched off.

WARNING: Do not use or leave the appliance or AC power adaptor in a position where it can become wet or there is danger of it falling into a basin or other vessels containing water.



- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.

- Always unplug the appliance when fully charged.
- This appliance is not intended for commercial use.
- Never drop or insert any object into any opening.
- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Do not place appliance on any surface while it is operating.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use this appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Never twist or pull on the trimmer adaptor cord.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

<p style="text-align: center;">I-TRIM PRECISE AUTOMATIC ALL-IN-ONE DC MOTOR STUBBLE TRIMMER</p>

Thank you for purchasing the VS For Men i-trim precise Stubble Trimmer, an automatic all-in-one DC motor stubble trimmer that provides the ultimate in stubble control.

This next generation design stubble trimmer features a unique contouring flex head with exclusive blade design that adjusts flawlessly to the contours of the face. Its' advanced design provides more precise and even results, minimizes pressure for less skin irritation and provides exceptional accuracy for perfect stubble results, every time.

The i-trim precise delivers VS For Men's best cutting performance by combining 'Hard Like Diamond' (HLD) carbon coated stainless steel blades with titanium and a high performance professional DC motor to provide precision control for exact stubble.

FEATURES

1. Innovative motorised comb guide system with up and down selections
2. 1 integrated motorised stubble comb guide that delivers the ultimate in length consistency for effortless ease
3. Unique contouring flex head with exclusive blade design minimizes pressure, for less irritation, and exact precision control
4. Trimmer blades – 'Hard Like Diamond' (HLD) carbon coated stainless steel blades with Titanium
5. On/Off button
6. LCD display shows:
 7. Selected cutting length in mm
 8. Battery life remaining / charging indicator
9. Cord/cordless design
10. AC power adaptor
11. Cleaning brush
12. Lubricating oil



INSTRUCTIONS FOR USE

- A plastic cover has been placed over the adaptor plug to protect it from damage during transportation. Remove the plastic cover before inserting into a suitable power outlet.
- Always inspect the appliance before use to ensure the cutting head is free from hair and debris, and is running smoothly.
- Ensure the appliance is switched off before plugging into a suitable power outlet.

CHARGING THE TRIMMER (FOR CORDLESS OPERATION)

IMPORTANT: Before using the appliance for the first time, charge for a full 16 hour continuous charge.

After the first charge, the trimmer has a 90 minute charge and 60 minute run time, plus the 5 minute quick charge and 3 minute run time. Maximum battery capacity will only be reached after 3 charging and discharging cycles.

In order to maintain optimum capacity of the rechargeable batteries, every 3 months the trimmer should be charged for a full 16 hour continuous charge.

To charge the appliance, place the adaptor charging cord directly into the base of the trimmer.

1. Plug the AC power adaptor into a 100v – 240v power supply.
2. When the appliance is switched off, plug the charging cord directly into the base of the trimmer.
3. Switch the adaptor on. The LCD display will then illuminate and the charging indicator will appear in the LCD display. Always check the charging indicator illuminates, so you know you have correctly inserted the adaptor charging cord into the base of the trimmer.

4. The blue LCD will always stay illuminated and the charging indicator in the LCD display will always be flashing when the product is charging. When the product is fully charged, the charging indicator will be solid and no longer flashing – this indicates that a full charge has been reached.
5. A full charge will supply enough power for minimum 60 minutes use. The remaining battery life is shown in the LCD display. The 5 minutes quick charge function will provide 3 minutes use.

CORDED USE – OPERATION WITH POWER CORD

1. Plug the AC power adaptor into a 100v – 240v power supply.
2. When the appliance is switched off, plug the charging cord directly into the base of the trimmer.
3. Switch the adaptor on, and the trimmer can now be used in corded operation.

NOTE – If battery power is weak, wait about 2 minutes before pressing the on/off button.

24 Ultra Precise Cutting Length Settings (0.4mm to 5mm)

The innovative i-trim precise Stubble Trimmer uses an integrated stubble comb guide with 24 ultra precise control settings eliminating the need for changing and storing different attachment combs. The cutting guide is motorised for easy one touch adjustment and features an LCD display for confirmation of the length setting selected. When you select your required length, the length setting will then remain displayed in the LCD screen.

1. Use the cutting length setting buttons on the trimmer to adjust the motorised stubble comb guide.
2. Press the power on button to activate the trimmer motor.
3. Press the up or down arrow buttons to select the required length setting in 0.2mm increments from 0.4mm through to 5mm (NB – the trimmer will stop while the comb guide is being adjusted).

STARTING AND USING YOUR I-TRIM PRECISE

1. Press the on/off button to activate the trimmer.
2. When the trimmer is switched on, the battery indicator in the LCD display will cycle through a few times (approx 5 times) before the remaining battery life is displayed.
3. Press the up or down arrow buttons to adjust and set the cutting length. Pressing one of these buttons will stop the trimmer motor. It is always suggested to start cutting with a longer length first, then trim again if the length is longer than desired.
4. Hold the trimmer against the hair, the teeth of the comb guide should be pointing upwards and should be flat against the face. The unique contouring flex head with exclusive blade design allows for trimming at any angle – it perfectly adjusts to the contours of your face for precision stubble results, every time, whilst the integrated stubble comb guide helps to avoid uneven cuts, by providing direction and helping you to hold the trimmer comfortably on the face.
5. Move the trimmer upwards through the hair, a little at a time, with and against the direction of hair growth, whichever is most comfortable, as most men have hair growing in many different directions.
6. The i-trim precise will work most effectively when cutting through the hair at its own speed – never force the trimmer. You may experience a little resistance around the moustache area, where hair is thicker and grows in many different directions. This is completely normal.
7. Never switch the trimmer off whilst in the hair.
8. To turn the trimmer off:

Either: Press and hold the on/off button for more than 2 seconds, the trimmer will shut down completely and the cutting guide will return to its original position;

Or: Press the on/off button for less than 2 seconds, only the motor will turn off, but the display will remain lit for 15 seconds. After 15 seconds you still have 5 minutes to change the cutting length.

After 5 minutes the trimmer turns itself off and the cutting guide comb will return to its original position next time you activate the trimmer.

USING THE STUBBLE COMB GUIDE

Your i-trim precise comes assembled with the integrated motorised all-in-one stubble comb guide already installed. The integrated stubble comb guide allows you to change the cutting length of your trimmer with ease. You'll need to experiment to find your preferred length, but as a guide, 0.4mm will give you an ultra close, short shadow stubble effect, whilst 2mm will give you a longer designer stubble look and 3.4mm+ will give you a longer, more rugged look (short beard).



IMPORTANT: Always detach and attach the integrated stubble comb guide BEFORE turning the trimmer on.

Always ensure when using the trimmer that the integrated stubble comb guide is correctly positioned in place. Check this by pushing the comb guide gently downwards to ensure it is secured in place.

Using The Trimmer Without The Comb Guide

Using the trimmer without the comb guide is ideal for detailing/shaping and general tidying of edges around your stubble, sideburns and moustache.

1. To detach the comb guide, gently hold the trimmer in one hand and with your thumb and index finger, push the comb guide up on each side (Fig.1).
2. Flip the comb guide to the back of the unit and lock it into position by clicking it securely onto the fastener on the back of the handle (Fig.2).

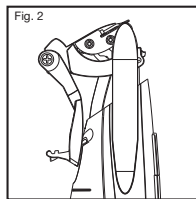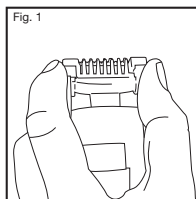

IMPORTANT: When using the trimmer without the stubble comb guide, the cutting length will be below 0.4mm. The length setting show on the LCD screen will no longer be relevant when the comb guide is detached.

HOW TO CREATE DIFFERENT LOOKS USING THE I-TRIM PRECISE

A popular and most recent trend in men's grooming is the stubble look – a well groomed light hint of facial hair. The stubble look is a rugged way to add interest to a man's face without sporting a full beard – it can help make a man's face look romantic, sophisticated, cool rugged or even refined, depending on which way you wear it. It is one of the lasting hints of facial hair trends that works for so many different men.

Maintaining a stubble look requires regular grooming with the i-trim precise, to ensure that you don't get a patchy or uneven appearance. It is recommended to trim every couple of days to keep your shadow effect from sprouting into a full beard. The key to staying trimmed is paying attention to how fast your facial hair grows. The faster you can grow a beard, the quicker you'll need to keep up with your stubble to ensure it stays shaped – stubble is an ongoing process of upkeep, so you can't just shape it and leave it.

NB – Use on clean, dry hair. If possible when using for the first time, try and grow your facial hair for at least 4 days before cutting. This will give you a better result, as your facial hair will feel thicker.

To create a short, shadow stubble look:

1. If your hair is already quite short, set the motorised comb guide to 0.4mm trimming length. If your hair is quite long, thick and coarse, pre-trim the hair using a longer length setting, such as 5mm, then once all hair has been trimmed, set the motorised comb guide to 0.4mm length.
2. Move the trimmer upwards through the hair, a little at a time, with and against the direction of hair growth, whichever is most comfortable, as most men have hair growing in various directions.
3. For a close finish around the sideburns and cheeks, detach the stubble comb guide (refer to 'Using The Trimmer Without The Comb Guide' for further information) and turn the trimmer over so that the blades are closest to the face. Trim around the

sideburns, cheeks and edge of your stubble, taking care around the sideburns and edges of your stubble so that you do not trim the hair too short.

To create a longer, designer stubble look (mid-length stubble):

1. If your hair is already quite short, set the motorised comb guide to 2mm trimming length. If your hair is quite long, thick and coarse, pre-trim the hair using a longer length setting, such as 5mm, then once all hair has been trimmed, set the motorised comb guide to 2mm length.
2. Move the trimmer upwards through the hair, a little at a time, with and against the direction of hair growth, whichever is most comfortable, as most men have hair growing in various directions.
3. For a close finish around the sideburns and cheeks, detach the stubble comb guide (refer to 'Using The Trimmer Without The Comb Guide' for further information) and turn the trimmer over so that the blades are closest to the face. Trim around the sideburns, cheeks and edge of your stubble, taking care around the sideburns and edges of your stubble so that you do not trim the hair too short.

To create a longer, more rugged look (short beard):

1. If your hair is already quite short, set the motorised comb guide to 3.4mm trimming length. If your hair is quite long, thick and coarse, pre-trim the hair using a longer length setting, such as 5mm, then once all hair has been trimmed, set the motorised comb guide to 3.4mm length.
2. Move the trimmer upwards through the hair, a little at a time, with and against the direction of hair growth, whichever is most comfortable, as most men have hair growing in various directions.
3. For a close finish around the sideburns and cheeks, detach the stubble comb guide (refer to 'Using The Trimmer Without The Comb Guide' for further information) and turn the trimmer over so that the blades are closest to the face. Trim around the





sideburns, cheeks and edge of your stubble, taking care around the sideburns and edges of your stubble so that you do not trim the hair too short.

To create a longer, beard look:

1. If your hair is already quite short, set the motorised comb guide at any length between 3.6mm and 5mm trimming length.
2. Move the trimmer upwards through the hair, a little at a time, with and against the direction of hair growth, whichever is most comfortable, as most men have hair growing in various directions.
3. For a close finish around the sideburns and cheeks, detach the stubble comb guide (refer to 'Using The Trimmer Without The Comb Guide' for further information) and turn the trimmer over so that the blades are closest to the face. Trim around the sideburns, cheeks and edge of your stubble, taking care around the sideburns and edges of your stubble so that you do not trim the hair too short.

MULTI VOLTAGE

This appliance has a multi voltage feature for worldwide use. The voltage automatically converts for ease of use from 100v - 240v. This appliance has an automatic internal converter which will automatically convert the voltage without the need of a switch. A suitable plug adaptor will be required, please refer to the chart below.

Plug adaptor required	Voltage and plug adaptors	Country	Voltage setting
	British plug: 240V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)	240V
	European plug: 240V	Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only)	240V
	Australian and New Zealand plug: 240V	Australia, New Zealand	240V
	American plugs: 120V	North America, Japan, Canada (parts of)	120V

CLEANING AND MAINTENANCE

To maintain optimum performance, the appliance should be cleaned after each use:

1. Switch the trimmer off and remove the power supply, if connected.
2. Detach the comb guide by gently lifting the front of the comb guide from both sides and flipping it over to the back of the unit, and locking it into position by clicking it securely onto the fastener on the back of the handle (refer to 'Using The Trimmer Without The Comb Guide' for further information).
3. Using the cleaning brush supplied, brush away any hair and debris. Do not use a sharp object to clean the trimmer head.
4. To make cleaning even easier, the blades can be removed from the trimmer and comb guide.

To remove the blades, hold the handle of the trimmer with one hand, place your thumb underneath the blades and push the blades up and away from the handle. Place the blades in a secure place whilst cleaning.

Gently blow away any hair that is trapped beneath the blades.

The blades can also be rinsed under cool running water. **ONLY THE BLADES CAN BE RINSED UNDER THE TAP – THE TRIMMER SHOULD NEVER BE PLACED UNDER THE TAP OR UNDER RUNNING WATER.**

5. Ensure the blades are dry before re-attaching to the trimmer body.
6. To replace the blades, ensure the stubble comb guide is detached and then place the back of the blades back into the cavity on the top of the trimmer. Press the blades down so that they click into place.
7. When used regularly, the blades will not need to be oiled. However, if the blades have been rinsed under the tap or the trimmer has not been used for a prolonged period of time, then it is advisable to apply a small amount of lubricating oil (provided) onto the blades before using. This helps to keep the blades as sharp as possible.

8. To oil the blades, add a few drops of the oil supplied over the blades. Switch the trimmer on for a minute and then turn off. Wipe away any excess oil with a soft cloth. Be careful not to use too much oil, and don't oil your trimmer more than necessary. Oil the blades regularly to maintain optimum performance. This light, natural oil is similar to oil used in sewing machines, which can be purchased from your local art and crafts store.

BATTERY DISPOSAL

The appliance contains Nickel Metal-Hydrate batteries. To protect the environment, the appliance must be disposed of safely at the end of its useful life. Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.



Ni-MH

For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service

LIMITED THREE YEAR WARRANTY

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS For Men website www.vsformen.com.au

To make a warranty claim you must retain your proof of purchase. Further details can be found at www.vsformen.com.au and click on 'customer service'.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair

CONAIR®

©2012 Conair Corporation USA

Conair Australia Pty Ltd, Suites 20 & 21,
7 Narabang Way, Belrose NSW 2085.

Australia Customer Service Hotline (Australia): 1800 650 263
Customer Service e-mail: aus_info@conair.com

Conair New Zealand Limited, PO BOX 251159, Pakuranga, Auckland
1706 New Zealand
Customer Service Hotline (New Zealand): 0800 266 247