

VS
SASSOON

FORMEN



I-CLIP

Model VS7920A

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: Unplug unit when not in use. All appliances are electrically live even when switched off.



WARNING: This appliance must not be taken into a bathroom.

- Do not immerse in water or other liquids.
- Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- **IMPORTANT:** Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface and always allow to cool before storing away.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.

- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into any opening.
- Ensure appliance is switched off before plugging it into the power outlet.
- Do not place appliance on any surface while it is operating.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

I-CLIP PROFESSIONAL DC MOTOR HAIR CLIPPER

Thank you for purchasing the VS For Men i-clip Professional DC Motor Hair Clipper, a revolution in men's hair clipper design and performance that's easy to use. Featuring a rotary control comb guide system, you can select from 23 different cutting lengths without the clutter and storage of traditional 'clip on' comb guide attachments. The i-clip delivers VS For Men's best cutting performance by combining premium HLD ('Hard Like Diamond') blade technology and a high performance PowerTec™ DC motor with motor management technology that delivers 50% more power than traditional clipper motors and automatically adjusts the power required according to your hair type.

FEATURES AND ACCESSORIES

- 1) Rotary cutting length adjustment control (thumb wheel)
- 2) 1 Telescopic comb guide for shorter styles 3mm – 15mm
- 3) 1 Telescopic comb guide for longer styles 18mm – 30mm
- 4) 1 precision comb guide with 5 positions (0.5mm to 2.5mm)
- 5) Clipper blades - HLD ('Hard Like Diamond') and titanium coated moving blade with 100% stainless steel fixed blade
- 6) Integrated thinning system with thin and cut trimming selections
- 7) Rechargeable Ni-MH battery with 16 hour charge
- 8) Cordless or corded use.
- 9) On/Off button
- 10) Motor management system indicator lights
- 11) Charging indicator light
- 12) Charging stand
- 13) AC dual voltage power adaptor

Accessories

- 14) Cleaning brush
- 15) Barbers comb
- 16) Scissors
- 17) Lubricating oil
- 18) Storage pouch



INSTRUCTIONS FOR USE

CHARGING THE CLIPPER (FOR CORDLESS OPERATION)

IMPORTANT: Before using the appliance for the first time, charge for a full 16 hour continuous charge. Maximum battery capacity will only be reached after 3 charging and discharging cycles. After the 3 cycles, the clipper must still be charged for 16 hours. In order to maintain optimum capacity of the rechargeable batteries, every 3 months the clipper should be recharged for 16 hours.

The charging cord can be placed into the charging stand (as assembled) or removed and placed directly into the base of the clipper.

1. Plug the transformer into a 100V - 240V power supply.
2. Place the appliance onto the charging stand or plug the adaptor directly into the base of the clipper, ensuring that the appliance is switched off. The charging light will illuminate when the adaptor is correctly inserted into the clipper and connected to the mains power supply.
3. A 16 hour full charge will provide 60 minutes usage time.

CORDED USE – OPERATION WITH POWER CORD

1. Remove the power cord adaptor from the charging base
2. Plug the power cord adaptor directly into the clipper
3. Plug the cord into a 100V - 240V power supply
4. Press On/Off button to turn on






NOTE: If battery power is very weak, wait about 1 minute before pressing On/Off button

To remove adaptor from charging base

- turn base over to underside with cord facing you.
- using your thumb, push the adaptor cover to the right until it pivots clear of the inserted plug adaptor.
- pull adaptor upwards to remove from base.

MULTI VOLTAGE

This appliance has a multi voltage feature for worldwide use. The voltage automatically converts for ease of use from 100v - 240v. This appliance has an automatic internal converter which will automatically convert the voltage without the need of a switch. A suitable plug adaptor will be required, please refer to the chart below.


Plug adaptor required	Voltage and plug adaptors	Country	Voltage setting
	British plug: 240V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)	240V
	European plug: 240V	Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only)	240V
	Australian and New Zealand plug: 240V	Australia, New Zealand	240V
 	American plugs: 120V	North America, Japan, Canada (parts of)	120V

USING THE COMB GUIDES

IMPORTANT: Always attach the comb guide BEFORE turning the clipper on. The contour following comb guide assists in creating an even cutting result.

To attach a comb guide, first wind the rotary control (thumb wheel) downwards, until it cannot be pushed down any further. Align the comb guide by lining up the long sides of the guide with the sides of the clipper. Insert side of guide into clipper and push down until it 'clicks' into place.

To remove comb guide, first wind the rotary control (thumb wheel) downwards, until it cannot be pushed down any further. Turn clipper so that the underside (back of unit) is facing towards you. Holding the clipper with two hands, place thumbs underneath the bottom of the comb guide and push up until the guide 'clicks' out of position.

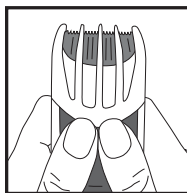

Telescopic comb guides (3mm to 30mm)

The I-clip features 2 telescopic comb guides with 18 precise length settings (Comb guide grades #1-10) eliminating the need changing and storing traditional comb guides.

Telescopic comb guide for shorter styles (3mm – 15mm)

Attach the comb guide as per instructions “Using the comb guides”

Use the rotary control (thumb wheel) to position the comb guide to the required length.

Check the length setting (in mm) of your haircut through the viewing window on the left side of the comb guide.

To remove the comb guide refer to “Using the comb guides”

Telescopic comb guide for longer styles (18mm – 30mm)

Attach the comb guide as per instructions “Using the comb guides”

Use the rotary control (thumb wheel) to position the comb guide to the required length.

Check the length setting (in mm) of your haircut through the viewing window on the right side of the comb guide.

To remove the comb guide refer to “Using the comb guides”

Cutting Length	Comb Guide
3mm	#1
6mm	#2
9mm	#3
12mm	#4
15mm	#5
18mm	#6
21mm	#7
24mm	#8
27mm	#9
30mm	#10

Precision comb guide (0.5 to 2.5mm)

The precision guide is designed for ultra close cutting length ideal for creating designer stubble or close cropped hair styles.

This comb is adjusted manually.

To adjust the length setting, slide the switch located on top of the comb guide.

5 length settings are shown on the top of the comb guide.

Settings	Cutting Length
Setting 1	0.5mm
Setting 2	1mm
Setting 3	1.5mm
Setting 4	2mm
Setting 5	2.5mm

STARTING AND USING YOUR I-CLIP

Push the On/Off button to activate the clipper motor. The green light on the LED display will illuminate to show power is on.

Wind rotary control (thumb wheel) up or down to adjust required cutting length.

MOTOR MANAGEMENT TECHNOLOGY

The motor-management system delivers more power as needed, so if there is a thicker section of hair where there is more resistance, there will be more power delivered to the blades to maintain a smooth cutting performance. The 5 bar LED on the front of the clipper displays the motor – management system power level.

To turn the clipper off press the ON/OFF button

BEST CUTTING PERFORMANCE


1. Use on clean dry hair that has been combed until tangle-free.
2. Set the cutting length as required.
3. It is always best to start cutting with a longer grade first.
4. Hold the Clipper against the hair, the teeth of the comb guide should be pointing upwards and flat against the head.
5. Move the clipper upwards and outwards through the hair, a little at a time, against the direction of hair growth. (Fig 5)
6. The Clipper will work most efficiently when




cutting through the hair at its own speed. Never force through the hair.

7. Never switch the clipper off whilst in the hair.
8. For longer hair on top of your head, you may wish to use the barbers comb to lift the hair and then clip over the comb, or hold the hair between your fingers and cut to the desired length.

- For the finishing touches, that is, around the nape and sideburns, use the clipper without a comb guide. Turn your clipper over and move it from top to bottom. (Fig. 6)
- If you want a length greater than 30 mm, or if you are experienced, you can create 'comb' or 'finger' cuts:

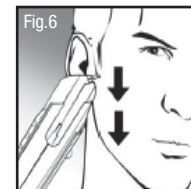

- Work without a comb guide.
 - Take up a small section of hair with a comb or in your fingers.
 - Move the comb or your fingers along the section of hair to the desired length.
 - Cut your hair along the comb or your fingers.
 - Remove the cut hair using a comb and check the evenness of the cut regularly. (Fig. 7)
9. Work around your head in sections.

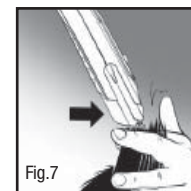

THINNING AND TEXTURISING FUNCTION


- The thinning and texturising function makes hair less thick, and gives a textured and choppy finished look.
1. Slide the switch at the top of the clipper to the «THIN» position.
 2. The thinning comb appears in front of the blades.
 3. Choose a comb guide, and set to the desired length.
 4. Work in sections around your head.
 5. On the top of your head, you may wish to use a longer length setting on the comb guide, and lift your hair with the barbers comb or your fingers at the same time.

- This method of clipping will give a professional feel to your haircut, and will cut the hair with a jagged finish to the tips - instead of a blunt cut.

CLEANING AND MAINTENANCE

- Regular cleaning will maintain the high performance of your clipper.

- Switch OFF and remove the power cord if connected. Remove cutting guide
- To make cleaning easier, you can remove the blades. Hold the clipper with the blades pointing up and remove them by pressing the top of the blade. (Fig 8)
- Use the cleaning brush supplied to brush away the hair and debris.
- Ensure that you do this after each use, and before storing away.
- When used regularly the blades will not need to be oiled, however if the clipper has not been used for a prolonged period of time, then it is advisable to apply a small amount of oil (provided) to the blades before using.

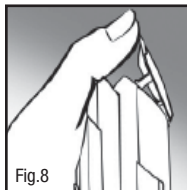

BATTERY DISPOSAL

The appliance contains Nickel Metal-Hydrate batteries. To protect the environment, the appliance must be disposed of safely at the end of its useful life. Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.



For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

LIMITED THREE YEAR WARRANTY

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for thirty six months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair

CONAIR®

©2009 Conair Corporation USA
Conair Australia Pty Ltd, Suites 20 & 21,
7 Narabang Way, Belrose NSW 2085.
Australia Customer Service Hotline (Australia): 1800 650 263
Customer Service e-mail: aus_info@conair.com

Conair New Zealand Limited, PO BOX 251159, Pakuranga, Auckland
1706 New Zealand
Customer Service Hotline (New Zealand): 0800 266 247