

**VS**  
**SASSOON**

---

---

**FORMEN**



**I-CLIP AUTOMATIC**

Model VS7930A

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

**DANGER:** When the unit is used in a bathroom, unplug after use since the proximity of water presents a hazard even when the unit is switched off.



**WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.

- Do not immerse in water or other liquids
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- **IMPORTANT:** Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface and always allow to cool before storing away.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.

- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Use this appliance only for its intended use as described in this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Ensure appliance is switched off before plugging into the power outlet.
- Do not place appliance on any surface while it is operating.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance, as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- This appliance contains Nickel Metal-Hydrate (Ni-Mh) batteries. To protect the environment, the appliance should be disposed of safely and not in household waste at the end of its useful life. Do not attempt to remove the batteries from the appliance.

## I-CLIP AUTOMATIC ALL-IN-ONE HAIR CLIPPER

Thank you for purchasing the VS For Men i-clip automatic Hair Clipper, a revolution in men's hair clipper design and performance that's easy to use.

Featuring a motorised integrated comb guide system with high precision control settings, you can select from 28 precision cutting length settings from 3mm to 30mm without the clutter of endless attachment combs, traditionally required by hair clippers.

The i-clip combines the most advanced PowerTec™ professional DC motor that delivers 50% more power than standard clippers with premium 'Hard Like Diamond' (HLD) and titanium coated blade technology.

### FEATURES

1. Innovative motorised comb guide system with up and down button selections
2. 1 integrated comb guide attachment for 28 precision cutting lengths (comb grades #1 to #10)
3. Integrated thinning system for a professional layered and textured finish
4. Clipper blades - 'Hard Like Diamond' (HLD) carbon coated stainless steel blades with Titanium
5. On/Off button
6. LCD display shows:
  7. Selected cutting length
  8. Comb grade #1 to #10 selected
  9. Smart motor management system (5 segments)
  10. Battery life remaining
11. AC power adaptor

### ACCESSORIES

12. Cleaning brush
13. Barber comb
14. Scissors
15. Lubricating oil
16. Storage pouch



## INSTRUCTIONS FOR USE

- A plastic cover has been placed over the adaptor plug to protect it from damage. Remove the plastic cover before inserting into a suitable power outlet.
- Always inspect the i-clip before use to ensure the cutting head is free from hair and debris and is running smoothly.

### CHARGING THE CLIPPER (FOR CORDLESS OPERATION)

**IMPORTANT:** Before using the appliance for the first time, charge for a full 16 hour continuous charge. Maximum battery capacity will only be reached after 3 charging and discharging cycles. After 3 cycles, the clipper has a 2 hour quick charge. In order to maintain optimum capacity of the rechargeable batteries, every 3 months the clipper should be recharged for 16 hours.

To charge the appliance, place the adaptor charging cord directly into the base of the clipper.

1. Plug the AC power adaptor into a 100V – 240V power supply.
2. When the appliance is switched off, plug the charging cord directly into the base of the clipper.
3. The battery charge level icon will show on the LCD display – flashing whilst charging and solid when fully charged. The battery charge level will visually decrease during use. The first segment in the battery icon will flash when the clipper requires recharging.
4. A full charge will supply enough power for 60 minutes use. Once 3 charging and discharging cycles have been completed, the clipper will have a 2 hour quick charge that will then provide 60 minutes use.

### CORDED USE – OPERATION WITH POWER CORD

1. Plug the AC power adaptor directly into the base of the clipper.
2. Plug the AC power adaptor into a 100V – 240V power supply. Switch the power supply on, and the clipper can now be used in corded operation.

**NOTE:** If battery power is weak, wait about 2 minutes before pressing the on/off button.

## 28 MOTORISED CUTTING LENGTH SETTINGS (3mm to 30mm)

The innovative i-clip uses an integrated cutting guide with 28 all-in-one high precision control settings (comb grades #1 to #10) eliminating the need for endless attachment combs, traditionally required by clippers. The cutting guide is motorised for easy one touch adjustment and features an LCD display for confirmation on the length setting and comb grade selected. When you select your required length, the length setting will then remain displayed on the LCD screen.

1. Use the cutting length setting buttons on the clipper to adjust the motorised comb guide.
2. Press the power On to activate the clipper.
3. Press the up or down arrow buttons to select length settings in 1mm increments from 3mm to 30mm or the comb grade #1 to #10 (NB – the clipper will stop cutting while the comb guide is being adjusted). The cutting lengths and grades are displayed on the LCD screen.

Cutting Length	Comb Guide
3mm	#1
6mm	#2
9mm	#3
12mm	#4
15mm	#5
18mm	#6
21mm	#7
24mm	#8
27mm	#9
30mm	#10


## SMART MOTOR MANAGEMENT SYSTEM

The smart motor management system senses hair from fine to thick and automatically adjusts the power to the blades for smooth cutting through any hair thickness. This system delivers more power as needed, so if there is a thicker section of hair where there is more resistance, there will be more power delivered to the blades. The 5 bar gauge on the LCD screen displays the motor management system power level.

### USING THE COMB GUIDES

Your i-clip comes assembled with the motorised comb guide already installed.

**To remove the comb guide**, first adjust the cutting length to 3mm on the LCD display, turn clipper so that the underside (back of unit) is facing towards you. Holding the clipper with two hands, place thumbs underneath the bottom of the comb guide and push up until the guide 'clicks' out of position.

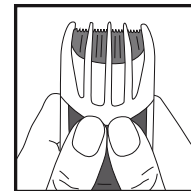

**To attach the comb guide**, first adjust the cutting length to 3mm on the LCD display, align the comb guide by lining up the long sides of the guide with the sides of the clipper. Insert side of guide into clipper and push down until it 'clicks' into place.

## STARTING AND USING YOUR I-CLIP

1. Press the on/off button to activate the clipper. The LCD display will illuminate to show cutting length and comb grade used.
2. Press the up or down arrow buttons to adjust and set the cutting length. Pressing one of these buttons will stop the clipper motor from cutting.
3. Press the on/off button again to confirm the cutting length and restart the motor. It is always suggested to start cutting with a longer length setting first, than clip again if the length is longer than desired.
4. To turn the clipper off:  
**Either:** Press and hold the on/off button for more than 2 seconds, the unit will then shut down completely and the cutting guide comb will return to its original position;  
**Or:** press the on/off button for less than 2 seconds, only the motor will turn off, the display will remain lit for 15 seconds. After 15 seconds you will still have 5 minutes to change the cutting length. After 5 minutes the clipper will turn itself off and the cutting guide remains in the last position used.

## THINNING AND TEXTURISING FUNCTION

- The thinning and texturising function makes hair less thick, and gives a textured and choppy finished look.
1. Slide the switch at the top of the clipper to the «THIN» position.
  2. The thinning comb appears in front of the blades.
  3. Choose a comb guide, and set to the desired length.
  4. Work in sections around your head.
  5. On the top of your head, you may wish to use a longer length setting on the comb guide, and lift your hair with the barbers comb or your fingers at the same time.
  6. This method of clipping will give a professional feel to your haircut, and will cut the hair with a jagged finish to the tips - instead of a blunt cut.




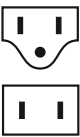
## BEST CUTTING PERFORMANCE:

1. Use on clean dry hair that has been combed until tangle-free.
  2. Set the cutting length as required.
  3. It is always best to start cutting with a longer grade first.
  4. Hold the clipper against the hair, the teeth of the comb guide should be pointing upwards and flat against the head.
  5. Move the clipper upwards and outwards through the hair, a little at a time, against the direction of hair growth.
  6. The clipper will work most efficiently when cutting through the hair at its own speed. Never force through the hair.
  7. Never switch the clipper off whilst in the hair.
  8. For longer hair on top of your head, you may wish to use the barbers comb to lift the hair and then clip over the comb, or hold the hair between your fingers and cut to the desired length.
- For the finishing touches, that is, around the nape of the neck and sideburns, use the clipper without a comb guide. Turn your clipper over and move it from top to bottom.
  - If you want a length greater than 30 mm, or if you are experienced, you can create 'comb' or 'finger' cuts:
- Work without a comb guide.
  - Take up a small section of hair with a comb or in your fingers.
  - Move the comb or your fingers along the section of hair to the desired length.
  - Cut your hair along the comb or your fingers.
  - Remove the cut hair using a comb and check the evenness of the cut regularly.
9. Work around your head in sections.



## MULTI VOLTAGE

This appliance has a multi voltage feature for worldwide use. The voltage automatically converts for ease of use from 100v - 240v. This appliance has an automatic internal converter which will automatically convert the voltage without the need of a switch. A suitable plug adaptor will be required, please refer to the chart below.

Plug adaptor required	Voltage and plug adaptors	Country	Voltage setting
	British plug: 240V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)	240V
	European plug: 240V	Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only)	240V
	Australian and New Zealand plug: 240V	Australia, New Zealand	240V
	American plugs: 120V	North America, Japan, Canada (parts of)	120V

## CLEANING AND MAINTENANCE

- Regular cleaning will maintain the high performance of your clipper.
1. Switch the clipper off and remove the power cord if connected. Remove comb guide.
  2. To make cleaning easier, remove the blades from the clipper. To remove the blades, hold the handle of the clipper with one hand and place your free hand on top of the clipper head, with your thumb placed at the back of the blades. Place your index finger and middle finger at the front of the blades. Using your index and middle fingers, pull the blades backwards and click off from the trimmer. Place the blades in a secure place.
  3. Use the cleaning brush supplied to brush away hair and debris.
  4. Ensure that you do this after each use and before storing away.
  5. When used regularly the blades will not need to be oiled, however if the clipper has not been used for a prolonged period of time, then it is advisable to apply a small amount of lubricating oil (provided) to the blades before using. This helps to keep the blades as sharp as possible.

## BATTERY DISPOSAL

The appliance contains Nickel Metal-Hydrate batteries. To protect the environment, the appliance must be disposed of safely at the end of its useful life. Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.



For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

## LIMITED THREE YEAR WARRANTY

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for thirty six months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights.

To obtain service under this warranty, please fill in and return the Warranty Registration as instructed. You must retain proof of purchase (receipt or tax invoice) to make a claim. Please refer to warranty claim details at [www.vssassoon.com.au](http://www.vssassoon.com.au) or go to Warranty Info on the menu bar.

Vidal Sassoon and related logos are trademarks of  
The Procter & Gamble Company used under licence by Conair



©2011 Conair Corporation USA

Conair Australia Pty Ltd, Suites 20 & 21,  
7 Narabang Way, Belrose NSW 2085.

Australia Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: [aus\\_info@conair.com](mailto:aus_info@conair.com)

Conair New Zealand Limited, PO BOX 251159, Pakuranga, Auckland  
1706 New Zealand

Customer Service Hotline (New Zealand): 0800 266 247