





Multi Voltage

This straightener has a multi voltage feature for worldwide use. The voltage automatically converts for ease of use from 120V - 240V.

NOTE: This straightener has an internal automatic converter which will automatically convert the voltage without the need of a switch. A suitable plug adaptor will be required, please refer to the chart below.

Plug adaptor required	Voltage and plug adaptors	Country	Voltage setting
	British plug: 240V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)	240V
	European plug: 240V	Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only)	240V
	Australian and New Zealand plug: 240V	Australia, New Zealand	240V
	American plugs: 120V	North America, Japan, Canada (parts of)	120V

The Uniform Heat Recovery System

This straightener features an instant-heat heater and a uniform heat recovery system. Both work to help maintain constant heat by quickly and continuously delivering a constant surge of power to ensure optimal styling results.

This system provides consistent styling power so that every strand of hair is set with the same level of heat for a perfect, flawless finish.

CAUTION: The plates on this appliance will become very hot within a few seconds of heating up. Take care not to let the appliance make contact with the skin, in particular, the eyes, ears, face and neck.

What is Nano Silver & Tourmaline-Ceramic Technology?

Nano Silver & Tourmaline-Ceramic technology unites micro particles of nano silver, tourmaline and ceramic when combined with heat seals the hair cuticle to leave hair with reduced frizz and enhanced shine.

User Maintenance

Your straightener is designed for household use and is virtually maintenance-free. No lubrication is needed. If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the straightener to cool and wipe exterior with a cloth. If any abnormal conditions occur, unplug the appliance, allow to cool and return it to your place of purchase.

Two-Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under licence by Conair

©2008 Conair Corporation USA, 1 Cummings Point Rd, Stamford, Connecticut, 06902 USA

Conair Australia Pty Ltd
Suites 20 and 21,
7 Narabang Way, Belrose NSW 2085
Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: aus_info@conair.com

Conair New Zealand Ltd.,
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

instruction
booklet

glide straightener
with nano silver
& tourmaline ceramic

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER:

Unplug unit when not in use. All appliances are electrically live even when switched off.

WARNING:

This appliance must not be taken into a bathroom.

- Do not immerse in water or other liquids. Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT:


Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty. Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never block the air openings or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with the appliance.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current supplying the bathroom. Ask your installer for advice.



Glide Straightener

VS Sassoon's Glide Straightener is a powerful, professional straightener that features nano silver & tourmaline-ceramic plates and reaches styling temperature in just 30 seconds. It's multi voltage perfect for travel and it delivers up to 230°C high heat for instant straightening and a silky smooth finish.

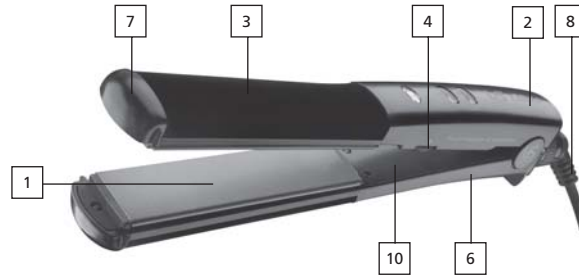

features:

1. Nano silver & tourmaline-ceramic plates
2. Up to 230°C
3. cool touch heat-resistant fabric
4. 10 variable heat settings
5. uniform heat recovery system
6. instant-heat heater
7. cool tips
8. professional swivel power cord
9. fast heat up
10. slimline design
11. protective heat mat

How to use your Glide Straightener:

For use on dry hair only

- Remove all packaging and sale labels before use.
- Wash and condition your hair as usual. Ensure that hair is dry, combed through and tangle-free.
- A plastic cover has been placed over the plug to protect it from damage. Remove the plastic cover before inserting into power outlet.
- Plug the appliance into a suitable power outlet and press the on/off button. The red indicator light will turn on and start to flash.
- Select the desired temperature using the temperature dial. Please see 'How to use the variable temperatures' for more information.
- Allow the straightener to heat up, the red light will stop flashing when the unit has heated up to the selected temperature. Your straightener is now ready to use.
- To turn appliance off, press the on/off button again and the red indicator light will turn off. Unplug the appliance from the power outlet and allow to cool before storing.

This straightener features instant-heat technology and 10 variable temperature settings. It heats to styling temperature in just 30 seconds (allow slightly longer if using on higher temperature settings) and is suitable for all hair types.

IMPORTANT: Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

How to use the variable temperature settings

The 10 variable temperature settings/digital heat control provide variable heat for many different hair types. These settings allow you to choose the required temperature setting according to your particular need and hair type.

NB: The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time

WARNING: This appliance is suitable for average use on the medium high heat setting of 3-5. The 5-8 and 8-10 maximum high heat settings are not suitable for hair that has been chemically treated, bleached or damaged.

DO NOT USE THIS PRODUCT ON HEAT DAMAGED OR CHEMICALLY DAMAGED HAIR ON THE HIGHER HEAT SETTINGS.

Temperature Setting Guide		
Variable Control Settings	Temperature	Hair Type
1-3 (Low)		Delicate, thin, easy-to-straighten
3-5		Average to thick, treated hair
5-8		Thick or wavy hair
8-10 (High)		Hard-to-straighten hair