





Temperature Setting Guide	
Variable Temperature Control Settings	Hair Type
Low setting - 150°C	Delicate, fine, bleached
Medium setting - 170°C	Average to thick treated hair
Medium high setting - 190°C	Normal, thick or wavy hair
High setting - 210°C	Hard to straighten, thick hair
**Maximum setting - 230°C	Hard to straighten, very thick curly hair

Multi Voltage

This straightener has a multi voltage feature for worldwide use. The voltage automatically converts for ease of use from 100 - 240V~. NOTE: This straightener has an internal automatic converter which will automatically convert the voltage without the need of a switch. A suitable plug adaptor will be required, please refer to the chart below.

Plug adaptor required	Voltage and plug adaptors	Country	Voltage setting
	British plug: 240V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)	240V
	European plug: 240V	Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only)	240V
	Australian and New Zealand plug: 240V	Australia, New Zealand	240V
	American plugs: 120V	North America, Japan, Canada (parts of)	120V

User Maintenance

Your straightener is designed for household use and is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of lint and other debris. If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the straightener to cool and wipe exterior with a cloth. If any abnormal condition occurs, allow to cool and return to your place of purchase.

Limited Two Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

CONAIR

Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under licence by Conair

©2008 Conair Corporation USA, 1 Cummings Point Rd, Stamford, Connecticut, 06902 USA

Conair Australia Pty Ltd
Suites 20 and 21,
7 Narabang Way, Belrose NSW 2085
Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: aus_info@conair.com
Visit us at www.vssassoon.com.au for more information

Conair New Zealand Ltd.,
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

VS
SASSOON

instruction
booklet

style straightener

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: Unplug unit when not in use. All appliances are electrically live even when switched off.

WARNING: This appliance must not be taken into a bathroom.




- Do not immerse in water or other liquids. Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- Do not direct the steam vents towards the eyes or onto the skin, in particular the face, neck, ears, scalp and hands. Always direct in the opposite direction.

Style Straightener

VS Sassoon's Style Straightener not only looks amazing but is completely versatile, it can be used on damp or dry hair and it has an internal multi voltage system so its perfect for travelling. Nano silver tourmaline ceramic plates provides a silky, smooth finish and the variable temperature settings, up to 230°C, heats up in 30 seconds.

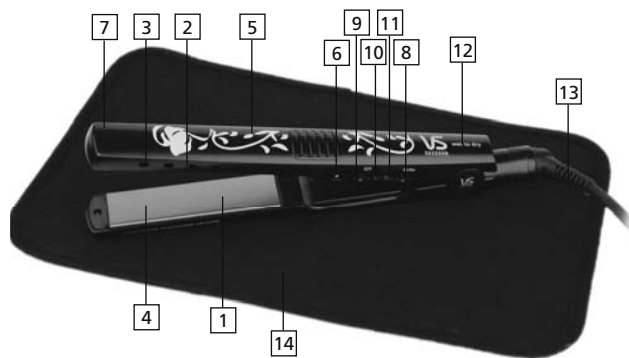

features:

1. nano silver tourmaline ceramic plates
2. wet to dry technology
3. multi voltage for worldwide use
4. floating plate
5. 230°C
6. variable temperature settings with 30 second heat up
7. uniform heat recovery system
8. turbo button for an instant extra increase of 15°C
9. On/off button
10. Power on indicator light
11. Turbo on indicator light
12. automatic safety cut off
13. professional length swivel cord
14. heat mat

How to use your Style Straightener:

Using on dry hair

- Remove all packaging and point of sale labels before use.
- Wash and condition your hair as usual. Ensure that hair is dry, combed through and tangle-free.
- A plastic cover has been placed over the plug to protect it from damage. Remove the plastic cover before inserting into power outlet.
- Plug the appliance into a suitable power outlet and press the on/off button. The red indicator light will turn on and start to flash.
- Select the desired temperature using the temperature dial. Please see 'How to use the variable temperatures' for more information.
- Allow the straightener to heat up, the red light will stop flashing when the unit has heated up to the selected temperature. Your straightener is now ready to use.
- To turn appliance off, press the on/off button again and the red indicator light will turn off. Unplug the appliance from the power outlet and allow to cool before storing.

Using on damp hair:

- Wash and towel dry your hair then comb through, ensuring it is tangle-free.
 - When the appliance is used on damp hair, the excess water from the hair is forced through the channel system, where it can escape as steam. This steam evaporates through the vents in the housing, while the hair's natural moisture is sealed in the hair cuticle.
 - Now follow the instructions under 'Using on dry hair'
- NB: You may hear a hissing sound and see steam; this is normal, it is the excess water from your hair evaporating as it dries.

How to use the Turbo Button

Press the Turbo button (the green indicator light will come on) to increase the temperature of the straightener instantly by about 15°. Straightening unruly sections will in this way be much easier. Press the same button again to deactivate the Turbo.

Note: to reach 230°, turn the control to maximum and activate the turbo.

Automatic shut off

If the straightener remains on for over 1hr 15min, it turns off automatically.

What is Nano silver tourmaline ceramic?

Nano silver tourmaline ceramic technology unites micro particles of nano silver, tourmaline and ceramic for ultra smooth gliding plates and when combined with heat seals the hair cuticle to leave hair with reduced frizz and enhanced shine.

How to use the variable temperature settings

IMPORTANT: Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

The variable temperature settings control provide variable heat for many different hair types. These settings allow you to choose the required temperature setting according to your particular need and hair type.

NB: The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time

****WARNING:** This appliance is suitable for average use on the medium high heat setting of 190°C. The 210°C and 230°C maximum high heat settings are not suitable for hair that has been chemically treated, bleached or damaged.

DO NOT USE THIS PRODUCT ON HEAT DAMAGED OR CHEMICALLY DAMAGED HAIR ON THE HIGHER HEAT SETTINGS

Please see Temperature Setting Guide on the following page for further information.