


**TIP:** For professional results, comb a small amount of mousse or styling serum through the hair before styling.

The straightener can also be used to create fringe, movement and other funky styles.

- To style your hair with the tips curled under, use the appliance as described above, but turn the tips under using the straightener. Hold the hair section in place for 10 to 15 seconds and then release.
- To shape your hair with the tips curled out, use the same movement as described above, but turn the tips out.
- Pin curls can also be created using your straightener – take a small section of hair and wrap it tightly around your finger. Carefully pull the twirl of hair off your finger, making sure it is still tightly wrapped. Carefully place the twirl of hair between the straightening plates (ensuring no contact is made with the skin) and hold the straightening plates closed for 10 to 15 seconds. Let the twirl of hair slide out and then mess up a little – these will help create messy pin curls.

**What is the CeramicTEC™ advanced ceramic heating technology?**

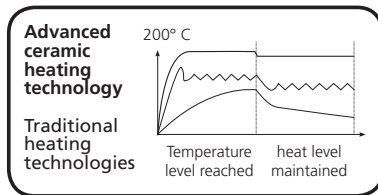

**CeramicTEC™ advanced ceramic heating technology** features a microprocessor controlled professional ceramic heater for perfect results by intelligently maintaining a high heat level.

The internal ceramic heater allows for ultra fast heat up and consistent heat delivery.

This system provides consistent styling power so that every strand of hair is set with the same level of heat and comes out the same way, for a perfect, flawless finish.

**What is Pure Ceramic Technology?**

**Pure Ceramic Technology™** delivers fast, efficient and superior styling results.

100% pure ceramic plates retain an even maximum temperature for a longer period of time and provide quicker results than non-ceramic styling tools.

Hair damage is minimised, as heat is distributed evenly from the styling appliance, avoiding harmful hotspots, leaving the hair with the ultimate healthy looking shine.

### User Maintenance

Your styler is designed for household use and is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of lint and other debris. If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the straightener/styler to cool and wipe exterior with a damp cloth. If your crystal jewelry needs additional cleaning, dip a cotton swab into water containing a few drops of window cleaner and lightly wipe any problem spots. Do not let the window cleaner come into contact with the straightening plates. If any abnormal condition occurs, allow to cool and return to your place of purchase.

### Limited Three Year Warranty

(Warranty period valid on electrical straightener only, does not cover the hairbrush, or the crystals featured on the straightener or the hairbrush).

Conair Australia Pty Ltd. will repair or replace (at our option) your electrical appliance free of charge for thirty-six months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

## CONAIR

Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under licence by Conair

©2007 Conair Corporation USA, 1 Cummings Point Rd, Stamford, Connecticut, 06902 USA

Conair Australia Pty Ltd  
Suites 20 and 21,  
7 Narabang Way, Belrose NSW 2085  
Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: [aus\\_info@conair.com](mailto:aus_info@conair.com)

Conair New Zealand Ltd.,  
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand  
Customer Service Hotline (New Zealand): 0800 266 247


IB-7/250

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

**DANGER:** Unplug unit when not in use. All appliances are electrically live even when switched off.

**WARNING:** This appliance must not be taken into a bathroom. 

- Do not immerse in water or other liquids. Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure they do not play with the appliance.


**IMPORTANT:** Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

## Seriously Straight Hair slimline limited edition

### Made with CRYSTALLIZED™ – Swarovski Elements

VS Sassoon's SSH slimline is a professional straightener that delivers perfect hair from root to tip. CeramicTEC™ advanced ceramic heating technology provides an ultra fast heat-up and consistent high heat levels to 200°C for perfect results, while the pure ceramic technology™ with 100% pure ceramic plates delivers even heat distribution and retains maximum heat. The packaging also doubles as a convenient storage pouch for your SSH straightener and hairbrush when not in use.

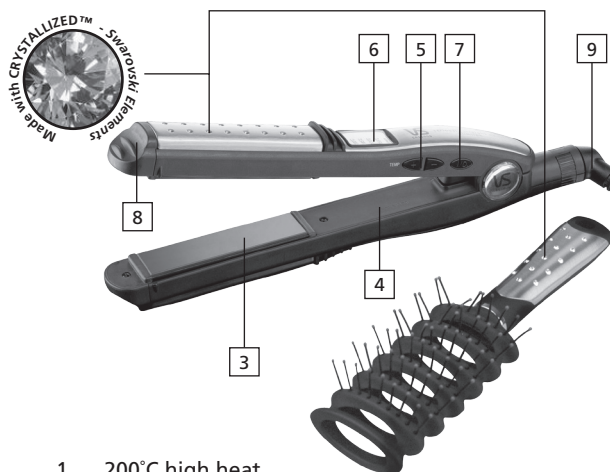

1. 200°C high heat
2. 30 second instant heat
3. 100% pure ceramic plates
4. CeramicTEC™ advanced ceramic heating technology
5. digital temperature control with 5 variable LED settings: + and – buttons
6. LED temperature display
7. on/off switch
8. cool touch tips
9. professional swivel power cord
10. limited edition tunnel vent hairbrush

### How to use your SSH – slimline straightener

1. A plastic cover has been placed over the plug to protect it from damage during transportation. Remove the plastic cover from the plug before use.
2. Ensure hair is clean and completely dry before using the appliance.
3. Comb through hair to prevent knots and tangles and then divide hair into equal sections.
4. Plug the appliance into a suitable power outlet and select your required temperature setting – please see 'How to use the 5 variable temperature settings' for more information
5. Place the appliance on a heat protective, flat level surface.
6. Press the 'I/O' button to switch the appliance on. The LED display will instantly illuminate in a

green colour at the Power/Low 140°C setting. The straightener will instantly start heating up.

7. Press the '+' or '-' button to adjust to the temperature you desire. The display LED light will change colour according to the temperature you select. The green power light will turn off as you change the temperature. Once the straightener is heated, you can begin styling your hair.
8. Style sections of your hair until completed.
9. To turn the appliance off, press the 'I/O' button. The LED display will turn off. Allow appliance to cool before storing.

**NB:** This appliance has a safety automatic shut-off system, which will automatically turn the appliance off if left switched on accidentally for 72 minutes. If this occurs, please wait for appliance to cool. Switch the appliance off and unplug the power cord. Plug the power cord in and switch the appliance on by pressing the 'O/I' button.

### IMPORTANT:

Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

### How to use the 5 variable temperature settings

The 5 variable temperature settings/digital heat control provide variable heat for many different hair types. These settings allow you to choose the required temperature setting according to your particular need.

**NB:** The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time.

Temperature Setting Guide	
Variable Temperature Control Settings	Hair Type
Power/Low setting - 140°C	Fine, bleached and/or damaged hair
Medium setting - 155°C	Average to thick treated hair
Medium/High setting - 170°C	Normal, lightly coloured and/or wavy hair
High setting - 185°C	Thick or curly hair
Maximum setting - 200°C	Hard to straighten, thick curly hair

### Styling using your straightener

1. Switch the appliance on and scroll through to your desired temperature setting.
2. Divide the hair into equal small sections. Hold the tips of your hair taut and place the straightener near the roots of the hair section. Slide the straightener down the section of hair and repeat if necessary.