

## Important Safety Instructions

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following: Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

**DANGER:** Unplug unit when not in use. All appliances are electrically live even when switched off.



**WARNING:** This appliance must not be taken into a bathroom.

- This appliance should only be used as described in this booklet. Please retain for reference.
- Do not immerse in water or other liquids.
- Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

**IMPORTANT:** Always unplug the appliance when not in use or before cleaning.

Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.

- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

## Total Freedom 230

### Total Freedom 230

The VS Sassoon Total Freedom 230 Straightener is designed for both corded and cordless use, for total styling freedom. When used cordless it gives you top straightening performance anywhere around the home without the restrictions of a trailing cord. Regular corded use gives you seriously straight results with a 3m lock-in professional cord for constant high power heat and ultra-fast heat recovery.

### FEATURES:

- corded or cordless use
- CeramicTEC™ advanced heating technology
- tourmaline and ceramic-coated plates
- up to 230 high heat
- variable temperature settings (from 150°C - 230°C)
- safety shut-off system after 72 minutes
- 'on' indicator light
- heat ready indicator light
- cool tips
- cordless power base with on/off switch
- 3m salon length swivel power cord



straightener in corded position



## Instructions For Use

### How to use your Total Freedom 230

**PLEASE REMOVE ANY PROMOTIONAL MATERIAL BEFORE USE BY ALIGNING THE ARROWS MARKED ON THE CONNECTORS.**

### Cordless Use



1. Insert the mains power lead connector into the rear of the power base. Place the cordless power base on a flat, dry, level surface.
2. A plastic cover has been placed over the plug to protect it from damage. Remove the plastic cover before inserting into power outlet.
3. Select the required temperature setting on the straightener, holding the straightener in the fully closed position (plates are together), insert the connector at the base of the straightener into the 360° cradle of the power base.
4. Plug the mains lead into a suitable mains socket and switch on.
5. Press the power on switch (on the power base) to the on position (red light will illuminate and straightener will start to heat up). The green indicator light will blink until the selected temperature is reached.
6. When the appliance has reached the selected temperature, the green heat ready indicator will be illuminated steadily without blinking.
7. The straightener is now ready for use.
8. Slightly close the straightener by hand and take out from the power base.
9. When the appliance begins to cool or when you have straightened a hair section and are re-sectioning your hair, return to the power base to reheat until the green heat ready indicator illuminates.
10. The appliance will automatically shut off after 72 minutes (this is a safety feature).



correct position - straightener will heat up



incorrect position - straightener will not heat up

## Corded Use



1. Insert the mains power lead connector directly into the base of the straightener by aligning the arrows on the power connector with the arrows on the straightener.
2. Select the required temperature setting.
3. Plug into a suitable mains socket and switch on.
4. The red ON indicator will illuminate and the green indicator light will blink until the selected temperature is reached.
5. When the appliance has reached the selected temperature, the green heat ready indicator will be illuminated steadily without blinking.
6. The straightener is now ready for use.
7. The appliance will automatically shut off after 72 minutes (this is a safety feature).

**NB:** This straightener has a safety automatic shut-off system, which will automatically turn the appliance off if left switched on for 72 minutes. If this occurs, please wait for appliance to cool. Switch the appliance off from the power outlet and then switch the power outlet on.

## How to Straighten your Hair

1. Wash and condition your hair as usual. Ensure that hair is dried thoroughly, combed through and tangle-free.
2. Separate a section of hair (maximum of 5cm).
3. Place the section of hair between the straightening plates, close to the roots.
4. Hold the hair firmly between the straightening plates and slide down the length of the hair, from root to tip.
5. Repeat as required.
6. Allow hair to cool before combing through.
7. After use, always switch off and unplug the appliance/power base.
8. Allow the appliance to cool before storing away.

## Styling Tip

For professional results, comb a small amount of mousse or - not styling gel through the hair before drying and styling.

**WARNING: This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.**

## Selecting the correct temperature for your hair type

The variable temperature settings provide heat for many different hair types. These settings allow you to choose the required temperature according to your particular need.

**WARNING: NEVER USE THE MAXIMUM HEAT SETTINGS ON HAIR THAT HAS BEEN CHEMICALLY TREATED, BLEACHED OR DAMAGED.**

Temperature Setting Guide	
Variable Temperature Control Settings	Hair Type
Low setting - 150°C	Delicate, thin, easy-to-straighten hair
Medium setting - 170°C	Average to thick treated hair
Medium high setting - 190°C	Thick or wavy hair
High setting - 210°C	Hard-to-straighten, thick hair
Maximum setting - 230°C	Hard-to-straighten, thick curly hair

## CeramicTEC™ Advanced Ceramic Heating Technology

This straightener features a ceramic heater and a uniform heat recovery system that help to maintain constant heat. There is a constant surge of power to ensure that the heat is continuously and quickly delivered for optimal styling results. This system provides consistent styling power so that every strand of hair is set with the same level of heat and comes out the same way for a flawless finish.

**CAUTION: The tourmaline ceramic-coated plates on this appliance will get very hot within a few seconds of heating up. Take care not to let the appliance come in contact with the skin, in particular the eyes, ears, face and neck.**

## What is Tourmaline-Ceramic Technology™?

Tourmaline-Ceramic Technology™ delivers even heat without hot spots.

Tourmaline is a semiprecious crystal which is a natural source of negative ions and far infrared (FIR) rays.

The production of negative ions from tourmaline eliminates static in the hair, and far-infrared rays assist in the deep penetration of heat, thus speeding up the styling process and preventing hair damage.

## User Maintenance

Your straightener is designed for household use and is virtually maintenance free. No lubrication is needed. This product represents the highest standards of workmanship and engineering research. If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the straightener to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the straightener, allow to cool and return it to your place of purchase.

## Limited Three Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for thirty-six months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under licence by Conair

**CONAIR®**

©2006 Richardson - Vicks Inc. /Procter and Gamble USA  
Conair Corporation USA, 1 Cummings Point Road,  
Stamford, Connecticut 06902 USA

Conair Australia Pty Ltd, Suites 20 & 21,  
7 Narabang Way, Belrose NSW 2085.  
Australia Customer Service Hotline (Australia): 1800 650 263  
Customer Service e-mail: aus\_info@conair.com

Conair New Zealand Limited, 21 Jipcho Road, Sockburn 8004  
Customer Service Hotline (New Zealand): 0800 266 247

VSP2099A

07FB0306

**VS**  
SASSOON

premiere series

total freedom 230

VSP2099A