

Natural Bristle Brush –



The natural bristle brush attachment is an optimal styling attachment that allows for creating curls and shaping hair sections.

To style using the natural bristle brush:

1. Place the brush under the hair, close to the scalp.
2. Let it slide down to the hair ends. This will give gradual volume and perfect shape to your hairstyle.

What is Tourmaline Technology?

Tourmaline-Ceramic Technology™ helps create silky, smooth hair with shine and helps prevent heat damage. Tourmaline is a semi-precious natural gemstone with highly unique properties that results in the powerful natural emission of ions and far-infrared (FIR) heat/rays when crushed and heated. These ions work on hair molecules to help dry them from the inside out. Combined with the even heat properties of ceramic, tourmaline-ceramic smoothes the hair cuticle layer, creating a frizz free silky finish with shine.

Cleaning and Maintenance

To help maintain optimum performance and prevent overheating of your appliance, the rear filter should be cleaned on a regular basis.

- Ensure that the appliance is switched off, unplugged from the power outlet and has cooled down.
- Holding the handle of the appliance firmly, pull the rear filter down to remove.
- Using a soft brush, clean any hair and other debris that may build up in the filter.
- Replace the rear filter by pushing back into position.

Limited Two-Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

CONAIR

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair

©2007 Conair Corporation USA, 1 Cummings Point Rd,
Stamford, Connecticut, 06902 USA

Conair Australia Pty Ltd
Suites 20 and 21,
7 Narabang Way, Belrose NSW 2085
Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: aus_info@conair.com

Conair New Zealand Ltd.,
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: Unplug unit when not in use. All appliances are electrically live even when switched off.



WARNING: This appliance must not be taken into a bathroom.

- Do not immerse in water or other liquids. Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing way.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described in this instruction booklet.
- This appliance is not intended for commercial use.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Attachments may get hot during use. Allow them to cool before handling.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Never drop or insert any object into any opening
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

Hot Air Brush 'N Style

The VS Sassoon Hot Air Brush 'N Style is a powerful hot air styler that offers 700 watts for gentle styling and easy control. It features 2 heat/speed settings for styling all hair types with tourmaline-ceramic technology™ to leave hair silky and shiny with reduced frizz.

With a natural bristle brush attachment for curls and shaping, a thermal brush attachment for adding extra volume and body and a removable rear filter for easy cleaning and maintenance, the Hot Air Brush 'N Style is the ideal styling tool for creating movement, texture and shine.



1. 700 watts
2. 2 heat/speed settings
3. power handle
4. thermal brush attachment
5. natural bristle brush attachment
6. removable rear filter
7. swivel power cord

Additional features:

- Tourmaline Ceramic Technology™

How to use your Hot Air Brush 'N Style

Wash and condition your hair as usual.

1. Always towel-dry your hair before using the hot air styler.
2. Ensure the switch is set to the off setting before plugging into a 240v suitable power outlet.
3. There are 2 heat/speed settings:
 - a. Use the low heat and speed setting as the hair begins to dry and for precise styling. The low heat is also best for fine or damaged hair.
 - b. Use the high heat and speed setting for initial drying. The highest setting is ideal for thick or hard to style hair.

The Attachments:

Thermal Brush –



The thermal brush is a versatile attachment that allows for:

- Adding extra volume and body for greater texture and movement
- Smoothing
- Straightening
- Medium to large curls with volume.

The metal barrel on the attachment retains and spreads heat evenly on the hair section, making it easy to style.

To style using the thermal brush attachment:

1. Divide hair into equal sections.
2. Starting at the front, dry the bottom sections by curling hair around the thermal brush.
3. Slowly let the brush glide down the hair section to smooth the hair cuticle.
4. Continue around the nape of the neck and up to the top of the head until all sections are smooth and curled under.