

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

**DANGER:** Unplug unit when not in use. All appliances are electrically live even when switched off.



**WARNING:** This appliance must not be taken into a bathroom.

- Do not immerse in water or other liquids. Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure they do not play with the appliance.

**IMPORTANT:** Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening or hose.
- Never block the openings of the appliance or place on a soft surface such as a bed or couch, where the openings may be blocked. Keep the openings free of lint and other debris.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

## Waves & Curls Salon Styler

VS Sassoon's Waves & Curls Salon Styler is an essential styling kit that provides versatility for creating:

- Deep tousled waves for a natural look
- Defined structured curls
- Modern drop curls
- Soft waves and curls

Featuring tourmaline-ceramic technology™ and ionic conditioning technology™ to help create salon perfect hair by locking in moisture to reduce frizzies and flyaways.



- tourmaline-ceramic technology™
- ionic conditioning technology™
- ultimate 4-in-1 styling
- triple barreled styler
- 19mm tong
- 19mm brush sleeve attachment
- 19mm spiral brush attachment
- fold-out heat rest stand
- 180°C
- 25 variable heat settings
- LED indicator light
- automatic shut-off system – 72 minutes
- carry case

## How to use your Waves & Curls Salon Styler

Styling curls and waves is now made even easier, thanks to the versatility of the Waves & Curls Salon Styler.

1. A plastic cover has been placed over the plug to protect it from damage. Remove the plastic cover from the plug before use.
2. Ensure hair is clean and completely dry before using the appliance.
3. Comb through hair to prevent knots and tangles and then divide hair into equal sections.
4. Choose the attachment that you wish to use and attach to the handle – please see 'Attaching the attachments and securing the locking ring' below.
5. Lower the heat rest stand and place styler on a flat level surface.
6. Plug the appliance into a suitable power outlet and select your required temperature setting, please see 'How to use the 25 variable temperature settings'.
7. Press the 'I' button. The red LED light will illuminate and blink.
8. When the tong has reached the desired temperature, the red LED light will stop blinking and solid color.
9. Style sections of your hair until completed.
10. To turn the appliance off press the '0' switch. The red LED indicator light will turn off. Allow appliance to cool before removing attachments and storing.

NB: This appliance has a safety automatic shut-off system, which will automatically turn the appliance off if left switched on for 72 minutes. If this occurs, please wait for appliance to cool. Switch the appliance off unplug the cord, if you still need use this appliance. just press the "I" button.

## Attaching the attachments and securing the locking ring

1. Select the required attachment.
2. Ensure the locking ring is unlocked before setting the attachment.
3. Insert the metal rods on the attachments into the body of the appliance by lining them up with the corresponding openings. Ensure it is secure.
4. Lock it into place by turning the locking ring anti-clockwise towards the unlock symbol.
5. Always allow the unit to cool before removing the attachment.
6. To remove the attachment, turn the locking ring clockwise, towards the unlock symbol then firmly pull the attachment off.

## How to use the 25 variable temperature settings

The 25 variable temperature settings provide variable heat for many different hair types. These settings allow you to choose the required temperature setting according to your particular need.

NB: The heat up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time.

Temperature Setting Guide	
Variable Temperature Control Settings	Hair Type
1-10 (Low)	Fine, bleached or damaged hair
11-20 (Medium)	Normal coloured or wavy hair
21-25 (High)	Thick or curly hair

## The Attachments

**Triple Barreled Styler: creates deep tousled waves for a natural look**



1. Attach the triple wave barrel to the power handle – please see 'Attaching the attachments and securing the locking ring' and select desired temperature and turn appliance on.
2. Section your hair starting from the back bottom half of your head then continue around the side and front section.
3. Take a section of hair about 5cm wide and pull taut. Press the lever and open the triple barreled styler and place the hair section inside. Close by clamping the styler over the section of hair for about 5-10 seconds (depending on your hair type and the desired style), then unclamp the styler using the lever.
4. Continue this until the desired amount of wave has been achieved.
5. For continuous deep waves place the tong on the last wave from the previous section and repeat above. Or alternatively start from the root and work your way down in the same motion.
6. Loosen waves with your fingertips; it is advised not to use a brush as this can flatten out the waves.

### 19mm Curling Tong: for creating defined structured curls



1. Attach the 19mm tong attachment to the power handle – please see ‘Attaching the attachments and securing the locking ring’ and select desired temperature and turn appliance on.
2. Section your hair starting from the back bottom half of your head then continue around the side and front section.
3. Separate small sections of hair and place the ends of one section under the clamping tong.
4. Holding at a vertical angle, rotate the barrel by rolling the hair up towards the roots. Try not to overlap the hair on the tong. Hold for 5-10 seconds or for maximum results hold for longer (this can be held for a longer or shorter period of time depending on your hair type and desired style).
5. You can determine the size and tightness of the curl depending on how tightly you roll the hair up the tong.
6. To prevent frizzy hair, make sure your hair is placed properly under the clamp in the desired direction for the curl.
7. Release the curl by pressing the lever to open the clamp, then slide the barrel out.
8. Repeat until the desired amount of curls has been achieved.
9. To “set” the curl, wait until your hair has cooled before brushing or combing it through.

### Spiral Sleeve Attachment: for creating modern drop curls



1. Attach the 19mm tong attachment to the power handle, then attach the spiral sleeve attachment by sliding it over the tong under the spoon (smaller lever/clamp), then select desired temperature and turn appliance on.
2. **NOTE: TONG MUST BE COOL WHEN ATTACHING AND REMOVING THE SPIRAL SLEEVE ATTACHMENT.**
3. Take a 2-3cm section of hair and place the ends of one section under the spoon (smaller lever/clamp) and roll it carefully around the spiral. Hold for about 10 seconds and unroll gently.
4. Repeat until the desired amount of curls has been achieved.
5. Allow hair to cool before brushing or combing through.
6. Allow tong to cool before removing attachment and storing.

### Brush Sleeve Attachment: for creating soft waves and curls



1. Attach the 19mm tong attachment to the power handle, then attach the brush sleeve attachment by sliding it over the tong under the spoon (smaller lever/clamp), then select desired temperature and turn appliance on.
2. **NOTE: TONG MUST BE COOL WHEN ATTACHING AND REMOVING THE BRUSH SLEEVE ATTACHMENT.**
3. Take a 2-3cm section of hair and place the ends of one section under the spoon (smaller lever/clamp) and roll it carefully around the spiral hold for about 10 seconds and unroll gently.
4. Repeat until the desired amount of curls has been achieved.
5. Allow hair to cool before brushing or combing through.
6. Allow tong to cool before removing attachment and storing.

### Styling Tip

For professional results, comb a small amount of mousse or styling gel through the hair before drying and styling.

### How does the Ionic feature work?

**Ionic Conditioning Technology™** - Many aspects of modern living, including air conditioning, contact with man made fibres and air pollution, add to the buildup of static electricity in the hair. Even brushing and towel-drying the hair can increase these levels. This static charge causes the scales, or cuticle of the hair to push each other apart, resulting in a rough hair surface where the hairs cannot lie smoothly against each other. Consequently, hair may have a dull appearance. High levels of static charge cause hair to become ‘flyaway’ and difficult to style. This technology emits a stream of negative ions which act to neutralize the static charge (positive ions), leaving hair silky and shiny with reduced frizz.

### What is Tourmaline Technology?

**Tourmaline-Ceramic Technology™** - Hair damage is minimized, as the ceramic heat delivers even heat distribution from the styling appliance, coating harmful and damaging hotspots. Ceramic heat is a gentle, faster styling tool that retains heat longer vs non-ceramic heat. Tourmaline is a semiprecious crystal, which is a natural coating of negative ions and far-infrared (FIR) rays. The tourmaline-ceramic coating creates radiant heat to efficiently and safely dry the hair from the inside out. When in contact with wet/damp hair, tourmaline works to ionize and alkalise moisture, and provides antibacterial and deodorant qualities.

### User Maintenance

Your styler is designed for household use and is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of lint and other debris. If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the straightener to cool and wipe exterior with a cloth. If any abnormal condition occurs, allow to cool and return to your place of purchase.

### Limited Two Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under licence by Conair



©2008 Conair Corporation USA, 1 Cummings Point Rd, Stamford, Connecticut, 06902 USA

Conair Australia Pty Ltd  
Suites 20 and 21,  
7 Narabang Way, Belrose NSW 2085  
Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: [aus\\_info@conair.com](mailto:aus_info@conair.com)

Conair New Zealand Ltd.,  
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand  
Customer Service Hotline (New Zealand): 0800 266 247



instruction  
booklet

waves & curls salon styler