

Two-Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.



instruction booklet

38mm ceramic instant heat tong

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair

©2008 Conair Corporation USA, 1 Cummings Point Rd.
Stamford, Connecticut, 06902 USA

Conair Australia Pty Ltd.
Suites 20 and 21
7 Narabang Way, Belrose NSW 2085
Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: aus_info@conair.com

Conair New Zealand Ltd.,
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following: Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: Unplug unit when not in use. All appliances are electrically live even when switched off.

WARNING: This appliance must not be taken into a bathroom.



- Do not immerse in water or other liquids. Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- IMPORTANT:** Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
 - Use this appliance only for its intended use as described within this instruction booklet.
 - This appliance is not intended for commercial use.
 - Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
 - Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
 - Keep the cord away from heated surfaces.
 - Do not use an extension cord with this appliance.
 - Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
 - After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
 - Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
 - For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

38mm Ceramic Instant Heat Tong

VS Sassoon's 38mm Ceramic Instant Heat Tong is an essential styling tool for creating large to extra-large waves and curls. It features a 38mm ceramic-coated barrel that heats up in 60 seconds (to 85 degrees) for fast styling. 140° of high heat, 25 variable temperature settings to suit all hair types and an automatic cut-off system makes this curling tong easy to use.



- 38mm ceramic-coated barrel
- 60-second heat up
- 25 variable heat settings
- automatic cut-off system
- cool tips
- red LED indicator light
- brush sleeve attachment

How to use your 38mm Ceramic Instant Heat Tong

Styling versatility is now made even easier.

- Ensure that hair is clean and completely dry before using the appliance.
- Plug the appliance into a suitable power outlet and press the 'on' button. Divide hair into equal sections.
- Select the required temperature setting to suit your hair type and desired style.

Use of the brush sleeve attachment

For softer waves and body use the brush sleeve attachment. To attach the brush sleeve, slide the sleeve down so that the arrow on the bottom of the sleeve aligns with the automatic curl release. The attachment should slide down the barrel and click into place. To remove simply pull the sleeve off.

CAUTION: Attach and remove the brush sleeve only when the curling tong is cool. The automatic curl release should not be pressed unless the brush sleeve attachment has been removed.

How to use the 25 variable temperature settings

The 25 variable temperature settings provide variable heat for many different hair types. These settings allow you to choose the required temperature setting according to your particular need.

Temperature Setting Guide	
Variable Temperature Control Settings	Hair Type
1 – 5 (Low)	Delicate, thin, easy-to-curl hair
6 – 11 (Medium)	Average to thick or treated hair
12 – 20 (Med-High)	Thick or wavy hair
21 – 25 (High)	Hard-to-curl hair