

Important Safety Instructions

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: Unplug unit when not in use. All appliances are electrically live even when switched off.



WARNING: This appliance must not be taken into a bathroom.

- Do not immerse in water or other liquids. Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing way.


- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.

- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Never drop or insert any object into any opening
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice

Ultimate 19mm Nano Curling Tong

The VS Sassoon Ultimate 19mm Nano Curling Tong is a professional curling tong that features CeramicTEC™ advanced ceramic heating technology for ultra fast heat-up and heat recovery. This sleek curling tong reaches a maximum temperature of 200°C for quick styling and features a variable LCD temperature display suitable for all hair types.

This professional curling tong is the ultimate styling tool and allows for styling all hair types, giving you the confidence to achieve your own desired look.

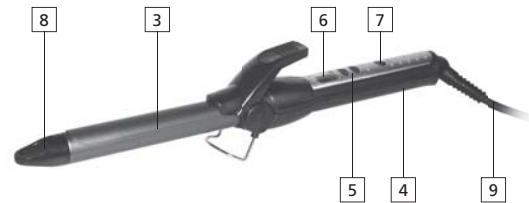

FEATURES:

1. up to 200°C professional salon heat
2. 60 second instant heat
3. 19mm barrel with nano tourmaline ceramic™ coating
4. CeramicTEC™ advanced ceramic heating technology
5. digital temperature control with 10 variable LCD settings: + and – buttons (from 100°C to 200°C)
6. LCD variable temperature display
7. on/off switch
8. convenient cool touch tip
9. 3m professional swivel power cord
10. automatic cut-off system (after 72 minutes)

Additional features:

- CeramicTEC™ advanced ceramic heating technology
- Nano Tourmaline Ceramic™

Instructions For Use

How to use your Ultimate 19mm Nano Curling Tong

1. Remove all packaging and point of sale labels before use.
2. A plastic cover has been placed over the plug to protect it from damage during transportation. Remove the plastic cover from the plug before use.
3. Ensure hair is clean and completely dry before using the appliance.
4. Comb through hair to prevent knots and tangles and then divide hair into equal sections.
5. Plug the appliance into a 240v power outlet and select your required temperature setting – please see ‘How to use the variable temperature settings’ for more information.
6. Place the appliance on a heat protective, flat level surface.
7. Press the ‘on/off’ button to switch the appliance on. The LCD display will instantly illuminate with a blue background and will start flashing. At this point the curling tong will instantly start heating up to the temperature that has been selected. The curling tong will default at the lowest heat setting - 150°C when using the curling tong for the first time.
8. Press the ‘+’ or ‘-’ button to adjust to the temperature you desire. The LCD display light will start flashing (indicating it is heating up) as you move up or down the variable temperature settings. For more information about which heat setting is suitable for your hair type, please see ‘How to use the variable temperature settings’. Once the selected temperature has been reached, the LCD display on the curling tong will stop flashing and will stay illuminated, this means that the curling tong is heated and you can begin styling your hair.
9. Take a section of hair and place the curling tong midway up the hair section; then spread hair evenly between the clamp and the barrel. To avoid crimped ends, make sure they are securely wound underneath the clamp in the direction of the desired curl.
10. Wind the hair up as far as you want it to be curled, being careful not to let the appliance touch the scalp. Hold in place for 8-12 seconds. For looser, free-flowing curls roll more hair. For tighter, bouncier curls, roll less hair. To remove the curling tong, unwind the hair. To ‘set’ the curl, do not comb or

brush hair until it cools - it is suggested to use the cool shot button on your hairdryer to help 'finish' the curl for a longer lasting effect.

N.B: Some experimenting is necessary when using a curling tong for the first time, or when changing to a different hair style.

11. Style sections of hair until completed.

12. To turn the appliance off, press the 'on/off' button. The LCD display will turn off. Allow appliance to cool before storing.

NB: This appliance has a safety automatic shut-off system, which will automatically turn the appliance off if left switched on accidentally for 72 minutes. If this occurs, please wait for appliance to cool. Switch the appliance off and unplug the power cord. Plug the power cord in and switch the appliance on by pressing the 'on/off' button.

WARNING: This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.

IMPORTANT: Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

How to use the variable temperature settings

The 10 variable temperature settings/digital heat control provide variable heat for many different hair types. These settings allow you to choose the required temperature setting according to your particular need and hair type.

NB: The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time.

Temperature Setting Guide	
Variable Temperature Control Settings	Hair Type
Power/Low setting - 100°C - 120°C	Delicate, fine, fragile hair and/or damaged hair
Medium setting - 130°C – 140°C	Thin, easy-to-curl hair
Medium High setting 150°C – 160°C	Normal textured hair
High setting - 170°C – 180°C	Wavy, curly hair
Maximum setting - 190°C - 200°C	Hard-to-curl, very thick hair

What is the CeramicTEC™ advanced ceramic heating technology?

This curling tong features a microprocessor controlled professional ceramic heater for perfect results by intelligently maintaining a high heat level. The internal ceramic heater allows for ultra fast heat up and consistent heat delivery. This system provides consistent styling power so that every strand of hair is set with the same level of heat and comes out the same way, for a perfect, flawless finish.

What is Nano Tourmaline Ceramic™?

Nano Tourmaline Ceramic™ technology unites micro particles of nano silver, tourmaline and ceramic for a unique combination that reduces static and quickly seals the hair cuticle layer, to leave hair with reduced frizz and increased shine.

User Maintenance

Your styler is designed for household use and is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of lint and other debris. If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the appliance to cool and wipe exterior with a cloth. If any abnormal conditions occur, allow to cool and return to your place of purchase.

Limited Three Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for thirty-six months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

CONAIR®

Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under licence by Conair

©2007 Conair Corporation USA, 1 Cummings Point Rd, Stamford, Connecticut, 06902 USA

Conair Australia Pty Ltd
Suites 20 and 21,
7 Narabang Way, Belrose NSW 2085
Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: aus_info@conair.com

Conair New Zealand Ltd.,
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

VSP2361A

07FB0704



VS
SASSOON

premiere series

Ultimate 19mm Nano Curling Tong

VSP2361A