

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following: Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: Unplug unit when not in use. All appliances are electrically live even when switched off.



WARNING: This appliance must not be taken into a bathroom.

- Do not immerse in water or other liquids. Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the rollers/unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- IMPORTANT:** Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.
- Do not use any attachments with this appliance other than those supplied by Conair Australia.
 - Use this appliance only for its intended use as described in the instruction booklet.
 - Never drop or insert any object into an opening or hose.

- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or repair.
- Never use while sleeping.
- Do not touch the rails that hold the rollers. They are hot.
- The centre of the rollers will be hot. To prevent burns, hold the rollers by the ends to roll the hair and avoid contact with the scalp.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- After use do not wrap the cord around the appliance, as in time this may cause the cord to fracture.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

Ultimate Retra-Cord Multi Curls

VS Sassoon's Ultimate Retra-Cord Multi Curls is an ideal styling product that can be used to create long-lasting defined locks, through to voluptuous big curls and volume. The product features a convenient retra-cord system™ which automatically rewinds the power cord into the base for easy storage, leaving no messy cord or tangles.

With 2 minute instant heat™ patented technology, tourmaline-ceramic and ionic conditioning technology and 20 multi sized rollers, the Ultimate Retra-Cord Multi Curls is gentle on hair and leaves hair with a silky smooth finish.



1. 20 multi sized rollers - 8 large, 6 medium and 6 small
2. Flocked coating on rollers - gentle on hair
3. Instant heat™ patented technology
4. Tourmaline-ceramic coating on rollers
5. Ionic Conditioning Technology™ with dual ionic ports
6. 12 variable temperature settings from 90°C to 140°C
7. Stay cool translucent end rings
8. 20 metal clips
9. 10 super clips
10. On indicator light
11. On/off switch

Additional features: Retra-Cord System™

Instructions For Use

BEFORE USE:

1. Before using the hairsetter, you must unwind the power cord completely - see 'What is the Retra-Cord System™ and how do I use it?' for further information
2. Ensure that all stickers are removed from the hairsetter lid.

How to use your Retra-Cord Multi Curls Hair Setter

1. Place the hairsetter on a firm, flat surface. Your hairsetter is uniquely designed with a Retra-Cord System™ for easy storage. Gently pull the power cord out from the base, ensuring that the power cord is pulled all the way out until you see the red marker. With lid closed, and all rollers in place, plug into a suitable power outlet.
2. Turn the unit on by sliding the switch to the 'on' position. The 'on' indicator light will turn red and the rollers will begin heating up. At this time, select the required temperature setting by using the temperature setting switch, located next to the on/off switch. Refer to 'How to use the 12 variable temperature settings' for further information.
3. Once the rollers are heated, and the red dot on the centre roller has turned white, you can begin styling your hair. Refer to 'How to curl and style your hair for further information'.
4. When using the rollers, your hair should be clean and dry, or slightly damp - never wet.

IMPORTANT: When rollers are initially heating up, it is suggested to have the lid closed, as this provides the fastest, most efficient heat-up. When removing rollers to place in the hair, the lid must always be open. Leaving the lid closed with rollers missing will cause the lid to melt. Take extra caution when heating up the appliance when rollers are missing.



What is the Retra-Cord System™ and how do I use it?

To use this system, unwind the cord by simply pulling the power cord from the base until it stops. As soon as the red marker is visible on the power cord, stop pulling, the power cord has now reached the maximum length (max length is 1.5m).

Do not pull beyond this point, as it could cause damage to the power cord. To rewind the power cord, pull gently on the plug and the cord will begin rewinding inside the base of the hair setter.

CAUTION: Always make sure the power cord is completely unwound before turning on the appliance. The cord rewinds quickly: to avoid injury, hold the plug with one hand while holding the hair setter with the other.

How to use the 12 variable temperature settings

The 12 variable temperature settings provide variable heat for many different hair types. These settings allow you to choose the required temperature setting according to your particular need and hair type.

Temperature Setting Guide	
Variable Temperature Control Settings	Hair Type
Setting 1 – 3 (90°C to 100°C)	Delicate, fine hair
Setting 3 – 7 (100°C to 120°C)	Average, normal hair
Setting 7 - 12 (120°C to 140°C)	Thick and hard to style hair

How to curl and style your hair

The Ultimate Retra-Cord Multi Curls features 3 variable sized rollers, allowing use on all types of hair - from medium to long length hair.

NOTE - The firmness of the curl is determined by several factors: heat-up time, best roller selection and the length of time the roller is left in the hair.

1. Select the desired roller size that suits the hairstyle you wish to create and separate hair into equal sections. Ensure that the hair is combed through and free from knots and tangles.
2. Take one section of hair at a time and place the ends of the hair on the roller and wind up towards the scalp, ensuring the ends of the hair section are secured tightly around the roller. Roll hair up firmly and secure by using the metal clip or plastic super clip, whichever is more comfortable for you to use. For the metal clips, ensure that the clip is not placed over the roller slit.



Ultimate Retra-Cord Multi Curls

VSP3029A

premiere series

User Maintenance

Your appliance is designed for household use and is virtually maintenance-free. This product represents the highest standards of workmanship and engineering research.

If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the hairsetter to cool. Clean the unit and the heating plates with a damp cloth. (Occasionally you may want to clean the rollers. Use a damp cloth and mild detergent or soap).

If any abnormal condition occurs, unplug the appliance, allow to cool and return it to your place of purchase.

Limited Three Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for thirty-six months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

CONAIR®

Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under licence by Conair

©2008 Conair Corporation USA, 1 Cummings Point Rd, Stamford, Connecticut, 06902 USA

Conair Australia Pty Ltd
Suites 20 and 21,
7 Narabang Way, Belrose NSW 2085
Customer Service Hotline (Australia): 1800 650 263


Customer Service e-mail: aus_info@conair.com

Conair New Zealand Ltd.,
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

VSP3029A

What is the Instant Heat™ Patented Technology?

The Instant Heat™ Patented Technology, exclusive to VS Sassoon is an energy efficient heating system that provides direct heat transfer for ultra fast heat-up. The hair roller features a unique 'base divide' design, which is split in half on its' base. Each hair roller is placed directly over the heating element to efficiently and directly transfer heat, saving energy and heating the hair roller in just 2 minutes.

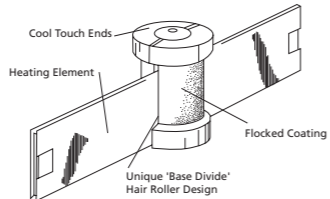

3. For tight, firm curls use smaller rollers and higher temperature and leave in the hair for at least 10 minutes before removing. For soft, wavy curls, use larger rollers and lower temperature and remove rollers after a shorter period of time.

4. To remove the roller from the hair, hold roller in one hand while removing the clips with the other. Gently drop the roller out of the hair section - do not pull, and let the curl bounce back after the roller is completely removed. Let hair cool for one minute for a firmly set curl, and then style your hair as desired.

IMPORTANT: After using the hairsetter several times, you will find the best roller selection, best timing for the texture of your hair and for the result you desire.

How does the ionic feature work?

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution add to the build-up of static electricity in the hair. Even brushing and towel-drying the hair can increase these levels. This static charge causes the scales, or cuticles of the hair, to push hair strands apart, resulting in a rough hair surface. Consequently, hair may have a dull appearance.

High levels of static charge cause hair to become 'flyaway' and difficult to style. The advanced internal ionic generator conditions hair by emitting negative ions to reduce static, by leaving hair silky and shiny with reduced frizz.

What is Tourmaline Technology?

Tourmaline-Ceramic Technology™ helps create silky, smooth hair with shine and helps prevent heat damage. Tourmaline is a semi-precious natural gemstone with highly unique properties that results in the powerful natural emission of ions and far-infrared (FIR) heat/rays when crushed and heated. These ions work on hair molecules to help dry them from the inside out. Combined with the even heat properties of ceramic, tourmaline-ceramic smoothes the hair cuticle layer, creating a frizz free silky finish with shine.