



**FOR MEN**



**I-TWIN TRIM  
DUAL BLADE BATTERY TRIMMER**

Model VSM155A



## **INSTRUCTIONS FOR USE**

1. Always purchase the correct size and grade of battery most suitable for the intended use.
2. Replace all batteries of a set at the same time.
3. Clean the battery contacts and also those of the device prior to battery installation.
4. Ensure the batteries are installed correctly with regard to polarity (+ and -).
5. Remove batteries from equipment which is not to be used for an extended period of time.
6. Remove used batteries promptly.
7. Store unused batteries in their original packaging, away from metal objects that could short-circuit them. Never short-circuit batteries.
8. Never dispose of batteries in fire, except under conditions of controlled incineration. Failure to observe this precaution may result in an explosion. Never attempt to recharge primary batteries as this may cause leakage, fire, or explosion.
9. Do not mix old and new batteries.
10. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium or nickel metal hydride) batteries.

**SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY**

## BEARD & MUSTACHE TRIMMER

Dual trimming blade



Multi-use trimmer



Stubble comb



5-position  
comb attachment



Jawline combs



Upper trimming  
blade



Single trimming  
blade


The dual blade cutting system is designed to neatly, quickly and evenly trim your beard, goatee, mustache, neckline and even close-cut stubble. While both blades are used for trimming, the upper blade can easily be removed, leaving the bottom blade for detailing fine lines and edging.

## OPERATING INSTRUCTIONS:

1. Remove the battery compartment cover by pushing in and down toward the bottom of the trimmer. To assist in removing the batteries, pull ribbon upwards.
2. Align the AAA batteries with the positive and negative positions indicated inside the battery compartment. Being careful not to bend the clips, insert the negative end of each battery first so it will slip easily into position.



3. Return the battery cover to its original position by pushing it in and up until you hear a small click as it locks into place.
4. To use your trimmer, push ON/OFF switch up wards to ON position.
5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
6. This trimmer comes with a detachable trimmer head. To remove, make sure the trimmer is in the OFF position, turn the head counterclockwise until “I” mark aligns with “arrow” mark on the back of the body and then pull up. To attach trimmer head, align the “I” mark with the “arrow” mark and then turn clockwise until the “I” and “circle” marks align.

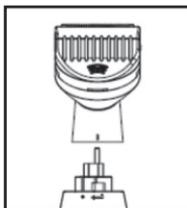

\*Requires 3 AAA batteries (not included). We recommend using alkaline batteries in your trimmer because they last longer.

## TAKING CARE OF YOUR TRIMMER OILING THE BLADES

About once a month you should oil the trimmer blades. It is best to do this over a piece of newspaper. Turn the trimmer on and hold it so that the blades are pointed downward. Spread one drop of oil across the blades, wait a few seconds for the oil to disperse then turn the trimmer off and wipe away the excess oil with a soft cloth.

Be careful not to use too much oil and don't oil your trimmer more than necessary, as this could damage the motor. (Never attempt to oil the motor bearing, as it is permanently lubricated.) Keep oil away from children.

## **BLADE CARE**

Because the trimmer blades are precision-made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take a cleaning brush and brush away any loose hair that has collected in the blades. Be especially careful when changing or adjusting blades. When you have your trimmer serviced, be sure that both blades are sharpened or replaced at the same time. To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer – to trim your beard and mustache.

## **DUAL BLADE TECHNOLOGY**

The new dual blade technology features a detachable upper blade for regular trimming and a lower blade that provides a close, even cut with the first pass and can also be used as a detailing blade.


## **GROWING A BEARD AND MUSTACHE**

There are three key factors that will determine which beard or mustache style is best for you:

1. The shape and dimensions of your face.
2. The natural growth of your beard/ mustache.
3. The thickness of your beard/mustache. If you are unsure about the type of beard or mustache that would most suit your face, speak with a professional hair stylist and ask for an opinion on what style would be best. Once your beard or mustache has been styled, it is essential that you maintain its appearance. To do this, use your trimmer to

trim your beard/mustache weekly. For the best trimming results, your beard should be slightly damp (NOT WET) when using your trimmer. This will prevent the trimmer from removing more hair than desired.

## TYPES OF BEARDS/MUSTACHES GETTING STARTED:

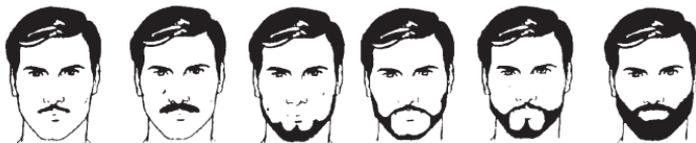

The dual blade cutting system is designed to neatly, quickly and evenly trim your beard, goatee, mustache, neckline and even close-cut stubble. While both blades are used for trimming, the upper blade can easily be removed, leaving the bottom blade for detailing fine lines and edging.






## COMB GUIDES

The table below explains the trim length for each comb. You should start out with a longer trim-length comb and work your way down to the desired trim length.


S1	Close stubble look
J1	1mm trim
J2	2mm trim
5-POSITION COMB	4mm, 6.5mm, 9mm, 11.5mm & 14mm trims

## HOW TO USE THE SINGLE DETAILING TRIMMING BLADE UPPER BLADE REMOVAL AND ATTACHMENT

The trimmer's upper blade can be removed to use the single detailing blade as shown in Fig. 1 and Fig. 2.

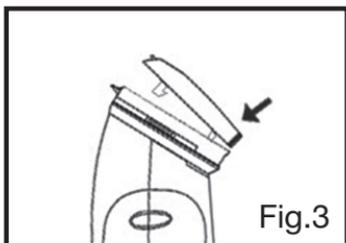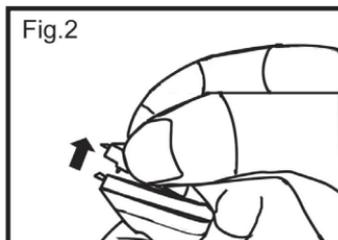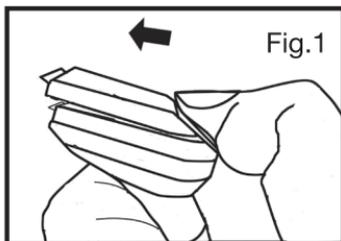

Step 3 Line up rear tab with opening in lower blade.

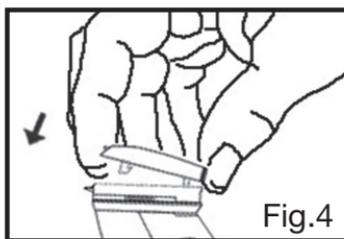

Step 4 Insert the rear tab, slide forward until the 2 front tabs drop in and the blade snaps in place.

To reattach upper blade, see Fig. 3 and Fig. 4.

## OUTLINING YOUR BEARD



1. It is always best to begin with a clean, slightly damp beard.
2. After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your jawline.
3. Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.

## TRIMMING YOUR BEARD

1. The trimmer includes a five-position comb for use with the hair trimming blade (4–14mm). Each position increases the length by 2.5mm.
2. To use the 5-position comb, slide the unit over the trimmer blade and snap it down into position. At first, until you become familiar with the adjustments, use the longest trim setting. (You can always go back and make your beard a little shorter.)
3. Begin trimming your beard using smooth, even strokes. Start with your sideburns and work downward toward your chin. (Never attempt to trim against the natural growth of your beard because the hair will be cut too short.)




4. If you decide you want a closer trim, you can now adjust the 5-position comb attachment to a shorter setting (such as 4mm or 6.5mm) and go over your beard again until you achieve the desired length.

## BLENDING THE JAWLINE

1. The two jawline attachments will help you to achieve a neat, finished trim under your chin. To use one of the attachments, press it down over the trimmer blades until it clicks into position (jawline J1 provides 1mm and jawline J2 provides 2mm).

2. Hold the trimmer in an upright position and begin trimming under your jawline, using short, even strokes.
3. After your beard is blended, turn off the trimmer and remove the attachment by gently pulling up on tab.

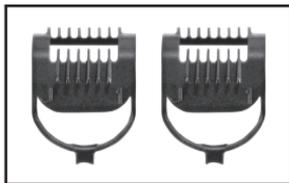

## **TO TRIM YOUR MUSTACHE**



1. For best results, start with a clean, slightly damp mustache.
2. Comb through your mustache in the direction it grows.
3. Place the 5-position comb over the facial hair blade and snap it into position. It is a good idea to start with the longest trim setting adjustment. (You can always go back and cut your mustache more closely with a shorter setting.)


## **ALWAYS TRIM YOUR MUSTACHE FROM THE TOP DOWN**



4. After your mustache has been trimmed to the desired length, remove the 5-position comb and, using the blades only, define the outline of the bottom of your mustache.
5. Use the single detailing blade for fine detail trimming and edging.

## HOW TO GET THE STUBBLE LOOK

This trimmer includes 1 stubble comb. Comb #1 is close to the skin. The stubble comb fits on the blade just like the jawline combs (note blending the jawline section for specifics on how combs/jawline combs go on).

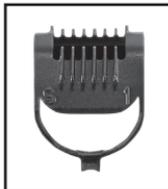

## ON/OFF SWITCH

To operate, simply slide switch toward blade; to stop push slide away from blade.

## CARE OF YOUR TRIMMER REPLACEMENT (REMOVAL) OF BLADE SET



Before storing your trimmer, use a cleaning brush to whisk away any loose hair from the unit and the blades. You should remove the blade set after a few uses to clean between the blades. To remove entire blade set from your trimmer, make sure the trimmer is in the OFF position. Remove the blade set by placing thumb against the smaller cutter and pushing forward, releasing the cutter assembly from the trimmer housing. Replace with new cutting system and reverse the removal procedure, only this time place your thumb on the large cutter and snap into place.

## LIMITED TWO -YEAR WARRANTY

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS For Men website [www.vsformen.com.au](http://www.vsformen.com.au)

To make a warranty claim you must retain your proof of purchase. Further details can be found at [www.vsformen.com.au](http://www.vsformen.com.au) and click on 'customer service'.

Vidal Sassoon and related logos are trademarks of  
The Procter & Gamble Company used under license by Conair

**CONAIR®**

©2014

Conair Australia Pty. Ltd.  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Australia

Customer Service Hotline (Australia): 1800 650 263  
Customer Service e-mail: [aus\\_info@conair.com](mailto:aus_info@conair.com)

Conair New Zealand Limited, PO BOX 251159, Pakuranga, Auckland  
1706 New Zealand  
Customer Service Hotline (New Zealand): 0800 266 247