



FOR MEN



**I-TWIN TRIM
DUAL BLADE LITHIUM TRIMMER**

Model VSM7275A



I-TWIN TRIM


The Vs For Men i-Twin Trim Dual Blade Lithium Trimmer is a professional grade rechargeable trimmer with a twin blade system for 2x the cutting power. The lithium-ion technology gives sustained power performance, even at lower charge levels. Super sharp, stainless steel dual blades gives smooth, effortless cutting for all over facial grooming.

FEATURES

- Rechargeable trimmer with 2 interchangeable cutting heads.
- Dual blade precision trimmer for 2x the cutting power
- Single blade for detailing, edging and precision trimming
- 5-position comb guide for cutting lengths 4mm, 6.5mm, 9mm, 11.5mm & 14mm trims
- 3 x Stubble combs for different stubble lengths
- Lithium-ion technology gives sustained power performance, even at lower charge levels
- Cleaning brush.
- Lubricating oil.
- 3 jaw line combs (1-3mm)
- Hygienic rotary trimmer for safe and gentle removal of unwanted nose and ear hair
- Charging and storage stand
- 2 year guarantee.

SAFETY CAUTIONS

WARNING! Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

- This appliance should only be used as described within this instruction book. Please retain for reference.
- Do not immerse the appliance in water or other liquids. A circular icon with a diagonal slash through it, containing a drawing of a hand pouring water into a container, indicating that the appliance should not be immersed in water.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer service line 1800 650 263
- Only use the attachments supplied with this appliance.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Careful adult supervision is required when this appliance is used on or near children. Do not use on very young children.
- This appliance should not be used, cleaned or maintained

by children. Keep out of reach of children.

- Always ensure that this appliance is kept out of the reach of children at all times, particularly during use and whilst cooling.
- Allow the appliance to cool before storing away.
- The battery should be removed for safe disposal at the end of its life.
- When the battery has run down, it should be disposed of at a recycling centre to safeguard the environment. If the battery leaks, avoid touching it and dispose of it at a recycling centre.

INSTRUCTIONS FOR USE

IMPORTANT! Only use the adaptor and attachments supplied with this appliance.

Inserting the Adaptor Cord into the Stand

- Remove the trimmer and accessories from the stand.
- Insert the adaptor plug into the hole on the base of the stand and push firmly into position.
- Route the cord through the channel on the base of the stand and secure in place.
- Should you wish to charge the appliance without using the charging stand, simply place the adaptor plug directly into the main trimmer unit.

Charging the Appliance

- A full 1hr charge will provide approximately 60 minutes use.
- Ensure the appliance is switched off.
- Insert the charger into the base of the trimmer

- Before the appliance is used for the first time, it should be charged for 3 hours. During charging, the indicator will flash continuously until the battery is full charged. then the charging indicator will stop flashing but remain on. After the first hours battery charge, it can then be charged in approximately 1 to 3 hours.
- When the trimmer is about to run out of energy, the charging indicator will flash to indicate that you have less than 15% battery capacity remaining.

Preserving the batteries


In order to maintain the optimum capacity of the rechargeable batteries, the trimmer should be fully discharged and then recharged for 3 hour every 6 months.

Preparation for Use


- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged.
- Ensure the heads are free from hair and debris and that the blades are properly oiled (refer to Cleaning & Maintenance section for further information).
- Ensure the appliance is sufficiently charged.
- Use on clean, dry hair that has been combed until tangle free.

How to use the single detail trimming blade

- The trimmer's upper blade can be removed to use the single detailing blade as shown in Fig. 1 and Fig. 2.

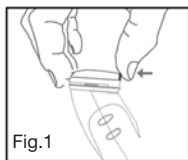


Step 1
Push the
upper blade
forward.

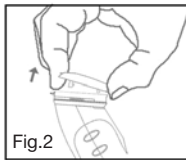


Step 2 Lift the
blade off.

NOTE: All attachments combs also fit on the single detailing blade for single blade trimming.

- To re-attach upper blade see Fig. 3 and Fig.4.

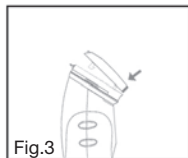

Step 3 Line up white tab with opening in lower blade.

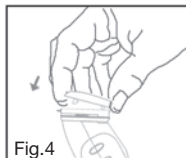

Step 4 Insert the white tab, slide forward until the 2 front tabs drop in and the blade snaps in place.

COMB GUIDES

The table below explains the trim length for each comb. You should start out with a longer trim length comb and work your way down to the desired trim length.

S1	S1 Close stubble look
S2	S2 Medium stubble look
S3	S3 High stubble look
J1	J1 1mm trim
J2	J2 2mm trim
J3	J3 3mm trim
5-POSITION COMB	4mm, 6.5mm, 9mm, 11.5mm & 14mm trims

How To Use 5 position Comb Guide

- The trimmer includes a five-position comb for use with the hair trimming blade (4-14mm). Each position increases the length by 2.5mm.



- To use the 5-position comb, slide the unit over the trimmer blade and snap it down into position.



- At first, until you become familiar with the adjustments, use the longest trim setting. (You can always go back and make your beard a little shorter.)
- Begin trimming your beard using smooth, even strokes. Start with your sideburns and work downward toward your chin. (Never attempt to trim against the natural growth of your beard because the hair will be cut too short.)
- If you decide you want a closer trim, you can now adjust the 5-position comb attachment to a shorter setting (such as 4mm or 6.5mm) and go over your beard again until you achieve the desired length.

Stubble Trimming

The three stubble attachments will help you to achieve the perfect stubble you are looking to achieve. S1 = close stubble, S2 = medium stubble, S3 = longer stubble



Hold the trimmer in an upright position and begin trimming under your jawline, using short, even strokes.

Blending the Jawline

1. The three jawline attachments will help you to achieve a neat, finished trim under your chin. To use one of the attachments, press it down over the trimmer blades until it clicks into position (jawline J1 provides 1mm, jawline J2 provides 2mm and jawline J3 provides 3mm).
2. Hold the trimmer in an upright position and begin trimming under your jawline, using short, even strokes.

3. After your beard is blended, turn off the trimmer and remove the attachment by gently pulling up on tab.



Nose & Ear Trimmer

To remove the precision trimmer, hold the handle of the appliance with one hand, hold the head with the other hand and pull the head back and away from the front of the handle.

- To attach the nose and ear trimmer head, make sure that the base of the head is seated in the handle, click the head into position.

Using the Nose & Ear Trimmer:

- For the safe and easy removal of unwanted nose and ear hair use the rotary trimmer head.
- Switch the trimmer on.
- Insert the trimmer into the nose or ear and gently move the trimmer in a circular motion.
- Only use the trimmer at the entrance to the ear or nose. Do not use any deeper, as this could cause injury.
- Never turn the trimmer off whilst in the nose and ear hair.

CLEANING & MAINTENANCE

For easy cleaning, the blades on your Vs For Men Trimmer are removable. Regular cleaning will maintain their high performance level. To clean proceed as follows:

- Switch the appliance off and unplug at the mains supply.
- Remove any comb guides. Rinse the comb guide under running water and dry thoroughly before storage or use.
- Before storing you trimmer use a cleaning brush to whisk away any loose hair from the unit and the blades. You should remove the upper blade after a few uses to clean between the blades. To remove entire

blade set from your trimmer, make sure the trimmer is in the OFF position. Remove the blade set by placing thumb against the smaller cutter and pushing forward, releasing the cutter assembly from the trimmer housing. Replace with new cutting system and reverse the removal procedure, only this time place your thumb on the large cutter and snap into place.

LIMITED TWO -YEAR WARRANTY

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS For Men website www.vsformen.com.au

To make a warranty claim you must retain your proof of purchase. Further details can be found at www.vsformen.com.au and click on 'customer service'.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under license
by Conair

CONAIR®

©2014
Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

Customer Service Hotline (Australia): 1800 650 263
Customer Service e-mail: aus_info@conair.com

Conair New Zealand Limited, PO BOX 251159,
Pakuranga, Auckland
1706 New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

