



**FOR MEN**



**i-Cut XL**

Model VSM950A

## SAFETY CAUTIONS

**WARNING!** Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

- Do not use or leave the appliance where it can become wet or where there is a danger of it falling into basins or other vessels containing water. 
- This appliance should only be used as described within this instruction book. Please retain for reference.
- Do not connect the appliance to the mains with wet hands.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped.
- Do not use the appliance if the lead is damaged.
- Only use the adaptor and attachments supplied with this appliance.
- Always unplug the appliance when fully charged.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Children should always be supervised to ensure that they do not play with this product.
- Special care is required when using the appliance close to the ears, eyes and face.
- Always switch off and unplug the appliance when cleaning or when not in use.
- Allow the appliance to cool before storing away.
- After use, do not coil the cord around the appliance as this may cause damage to the cord. Instead, coil the cord loosely by the side of the appliance.

- This appliance contains Ni-MH battery. To protect the environment this appliance and its batteries must be disposed of safely. At the end of its life, please take this appliance to a recycling centre.
- If the battery is leaking do not touch it and take it to a recycling centre.

## I-CUT XL

the **i-Cut XL** is a professional grade hair clipper with exceptional cutting performance, extreme precision and total convenience. This clipper can be used with mains power or cordless for total convenience.

### CLIPPER FEATURES

#### Exceptional Cutting Performance

- 45 mm Extra large blades with an exceptional sharpness – stainless steel - Fixed blade: 4mm thickness
- Powerful motor

#### Extreme Precision

- 8 cutting guides: 3-6-9.5-13-16-19-22-25 mm
- 2 ear contours guides (left/right)
- Taper control for fine tuning: 5 levels from 0,6 mm to 3 mm
- 1 beard precision guide: 6 positions from 0,5 to 3 mm

#### Total Convenience

- Rechargeable: cord or cordless use - 30 minutes range - LED charge indicator
- Accessories: adaptor, scissors, comb, cleaning brush, lubricating, oil
- 2 year warranty

## INSTRUCTIONS FOR USE

### **IMPORTANT INFORMATION REGARDING THE NI-MH BATTERIES OF THIS UNIT**

To obtain and maintain the longest battery autonomy possible, allow it to charge for 16 hours before using it for the first time and then approximately every three months. Full autonomy of the unit will only be obtained after three complete recharge cycles.

### **Charging the clipper**

1. Plug the cord into the unit and connect the adaptor. Before using the clipper for the first time, allow it to charge for 16 hours. Make sure the clipper's switch is in the OFF position.
2. Check that the charging indicator light is lit.
3. A full charge provides up to 30 minutes of use of the clipper.
4. Subsequent charges should also be 16 hours .

### **Mains use**

Connect the adaptor into the mains, wait 1 minute and then switch into the ON position.

**IMPORTANT !** Use only the adaptor provided with the clipper.

### **Oiling Instructions**

**IMPORTANT!** It is highly recommended before each use to oil the blades with the oil provided. This ensures optimum cutting performance.

For the first use you will need to use the oil supplied with the product, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors to release the oil.

To oil the blades ensure the unit is switched on. Gently squeeze the oil tube and apply 2 drops of oil onto the blades. Leave the unit on for a further few seconds to allow the oil to thoroughly spread the length of the blades. Switch off the unit and remove any excess oil by gently dabbing with a cloth.

## Comb Guides

This appliance is supplied with 9 comb guides and a left and right ear taper guide:

Cutting Length	Grade
0.5-3 mm	6 position beard comb guide
3 mm	#1
6 mm	#2
9.5 mm	#3
13 mm	#4
16 mm	#5
19 mm	#6
22 mm	#7
25 mm	#8

- To attach a comb guide, ensure the appliance is switched off. Position the comb guide over the front of the clipper blade and slide over the head. Push and click the rear of the comb guide into position (see Fig.1).
- To remove the comb guide, ensure the appliance is switched off. Push the tab on the rear of the comb guide away from the head and lift off (see Fig.2).

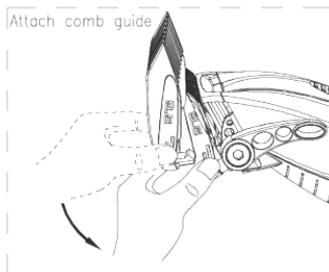


Fig.1

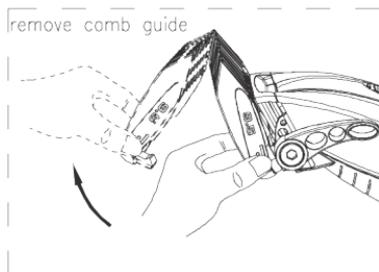


Fig.2

The appliance is also supplied with 2 taper guides

The taper guides can be used above the ear to get a clean line.

- Attach either the left or right guide depending on which ear you are cutting above.
- Angle the clipper and gently stroke around the ear towards the back of the neck.

### **Taper Control**

The taper control lever enables fine cut adjustment for precision clipping.

- To increase the cutting length, push the lever down.
- To reduce the cutting length, push the lever up.

### **Preparation for Use**

- Always inspect the appliance before use to ensure the clipper blades are free from hair, debris etc.
- For best performance, use on clean, dry hair that has been combed until tangle-free.
- Ensure the appliance is sufficiently charged or plugged into the mains.

### **Clipping**

#### **For an all over even cut:**

- Attach a comb guide as required – your clipper is supplied with 8 comb guides (grades 1-8). Each comb guide is labelled.
- Switch the clipper on and the blades will start to move.
- Starting at the nape of the neck, hold the clipper with the teeth of the clipper pointing upwards, ensuring that the comb guide is resting flat against the head.
- Slowly move the clipper upwards and outwards through the hair towards your crown, against the direction of the hair growth. The comb guide will help to lift the hair and the blades will cut the hair at the desired length.
- Once the desired length is achieved at the back of the hair, start clipping the top and sides.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head, and move the clipper towards

your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.

- You should achieve an even length cut all over your head.

#### **For a shorter back and sides, with length on the top:**

- Attach the longer comb guide as required for the top of your hair – your clipper is supplied with 8 comb guides (grades 1-8). Each comb guide is labelled.
- Switch the clipper on and the blades will start to move.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
- If you then wish to take the back and sides of your hair to a shorter length, switch off the appliance and attach a shorter comb guide.
- Starting at the nape of the neck, with the comb guide flat against the head, move the clipper upwards and outwards over the area you want to take shorter.
- Repeat on the sides of the hair, starting with the teeth of the clipper pointing upwards and comb guide flat against the area above the ear, again moving the clipper upwards and outwards.

#### **Outlining:**

- To tidy up the edges around your cut e.g. neckline and sideburns, detach the comb guides.
- Hold the appliance upside down, so the front of the clipper is facing towards your head.
- Hold the clipper straight on your sideburns or neckline and move the clipper downwards. This will give you a clean, smooth finish.

## CLEANING & MAINTENANCE

To maintain optimum performance, the appliance should be cleaned after each use:

- Remove the comb guide - the comb guides can be rinsed under running water. Please make sure they are dried thoroughly before storage or further use.
- Using the cleaning brush, brush and blow away any remaining hair from the blades.
- Do not disassemble the blades.

## BATTERY DISPOSAL

The appliance contains Nickel Metal-Hydrate batteries. To protect the environment, the appliance must be disposed of safely at the end of its useful life. Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.



Ni-MH

For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

## **LIMITED TWO - YEAR WARRANTY**

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS For Men website [www.vsformen.com.au](http://www.vsformen.com.au)

Please retain a copy of your purchase receipt as proof of purchase within the warranty period.



Vidal Sassoon and related logos are trademarks of  
The Procter & Gamble Company used under license by Conair



©2015

Conair Australia Pty. Ltd.  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Australia

Customer Service Hotline (Australia): 1800 650 263  
Customer Service e-mail: [aus\\_info@conair.com](mailto:aus_info@conair.com)  
Conair New Zealand Limited, PO BOX 251159,  
Pakuranga, Auckland  
2140 New Zealand  
Customer Service Hotline (New Zealand): 0800 266 247