



INSTRUCTION BOOKLET


DIAMOND SHINE STRAIGHT IN ONE PASS!

VSS389A

ABOUT YOUR STYLER

CONGRATULATIONS!

This straightener is an excellent choice if you love fast and efficient styling. This straightener with its Diamond Radiance Ceramic plates and ionic conditioning will be sure to smooth down all your frizzies and leave your hair beautifully shiny. Ideal for most hair types from fine & delicate to coarse & hard to straighten hair.

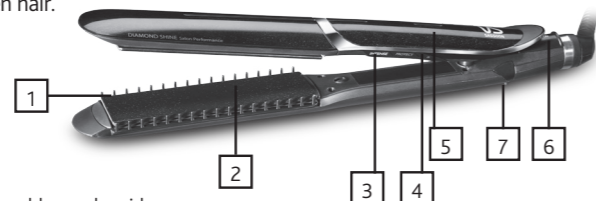

- 1. Bonus removable comb guides
- 2. Diamond Infused Ceramic Plates
- 3. Intense heat settings
- 4. On/Off button
- 5. LED temperature guide
- 6. Locking Switch
- 7. Built in stand

140°C TO 235°C VARIABLE HEAT	Personalise & adjust the temperature settings to suit your hair & style requirements.
DIAMOND RADIANCE TECHNOLOGY	Just feel how smooth the plate finish is. It is 50% smoother & 20% harder than standard ceramic.
LONGER AND WIDER PLATES	The large plates (120x35mm) are designed to give you fast and instant control. Ideal for styling in larger sections cutting down your styling time.
BONUS COMB GUIDES	De-tangle and smooth your hair all at once by using the comb guides designed to optimise the styling process.
CERAMIC HEATER	A truly professional ceramic heater ensures fast and constant heat with superior heat recovery. Just what you need when you want fast and professional results.
LOCKING SWITCH	This handy switch allows you to keep the plates locked, protected & tidy when not in use.
WET AND DRY	Designed especially for use on either dry or wet hair
IONIC FUNCTION	Negative ions are distributed through the hair during straightening to reduce frizz and static electricity to ensure a smooth and shiny finish with every pass.

FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use. (used to protect it from damage during transportation)

OPERATING INSTRUCTIONS

- Close plates and push in locking switch to keep them closed for faster heat up.
- Plug your styler into a 240V power outlet and switch on (press the "I/O" button).
- Place your styler on a heat protective, flat level surface.
- The default temperature is 200°C.
- The indicator light will stop flashing when the unit has heated up to the selected temperature.
- For smooth straightening, press once on the Protect button and the straightener will reach 180°C; twice and the straightener will reach 160°C; three times and the straightener will reach 140°C; and four times and the straightener will reach 200°C.
- Press the same button again and the straightener will return to 180°C.
- For an intense straightening, press once on the Intense button and the straightener will reach 220°C; twice and the straightener will reach 235°C.
- Press the same button again and the straightener will return to 220°C.
- To turn your styler off, press the "I/O" button.

WARNING: This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.

IMPORTANT: We do not recommend using this styler if your hair that has been heavily bleached or chemically treated. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

STYLE INSTRUCTIONS

- Start with hair that is clean, brushed through and dry.
- Alternatively this styler can be used on wet hair and can straighten from 70% (towel dried) Wet to Dry.
- Apply a mousse, heat spray or smooth styling product for the best results.
- Comb through to ensure your hair is completely tangle free.
- Divide your hair into 4 sections (2 back and 2 front).
- At the front make your parting the top of sections.
- Starting at the nape of the back sections, take a horizontal section no wider than the plate of your straightener.
- Insert the straightener at the base near the scalp taking care not to touch the scalp.
- Clamp the plates over the section of hair and slide down slowly and evenly.
- Repeat this through all your sections.
- Finish with a few drops or serum rubbed through the palms of your hair and stroke over the surface to control any fly-aways.

For more styling tips please head to www.vssassoon.com.au/tips/styling

STYLE TIPS

STRAIGHTEN

// For the best results, start with clean, dry & thoroughly combed through hair. Straighten your hair in sections making sure you go over each section once only to get a gorgeous, silky finish. Apply a heat spray for extra protection & longer lasting results.

HEAT

// Experiment with various heat settings. Top temperatures may be too hot for fine, delicate or colour-treated hair, so bring the heat down to one of the lower settings if this applies to your hair.

// Close plates and push in locking switch to keep them closed for faster heat up.

VOLUME

// Straight hair doesn't have to be poker straight. Create volume by making a curved movement with your wrist as you glide the straightener down the hair length.

SHORTER STYLES

// To create a perfectly shaped bob use as above but turn the styler under at the ends of your hair and hold in place for a couple of seconds and then release.

LOVE YOUR STYLE™
vssassoon.com.au

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

NOTE: You will also notice that the unit sputters slightly, this sound is normal for a high output ion generator

Limited Three Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for Thirty-six months months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com.

To make a warranty claim you must retain your proof of purchase.



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair.

©2015 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

CUSTOMER SERVICE:
Australia: 1800 650 263
New Zealand: 0800 266 247

CONTACT US:
For advice, tips on your new VS product
E-mail us on: aus_info@conair.com
vssassoon.com.au
VSS389A

VARIABLE HEAT SETTINGS

The variable temperature settings provide variable heat. Please make sure you choose the required temperature setting according to your particular need and hair type.

Temperature	Settings	Hair Type
Low	140°C green LED 160 °C green LED	Fine or coloured
Medium	160 °C green LED 180°C yellow LED 200°C orange LED	Normal and/or wavy
High	200°C orange LED 220°C red LED 235°C red LED	Thick and/or very curly hair

NB: The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time.

USER MAINTENANCE

Your styler is designed for household use and is virtually maintenance free. If cleaning becomes necessary, disconnect the styler from the power outlet. Allow the styler to cool and wipe exterior with a cloth. If any abnormal conditions occur, allow to cool and contact Conair Customer Service.

DIAMOND RADIANCE TECHNOLOGY

This styler has been created with Diamond Radiance Technology. This means the plates are coated with a ceramic which is 50% smoother and 20% harder than a standard ceramic*, providing diamond like luxuriously smooth perfection and brilliant results.

Diamond Radiance technology has properties that help to reduce your hairs' static electricity by generating negatively charged ions, closing the hair cuticle & minimizing static electricity. It will help ensure your hair is free from frizzies and ensure a smooth result every-time.

LOCKING SWITCH

The locking switch is used to hold the plates together when the straightener is not in use for easy and convenient storage. After use, turn the styler off and allow to cool. Hold the straightener handle together and slide the locking switch across to secure the plates. To unlock, simply slide the locking switch in the other direction.

TIP: heating up your straightener in the locked plate position will give you a faster heat up time.

AUTO-OFF SYSTEM

This styler has an automatic safety cut off system which will automatically turn your styler off if left on accidentally for 72 minutes. If this occurs, please wait for your styler to cool. Unplug the power cord. Plug the power cord back in and switch the styler on to start using your styler again.

*independent labs test results versus industry standard ceramic coating. Results may vary on production.

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference. Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- If this appliance falls into water, unplug it immediately- DO NOT reach into the water.
- Do not immerse in water or other liquids.

WARNING: Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.



*Do not use outdoors or operate where aerosol(spray) products are being used or where oxygen is being administered.

*Do not use an extension cord with this appliance.

WARNINGS: for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

CAUTION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.