

VS
SASSOON


INSTRUCTION
BOOKLET

DIAMOND LUXE
MINI STRAIGHTENING BRUSH
VSLE11A

ABOUT YOUR STYLER

CONGRATULATIONS!

The VS SASSOON Diamond Luxe mini straightening brush features a unique bristle combination for fast, easy styling. The heated ceramic straightening fins straighten the hair as you brush while the flexible taming bristles and detangling combs give gentle grip, tension give gentle grip, tension and control for detangling and total smoothing on all hair types.

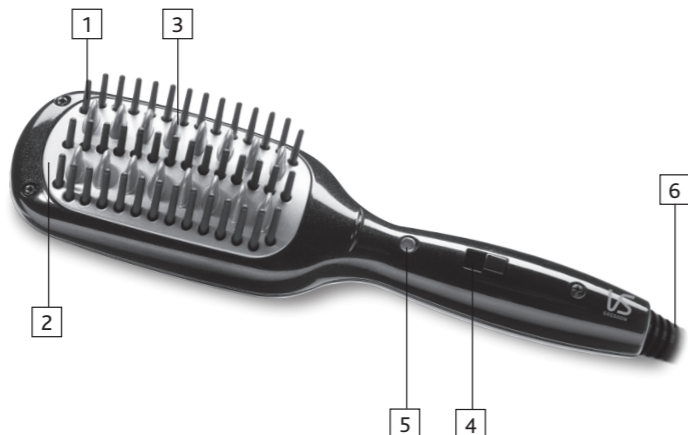

1. Styling bristles
2. Ceramic coated paddle
3. Ceramic coated fins
4. ON/OFF switch
5. Indicator light
6. Swivel cord

CERAMIC STRAIGHTENING FINS

The heated ceramic straightening fins gently and evenly straighten the hair as you brush.

TAMING BRISTLES

For gentle grip, tension and control for detangling and total smoothing on all hair types.

190°C HIGH HEAT

A top temperature of 190°C to ensure fast, salon results.

WORLDWIDE VOLTAGE

Automatically adjusts to the correct voltage. Wherever your travels take you.

ON THE GO STYLING

With its innovative handbag sized design, this is must-have styling tool for silky, sleek strands on the go.

THE BRUSH HOUSING WILL HEAT UP WITHIN A FEW SECONDS AND SHOULD NOT COME INTO CONTACT WITH THE SKIN AFTER IT IS SWITCHED ON. USE WITH CAUTION.

FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation)

GETTING STARTED

The ceramic-coated surface helps smooth down flyaways and frizz. It evenly distributes heat for fast styling.

The unique combination of heated ceramic coated and nylon bristles provides better contact and superior styling for beautifully defined, lasting results. The ceramic-coated bristles retain heat while styling, and the nylon bristles gently guide hair.

STYLE TIPS

For optimal results with your DIAMOND LUXE MINI STRAIGHTENING BRUSH follow these 3 easy steps:

1. Ensure hair is fully dry. Remove any tangles from the hair and create your part, getting ready for styling.
2. Place the brush underneath the hair section close to the roots with the bristles pointing upward. Use your other hand to pull the hair section taut against the heated plate until the bristles penetrate through the hair.

3. Glide the brush steadily down toward the ends of the hair. Continue to use the other hand to keep the hair taut, sliding it down the section ahead of the brush.
Please note: The hand sliding down the hair section must not be too close to the brush to avoid any heat contact.

4. As the brush nears the ends of the hair, release the section with the other hand and turn the heated brush under to give shape at the ends of the hair.

5. To finish your style and smooth the top of the hair, place the brush on the top of the hair section. Use the other hand to pull the section upward and taut against the heated plate until the bristles penetrate through the hair. Take care to avoid pressing the heated plate against the scalp.

6. Glide the brush down toward the ends of the hair, using the other hand as before to keep the section taut. As the brush nears the ends of the hair, release the hair section from the other hand and brush through to the ends.

LOVE YOUR STYLE™
vssassoon.com.au

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Limited Two Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com.

To make a warranty claim you must retain your proof of purchase.



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair

©2017 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

CUSTOMER SERVICE:
Australia: 1800 650 263
New Zealand: 0800 266 247

CONTACT US:
For advice, tips on your new VS product
E-mail us on: aus_info@conair.com
vssassoon.com.au
VSLE11A





WHAT IS CERAMIC TECHNOLOGY?

Hair damage is minimized, as the ceramic heat delivers even heat distribution from the styling appliance, reducing harmful and damaging hotspots. Ceramic heat is a gentle, faster styling tool that retains heat longer vs non-ceramic heat.

NOTE: Appliance not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by person responsible for their safety. Children should be supervised to ensure they do not play with appliance.

WORLDWIDE VOLTAGE

This straightening brush has a worldwide voltage feature for worldwide use. It has an internal automatic converter which will automatically convert the voltage switch from 100-240V~ without the need of a switch. A suitable plug adaptor will be required, please refer to the chart below.

Plug adaptor required	Voltage & plug adaptors	Country
	British plug: 230V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)
	European plug: 230V	Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only)
	Australian and New Zealand plug: 240V	Australia, New Zealand
	American plugs: 100 -120V	North America, Japan, Canada (parts of)

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference. Polythene bag over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- If this appliance falls into water, unplug it immediately - DO NOT reach into the water.
- Do not immerse in water or others liquids.



WARNING: Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.
- Do not immerse the appliance in water or other liquids.

- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.

WARNINGS: for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

CAUTION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.