



INSTRUCTION BOOKLET


**3Q SMART**  
DIGITAL STRAIGHTENER

VSP2561A

## ABOUT YOUR STRAIGHTENER

### CONGRATULATIONS!

The VS Sassoon 3Q Digital Hair Straightener brings a whole new era in technology for the ultimate in professional hair styling, leaving your hair frizz free, ultra smooth and with beautiful shine!

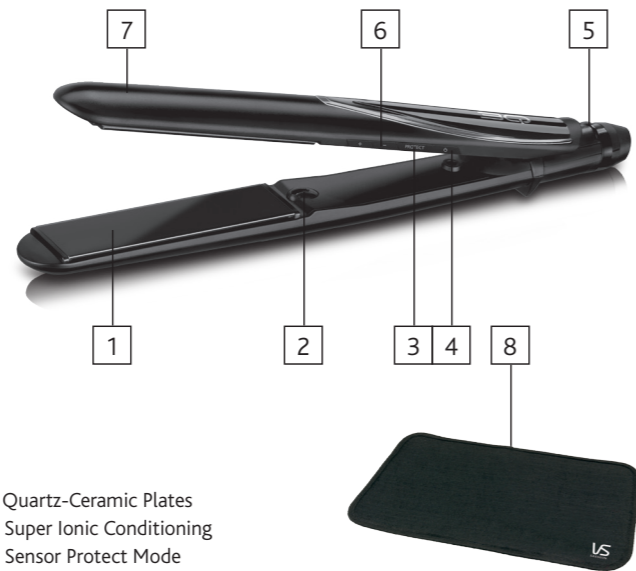

1. Quartz-Ceramic Plates
2. Super Ionic Conditioning
3. Sensor Protect Mode
4. On/Off Button
5. Lock Switch
6. 12 Digital Heat Setting
7. Up to 235°C
8. Heat Protection Mat

#### ULTRA-FAST STYLING

With advanced ceramic heating up to 235°C giving superior fast-action heat transfer and constant even heat. Perfect for straightening or curling.

#### ENHANCED HAIR PROTECTION

Heat Protect Sensor Mode adjusts the temperature according to the characteristics of the hair to protect from excessive heat. Or select 12 digital heat settings for precise & optimum temperature for different hair types.

#### FRIZZ FREE RESULTS

High Ionic- ceramic conditioning actively eliminates static and tames frizz. Active ions surround the hair to give a shine boost with every pass.

#### 12 DIGITAL HEAT SETTINGS 180°C-235°C

Personalise & adjust the temperature settings to suit your hair & style requirements.

#### CURVED BODY DESIGN

The curved design allows you to create beautiful curls and waves quickly and effortlessly, with a salon high-shine finish.



#### LONG-LASTING SMOOTHNESS

Luxurious Quartz- Ceramic plates give ultimate glide for effortless smoothing and longer lasting results. With 15 x more ceramic for durability\*.

## FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use. (used to protect it from damage during transportation)

## OPERATING INSTRUCTIONS

- Towel dry and detangle the hair.
- Dry hair as normal.
- Always ensure your hair is completely dry before using the straightener. Never use the straightener on wet hair.
- Plug the straightener into a suitable mains socket. Press and hold the button  for 1-2 seconds to turn the straightener on and select the desired temperature by pressing the + or - buttons.
- There are twelve temperature settings, as a guide:
  - Use the lower temperature settings (180-195°C) on fine, damaged or coloured hair.
  - Use the medium temperature settings (200-215°C) on normal hair.
  - Use the higher temperature settings (220-235°C) on thicker, coarser hair.
- Allow the straightener to heat up for 15 seconds. Allow slightly longer if using on the higher temperature settings.
- Activate the Sensor Protect™ technology by pressing the 'Protect' button for enhanced heat protection.
- After use, press and hold the button  for 1-2 seconds to switch off the straightener and unplug from the power point.
- Wrap the straightener in the heat protection mat provided and allow to fully cool down before storing away.

**WARNING:** This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.

**IMPORTANT:** This is a high heat appliance at 235°C. If your hair has been heavily bleached or is chemically treated or you are concerned with the condition of your hair, please consult your hairdresser before using this appliance.

## STYLE TIPS

### STRAIGHTEN

// For the best results, start with clean, dry & thoroughly combed through hair. Straighten your hair in sections making sure you go over each section once only to get a gorgeous, silky finish. Apply a heat spray for extra protection & longer lasting results.

### VOLUME

// Straight hair doesn't have to be poker straight. Create volume by making a curved movement with your wrist as you glide the straighteners down the hair length.

### SHORTER STYLES

// Straight hair isn't just for long styles. Create a classic glossy bob by using this straightener on your shorter cut.

**LOVE YOUR STYLE™**  
vssassoon.com.au

## WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced. If the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

### Limited Three Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your styler free of charge for 36 months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at [aus\\_info@conair.com](mailto:aus_info@conair.com).

**To make a warranty claim you must retain your proof of purchase.**



Vidal Sassoon and related logos are trademarks of the Procter & Gamble Company used under license by Conair

©2017 Conair Australia Pty Ltd  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Australia

**CUSTOMER SERVICE:**  
Australia: 1800 650 263  
New Zealand: 0800 266 247

**CONTACT US:**  
For advice, tips on your new VS product  
E-mail us on: [aus\\_info@conair.com](mailto:aus_info@conair.com)

[vssassoon.com.au](http://vssassoon.com.au)

VSP2561A  
\*than vs standard ceramic coating

## HOW TO USE THE LOCKING SWITCH

The locking switch is used to hold the plates together when the straightener is not in use for easy and convenient storage. After use, turn the appliance off and allow to cool. Hold the straightener handle together and slide the locking switch across to secure the plates. To unlock, simply slide the locking switch in the other direction.

## SUPER IONIC CONDITIONING

Featuring a superior ionic generator which releases super frizz-controlling ions on to the hair to smooth the cuticle and gives sleek, shiny, healthy looking hair.

**NOTE:** Turning on the straightener will automatically activate the ionic technology. Any noise generated from the ionic ports is normal.


## TEMPERATURE SETTINGS

The 12 variable temperature settings/digital heat control to provide variable heat for many different hair types. These settings allow you to choose the required temperature setting according to your particular need and hair type.

**NB:** The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time.


TEMPERATURE SETTING GUIDE	
LOW SETTING (180°C-195°C)	FINE,DAMAGED OR COLOURED HAIR
MEDIUM SETTING (200°C-215°C)	NORMAL HAIR
HIGHER SETTING (220°C-235°C)	THICKER,COARSER HAIR

## SWITCH ACTIVATION CONTROL

This straightener features delayed activation control to give consistent results and ease of use whilst straightening. Immediately after switching on the straightener you are able to adjust the temperature and activate the 'Protect' setting. After 5 seconds of the appliance being turned on, the switches will automatically lock. To adjust any settings, hold down the button of the required setting for 1-2 seconds, this will deactivate the lock mode and allow the settings to be changed. To turn off the appliance whilst in lock mode, hold down the button  for 1-2 seconds until the unit switches off.

## SENSOR PROTECT™ TECHNOLOGY

 
Select the protect mode for enhanced heat protection. The intelligent heat control technology monitors and adjusts the plate temperature to deliver salon straightening with care. There are two ways in which to use the straightener; with or without the Protect mode.

- After turning the straightener on, it will automatically set to 200°C. Select a suitable temperature for your hair type by pressing the + or - buttons.
- If the protect mode is not activated the straightener will continue to operate at the temperature selected.
- To use the straightener in protect mode, first select a temperature, then press the 'Protect' button.
- Once the protect mode has been activated the protect symbol  will appear within the LCD screen next to the temperature.
- The selected temperature will begin to flash registering that the protect mode has been activated.
- After a few passes through the hair the Sensor Protect™ technology will monitor and automatically adjust the temperature according to your hair characteristics and will help to reduce the level of heat transfer on to the hair during straightening.
- To return to normal operation, press the 'Protect' button to cancel the protect mode. The unit will return to the original temperature selected.

## HEAT MAT

The straightener comes with a heat mat for use during and after styling. During use do not place this appliance on any heat sensitive surface, even when using the heat mat provided. After use, switch off and unplug the appliance. Immediately wrap the appliance in the heat mat provided and allow to fully cool down. Continue to keep it out of the reach of children as it will remain hot for several minutes.

## AUTO SHUT OFF

This straightener has an automatic shut off feature for added safety. If the straightener is switched on for more than 72 minutes continuously, it will automatically switch off. If you wish to continue using the straightener press and hold the button  for 1-2 seconds to turn the straightener on.

## CARE AND MAINTENANCE

To help keep your straightener in the best possible condition follow the steps below:

- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.
- Unplug the appliance and let it cool completely before cleaning it.
- To clean the appliance, use a damp cloth with a little soft detergent, then dry carefully. Make sure the appliance is completely dry before using again.
- To protect the plates, store the straightening iron with the plates closed tightly.

## IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

### DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- If this appliance falls into water, unplug it immediately - DO NOT reach into the water.



**WARNINGS:** Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.

- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.

**WARNINGS:** for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

### CAUTION

- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person - responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.