

VS
SASSOON

INSTRUCTION
BOOKLET

EXPERT TURBO
IONIC CERAMIC DRYER

VSD361A

ABOUT YOUR DRYER

CONGRATULATIONS!

This dryer is an excellent choice if you love creating fast volume, adding shine & reducing your frizzies. Ideal for fast drying & drying natural curls.



1. Removable filter
2. 3 heat & 2 speed settings
3. Turbo shot & cool shot
4. Concentrator
5. Diffuser
6. Hanging loop
7. Brush

2400 WATTS	Dry, style and get fast results with a dryer that is fitted with a powerful motor.
HIGH IONIC CONDITIONING	Eliminate static & style faster whilst trapping moisture to reduce your frizzies by up to 75%*.
CERAMIC TOURMALINE TECHNOLOGY	This natural source of ions & ceramic enables your hair to more easily & effectively absorb heat to help minimise stress & damage.
QUIET TECHNOLOGY	Softens the tone of the hair dryer to a lower & more pleasant sound - even when you are using the higher speed settings.
6 CONTROL SETTINGS	3 heat & 2 speed settings, a turbo power setting, plus a cool shot to finish & set your style.
TURBO SHOT	Press the turbo shot button if you want to increase the fan speed & give your dryer an extra boost of drying power.
CONCENTRATOR	Used to direct the airflow along the length of your hair, increase drying speed & style with greater precision.
DIFFUSER	Used to build life, volume & dry your natural curls.
REMOVABLE FILTER	Having easy access to clean out the filter increases the performance & life of your dryer.
HANGING LOOP	Storing this dryer is super easy with a hanging loop.

FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation)

OPERATING INSTRUCTIONS

- Wash, condition and towel dry your hair
- Make sure the switch is set to the off ('0') setting before plugging into a suitable power outlet.
- Use the high heat and high speed setting for initial drying. Press the turbo shot button for drying thick, hard to dry hair.
- Switch to the low setting I as the hair begins to dry and for styling and scrunch drying.
- If your hair is very fine and damaged, it may be best to use only the low heat setting.
- To finish, use the cool shot to rapidly cool the hair and set the style in place.

CAUTION: Take care not to direct the airflow directly onto the skin (e.g. scalp, neck ears, face, etc.) as hot air from the hairdryers can, particularly if held too close, cause discomfort or even burns.

IMPORTANT: Hair that has been heavily bleached or chemically treated should only use the low heat setting on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

STYLE TIPS

STRAIGHT

// Create a smooth straight look by using your dryer with the ultra-slim concentrator nozzle. Divide your hair into sections & hold the hair taut using a brush whilst directing the airflow down the hair shaft.

VOLUME

// Create tousled natural-looking waves with lots of volume by using your dryer without the nozzle. Flip your head upside down. Grasp your hair at the roots & scrunch between your fingertips whilst drying. When dry, finger comb to arrange your hair as required. Remember to keep it casual & tousled for maximum volume.

CURLS

// Enhance your natural curls by using your dryer with the diffuser on the lowest speed setting & lowest heat setting: it literally diffuses and softens the airflow, which helps to form, not frizz, your curls.

EXPERT TIP

// Set your style by finishing with the cool shot or setting. Finish with a spritz of light hold hair spray, for extra hold if needed.

LOVE YOUR STYLE™
vssassoon.com.au

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced. If the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Limited Two Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com.

To make a warranty claim you must retain your proof of purchase.



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair

©2018 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

CUSTOMER SERVICE:
Australia: 1800 650 263
New Zealand: 0800 266 247

CONTACT US:
For advice, tips on your new VS product
E-mail us on: aus_info@conair.com

vssassoon.com.au

VSD361A

THE ATTACHMENTS

Concentrator

Concentrator nozzles are designed to direct the airflow from your hair dryer to just where you want it, to ease styling and straightening. Nozzles also help you to direct the airflow along the length of the hair from roots to ends. This is important because it helps to smooth the outer surface or cuticle of the hair giving your hair style a smoother finish. For additional control try using one of the lower speed settings with a higher heat.

Care should be taken not to direct the air flow directly onto the skin (e.g. the scalp, neck, ears and face). Never rest the concentrator nozzle on the hair and brush to hold it in place! You should always leave a 2cm to 3cm gap between the end of the nozzle and the hair around the brush.

Diffuser

The volumising diffuser attachment is designed to build life and volume into short to medium length hair, for drying any length of naturally curly hair and for scrunch drying to build and enhance curl in wavy and loose curly hair.

The diffuser works by softening the air flow from the hairdryer and should always be used on the lowest speed and heat setting to enable it to operate at its most efficient. Cup the weight of your hair into the bowl of the diffuser and cup the edges of the diffuser with your free hand to prevent your hair blowing around.

HIGH IONIC CONDITIONING

Many aspects of modern living, including air conditioning, contact with man-made fibers and air pollution add to the build-up of static electricity in your hair. Even simply brushing and towel-drying your hair can increase these levels. This static charge causes the scales, or cuticles of the hair, to push hair strands apart, resulting in a rough hair surface.

Consequently, your hair may have a dull appearance. High levels of static charge cause your hair to become 'flyaway' and difficult to style. The advanced internal ionic generator featuring two pins conditions hair by emitting negative ions to reduce static, leaving your hair silky and shiny with reduced frizz.

CERAMIC TOURMALINE TECHNOLOGY

Ceramic Tourmaline Technology will help keep your hair healthy and shiny looking. It generates full spectrum, infrared heat which works on hair molecules to dry them inside & out. It minimises heat damage and makes hair less frizzy and more manageable.

Ceramic Tourmaline properties also help to reduce your hairs' static electricity by generating negatively charged ions, closing the hair cuticle & minimising static electricity. Results are smooth, shiny hair with reduced frizzies & flyways.

USER MAINTENANCE

Blocked or clogged air intake vents will cause the dryer to overheat. The rear filter should be checked and cleaned on a regular basis. To help maintain optimum performance and prevent overheating of your hairdryer:

- Ensure that your styler is switched off, unplugged from the power outlet and has cooled down.
- Holding the handle of your styler firmly, twist and pull the rear filter down to remove.
- Using a soft brush, clean any hair and other debris that may build up in the filter.
- Replace the rear filter by twisting and pushing back into position.

If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the dryer or heat turns off, unplug the cord and allow the dryer to cool for 15 minutes before restarting. Make sure the air vents are 100% clean.

* When compared to dryers with natural ion generation

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- If this appliance falls into water, unplug it immediately - DO NOT reach into the water.



- **WARNINGS:** Before and During Use
- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.

WARNINGS: for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

CAUTION

- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person - responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask you installer for advice.