



INSTRUCTION BOOKLET

SALON CERAMIC SLIM-LINE STRAIGHTENER

VSS2514A

ABOUT YOUR STYLER

CONGRATULATIONS!

This straightener is an excellent choice if you love going from straight to curls to waves or simply want to add shine & smooth down your frizzies. Ideal for all hair types from fine & delicate to coarse & hard to straighten hair.



1. On/Off (I/O)
2. Digital Temperature Control with 6 heat settings
3. Tourmaline Ceramic plates
4. Multi voltage
5. 2m Swivel Cord
6. Heat Mat (not shown) place styler on mat during use to protect surfaces

160°C TO 235°C VARIABLE HEAT	Personalise & adjust the temperature settings to suit your hair & style requirements.
TOURMALINE CERAMIC TECHNOLOGY	Provides even heat distribution for a silky smooth finish.
LONG PLATES	Long plates (110mm) & rounded housing make this a fast & versatile styler - perfect for creating waves, flicks, curls and of course straight styles!
FLOATING PLATE DESIGN	Style with ease & ultimate control.
MULTI VOLTAGE	Automatically changes to the correct voltage. Wherever your travels take you.
AUTO OFF SYSTEM	For added safety, this styler turns itself off if left on accidentally.
2M PROFESSIONAL SWIVEL CORD	For ease of use and maneuverability.

SWITCH ACTIVATION CONTROL IMPORTANT!

This straightener features delayed activation control. Immediately after turning on the straightener you are able to adjust the heat settings. After 5 seconds of the straightener being turned on, the temperature buttons will automatically lock. To adjust any settings, hold down the '+' or '-' for 2 seconds, this will deactivate the lock mode and allow the settings to be changed. To turn off the appliance whilst in lock mode, hold down the button marked 'I/O' for 1 second until the unit switches off.

OPERATING INSTRUCTIONS

Simply press the switch marked 'I/O' to turn the styler on. The temperature lights will illuminate. The styler will default to 205C as the care setting for most hair types.

Place your styler on a heat protective flat surface.

- To adjust the heat setting hold down the '+' or '-' button for 2 seconds and switch between the '+' and '-' buttons until desired heat setting is selected.
- The red temperature lights will flick on and off to the selected temperature so indicate the styler is heating. Once the temperature is reached they will remain solid in colour.
- The styler is now ready for use.
- To turn the styler off press and hold the «I/O» switch for 1 second until the red LED lights turn off. Allow the styler to cool before storing.

WARNING: This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.

IMPORTANT: Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

STYLE INSTRUCTIONS

- Start with hair that is clean, brushed through and completely dry.
- Apply a mousse, heat spray or smooth styling product for the best results.
- Comb through to ensure your hair is completely tangle free.
- Divide your hair into 4 sections (2 back and 2 front).
- At the front make your parting the top of sections.
- Starting at the nape of the back sections, take a horizontal section no wider than the plate of your straightener.
- Insert the straightener at the base near the scalp taking care not to touch the scalp.
- Clamp the plates over the section of hair and slide down slowly and evenly.
- Repeat this through all your sections.
- Finish with a few drops or serum rubbed through the palms of your hair and stroke over the surface to control any fly ways.

TIP: Thinner sections will give you the best results. If you need to go over a section again to get straight results you need to use thinner sections. How thin exactly depends on your hair type and the temperature selected.

STYLE TIPS

STRAIGHTEN

// For the best results, start with clean, dry & thoroughly combed through hair. Straighten your hair in sections making sure you go over each section once only to get a gorgeous, silky finish. Apply a heat spray for extra protection & longer lasting results.

HEAT

// Experiment with various heat settings. Top temperatures may be too hot for fine, delicate or colour-treated hair, so bring the heat down to one of the lower settings if this applies to your tresses.

WAVES

// Straight hair doesn't have to be poker straight. Create volume by making a curved movement with your wrist as you glide the straightener down the hair length.

SHORTER STYLES

// Straight hair isn't just for long styles. Create a classic glossy bob by using this straightener on your shorter cut.

LOVE YOUR STYLE™
vssassoon.com.au

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Limited Two Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com.

To make a warranty claim you must retain your proof of purchase.

VARIABLE HEAT SETTINGS

The variable temperature settings provide variable heat. Please make sure you choose the required temperature setting according to your particular need and hair type.

TEMPERATURE	SETTINGS	HAIR TYPE
Low	160°C	Delicate, fine, bleached hair
Medium	170°C	Average to thick treated hair
Medium/High	190°C	Normal, thick or wavy hair
High	205°C	Care setting for medium thickness hair types
High/Maximum	205°C to 220°C	Thick or wavy hair types
Maximum	235°C	Hard to straighten, thick , curly

NB: The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time.

USER MAINTENANCE

Your styler is designed for household use and is virtually maintenance free. If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the appliance to cool and wipe exterior with a cloth. If any abnormal conditions occur, allow to cool and contact Conair Customer Service.

TOURMALINE CERAMIC TECHNOLOGY

Tourmaline Ceramic Technology will help keep your hair healthy and shiny looking. It generates full spectrum, infrared heat which works on hair molecules to dry them inside & out. It minimizes heat damage and makes hair less frizzy and more manageable.





AUTO SHUT OFF

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 60 minutes continuously, it will automatically switch off. If you wish to continue using the appliance after this time, simply press the 'I/O' button to turn the power on.

MULTI VOLTAGE

This straightener has a dual voltage for worldwide use. The voltage automatically converts for ease of use from 120-240V~.

NOTE: This straightener has an internal automatic converter which will automatically convert the voltage without the need of a switch. A suitable plus adaptor will be required, please refer to the chart below.

Plug adaptor required	Voltage and plug adaptors	Country	Voltage setting
	British plug: 240V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)	240V
	European plug: 230V	Asia, Europe, Middle East, Noumea, Scandinavia, South America, Hong Kong (parts only)	240V
	Australian and New Zealand plug: 240V	Australia, New Zealand	240V
	American plugs: 120V	North America, Japan, Canada (parts of)	125V

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

Basic safety instructions should always be followed, including the following, polythene bags over product. Package maybe dangerous. To avoid danger of suffocation, keep this wapped away from babies and children. This bag is not a toy.

DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- If this appliance falls into water, unplug it immediately- DO NOT reach into the water.

WARNING: Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Burn Hazard. Keep appliance out of reach from young children, particularly during use and cool down.
- Always place appliance with stand, if any, on a heat resistant stable surface.
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface

such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.

- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.

WARNINGS: for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

CAUTION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.



CONAIR

Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair

©2018 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

CUSTOMER SERVICE:
Australia: 1800 650 263
New Zealand: 0800 266 247

CONTACT US:
For advice, tips on your new VS product
E-mail us on: aus_info@conair.com
vssassoon.com.au
VSS2514A