



INSTRUCTION BOOKLET


WET & DRY STRAIGHTENER

VSS327A

## ABOUT YOUR STYLER

### CONGRATULATIONS!

Simply use this clever styler on already dried hair, or skip the blow dry & go straight from wet to dry. The world is your oyster. Ideal for all hair types, including hair that is still moist!

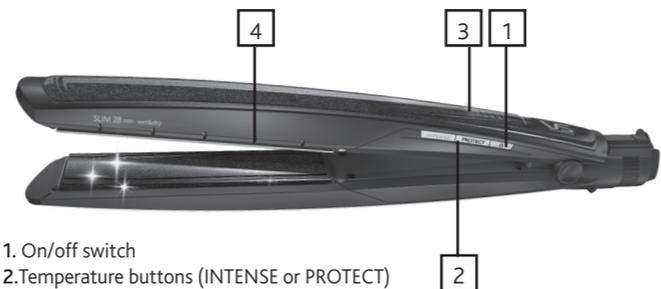

1. On/off switch
2. Temperature buttons (INTENSE or PROTECT)
3. LED display
4. Steam vents

INSTANT HEAT	Fast heat up.
140°C TO 235°C LED VARIABLE HEAT	Personalise & adjust the temperature settings to suit your hair & style requirements.
CERAMIC TECHNOLOGY	Generates full spectrum, infra red heat which works to help minimise heat damage making your hair less frizzy & more manageable.
WET & DRY TECHNOLOGY	This clever feature allows you skip the dryer & go straight from wet to dry. Of course you can also use this styler on hair that is already dry.
FLOATING PLATE DESIGN	Style with ease & ultimate control.
BUILD IN STAND	A stand has been built into this styler to prevent it from rolling over, protect surfaces & make styling that much easier.
AUTO OFF SYSTEM	For added safety, this styler turns itself off if left on accidentally.
LOCKING SWITCH	This handy switch allows you to keep the plates locked, protected & tidy when not in use.

## FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation)

## OPERATING INSTRUCTIONS

- Plug your styler into a power outlet.
- Place your styler on a heat protective, flat level surface.
- Press the 'O/I' switch to turn your styler on.
- The red indicator light will turn on and start to flash. At this point your styler will start heating up.
- Press the 'INTENSE' or 'PROTECT' button to adjust to the temperature you desire. Once the selected temperature stops flashing, the straightener has heated to the selected temperature.
- To turn your styler off, press the 'O/I' button. The LED display will turn off. Allow styler to cool before storing.

**WARNING:** This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.

**IMPORTANT:** Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

## STYLE INSTRUCTIONS

- Start with hair that is clean, brushed through and either completely dry or still moist.
- Apply a mousse, heat spray or smooth styling product for the best results.
- Comb through to ensure your hair is completely tangle free.
- Divide your hair into 4 sections (2 back and 2 front) .
- At the front make your parting the top of sections.
- Starting at the nape of the back sections, take a horizontal section no wider than the plate of your straightener.
- Insert the straightener at the base near the scalp taking care not to touch the scalp.
- Clamp the plates over the section of hair and slide down slowly and evenly.
- Repeat this through all your sections.
- Finish with a few drops or serum rubbed through the palms of your hair and stroke over the surface to control any fly ways.

**TIP:** Thinner sections will give you the best results. If you need to go over a section again to get straight results you need to use thinner sections. How thin exactly depends on your hair type and the temperature selected.

## STYLE TIPS

### STRAIGHTEN

// For the best results, start with clean, dry & thoroughly combed through hair. Straighten your hair in sections making sure you go over each section once only to get a gorgeous, silky finish. Apply a heat spray for extra protection & longer lasting results.

### HEAT

// Experiment with various heat settings. Top temperatures may be too hot for fine, delicate or colour-treated hair, so bring the heat down to one of the lower settings if this applies to your tresses.

### VOLUME

// Straight hair doesn't have to be poker straight. Create volume by making a curved movement with your wrist as you glide the straighteners down the hair length.

### SHORTER STYLES

// Straight hair isn't just for long styles. Create a classic glossy bob by using this straightener on your shorter cut.

LOVE YOUR STYLE™  
vssassoon.com.au

## WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

### Limited Two Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at [aus\\_info@conair.com](mailto:aus_info@conair.com).

**To make a warranty claim you must retain your proof of purchase.**



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair

©2018 Conair Australia Pty Ltd  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Australia

**CUSTOMER SERVICE:**  
Australia: 1800 650 263  
New Zealand: 0800 266 247

**CONTACT US:**  
For advice, tips on your new VS product  
E-mail us on: [aus\\_info@conair.com](mailto:aus_info@conair.com)  
**[vssassoon.com.au](http://vssassoon.com.au)**  
VSS327A

## VARIABLE HEAT SETTINGS

The variable temperature settings provide variable heat. Please make sure you choose the required temperature setting according to your particular need and hair type.

TEMPERATURE	SETTINGS	HAIR TYPE
Low	140°C	Delicate, fine, bleached hair
Medium	155°C	Average to thick treated hair
Medium/High	180°C	Normal, thick or wavy hair
High	205°C	Hard to straighten, thick hair
Intense	235°C	Hard to straighten, very thick curly hair

**NB:** The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time.

## USER MAINTENANCE

Your styler is designed for household use and is virtually maintenance free. If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the appliance to cool and wipe exterior with a cloth. If any abnormal conditions occur, allow to cool and contact Conair Customer Service.

## CERAMIC TECHNOLOGY

Ceramic Technology will help keep your hair healthy and shiny looking. It generates full spectrum, infrared heat which works on hair molecules to dry them inside & out. It mini mises heat damage and makes hair less frizzy and more manageable.

## WET & DRY TECHNOLOGY

You can use this styler on dry hair, just like a regular straightener. Wet & dry technology means that stylers with this feature have little outlets in the plates that channel excess water out through the vents in the housing. Unlike regular stylers that can only be used on hair that is completely dry; you can use this Wet & Dry styler on hair that is still moist. When used on moist hair, you may hear a hissing sound and see steam. This is normal, it is the excess water from your hair evaporating as it dries.

It's perfect if you want to skip the dryer or if your hair is still slightly damp in places.

**CAUTION:** Steam evaporating through the vents may be hot. During use, avoid touching or blocking the vents and direct drying vents away for your scalp and face.

## IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

### DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- If this appliance falls into water, unplug it immediately- DO NOT reach into the water.
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.
- Always place appliance with stand, if any, on a heat-resistant, stable flat surface.

**WARNING:** Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.



- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.
- **WARNINGS:** for Storage and Maintenance
- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

### CAUTION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.