



DIGITAL SENSOR




The Intelligent Straightener
Straighten or Curl

ABOUT YOUR STRAIGHTENER

CONGRATULATIONS!

The VS Sassoon Digital Sensor Intelligent Hair Straightener brings a whole new era in technology for the ultimate in professional hair styling, providing ultimate protection for your hair, for frizz free, ultra smooth & shiny results!

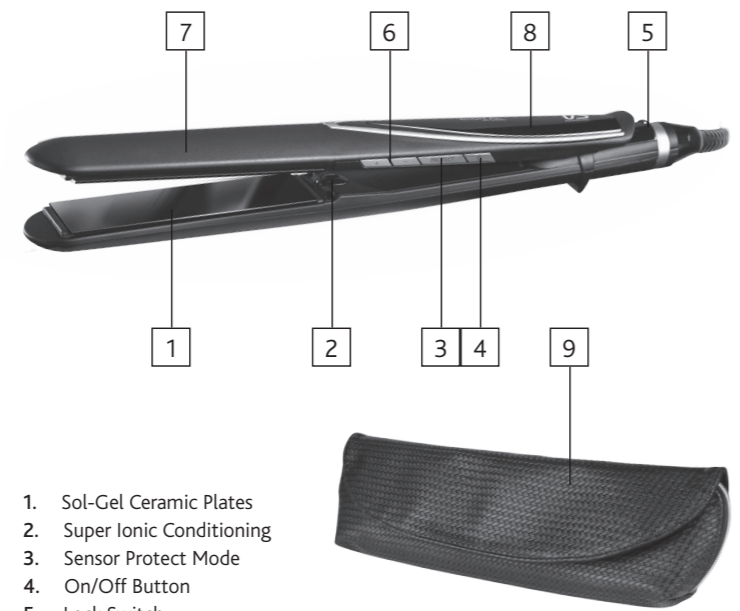

1. Sol-Gel Ceramic Plates
2. Super Ionic Conditioning
3. Sensor Protect Mode
4. On/Off Button
5. Lock Switch
6. 12 Digital Heat Settings
7. Up to 235°C
8. Intelligent Digital Sensor
9. Luxury storage case with heat protection

ULTRA-FAST STYLING	With advanced ceramic heating up to 235°C giving superior fast-action heat transfer and constant even heat . Perfect for straightening or curling.
ENHANCED HAIR PROTECTION	Heat Protect Sensor Mode adjusts the temperature according to the characteristics of the hair to protect from excessive heat. Or select 12 digital heat settings for precise & optimum temperature for different hair types.
FRIZZ FREE RESULTS	A slight buzzing sound can be heard when ionic is active, this is normal operation.
12 DIGITAL HEAT SETTINGS 180°C-235°C	Personalise & adjust the temperature settings to suit your hair & style requirements.
CURVED BODY DESIGN	The curved design allows you to create beautiful curls and waves quickly and effortlessly, with a salon high-shine finish.
LONG-LASTING SMOOTHNESS	Luxurious Sol-Gel Ceramic plates give ultimate glide for effortless smoothing and longer lasting results. With 15 x more ceramic for durability*.
INTELLIGENT DIGITAL SENSOR	The Intelligent Digital Sensor continually monitors plate temperature to ensure optimal consistent and even straightening.

FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use. (used to protect it from damage during transportation)

OPERATING INSTRUCTIONS

- Towel dry and detangle the hair.
- Dry hair as normal.
- Always ensure your hair is completely dry before using the straightener. Never use the straightener on wet hair.
- Plug the straightener into a suitable mains socket. Press and hold the button for 1-2 seconds to turn the straightener on and select the desired temperature by pressing the "+" or "-" buttons.
- There are twelve temperature settings, as a guide:
 - Use the lower temperature settings (180-195°C) on fine, damaged or coloured hair.
 - Use the medium temperature settings (200-215°C) on normal hair.
 - Use the higher temperature settings (220-235°C) on thicker, coarser hair.
- Allow the straightener to heat up for 15 seconds. Allow slightly longer if using on the higher temperature settings.
- Activate the Sensor Protect™ technology by pressing the 'Protect' button for enhanced heat protection.
- After use, press and hold the button for 1-2 seconds to switch off the straightener and unplug from the power point.
- Wrap the straightener in the heat resistant storage pouch provided and allow to fully cool down before storing away.

WARNING: This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.

IMPORTANT: This is a high heat appliance at 235°C. If your hair has been heavily bleached or is chemically treated or you are concerned with the condition of your hair, please consult your hairdresser before using this appliance.

HOW TO USE THE LOCKING SWITCH

The locking switch is used to hold the plates together when the straightener is not in use for easy and convenient storage. After use, turn the appliance off and allow to cool. Hold the straightener handle together and slide the locking switch across to secure the plates. To unlock, simply slide the locking switch in the other direction.

SUPER IONIC CONDITIONING

Featuring a superior ionic generator which releases super frizz-controlling ions on to the hair to smooth the cuticle and gives sleek, shiny, healthy looking hair.

NOTE: Turning on the straightener will automatically activate the ionic technology. Any noise generated from the ionic ports is normal. A slight buzzing sound can be heard when ionic is active, this is normal operation

TEMPERATURE SETTINGS

The 12 variable temperature settings/digital heat control to provide variable heat for many different hair types. These settings allow you to choose the required temperature setting according to your particular need and hair type.

NB: The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time.

TEMPERATURE SETTING GUIDE	
LOW SETTING (180°C-195°C)	FINE, DAMAGED OR COLOURED HAIR
MEDIUM SETTING (200°C-215°C)	NORMAL HAIR
HIGHER SETTING (220°C-235°C)	THICKER, COARSER HAIR

SWITCH ACTIVATION CONTROL

This straightener features delayed activation control to give consistent results and ease of use whilst straightening. Immediately after switching on the straightener you are able to adjust the temperature and activate the 'Protect' setting. After 5 seconds of the appliance being turned on, the switches will automatically lock. To adjust any settings, hold down the button of the required setting for 1-2 seconds, this will deactivate the lock mode and allow the settings to be changed. To turn off the appliance whilst in lock mode, hold down the button for 1-2 seconds until the unit switches off.

STYLE TIPS

STRAIGHTEN

// For the best results, start with clean, dry & thoroughly combed through hair. Straighten your hair in sections making sure you go over each section once only to get a gorgeous, silky finish. Apply a heat spray for extra protection & longer lasting results.

VOLUME

// Straight hair doesn't have to be poker straight. Create volume by making a curved movement with your wrist as you glide the straighteners down the hair length.

SHORTER STYLES

// Straight hair isn't just for long styles. Create a classic glossy bob by using this straightener on your shorter cut.



3 YEAR WARRANTY

Retain this section of the warranty card with your receipt/proof of purchase. You must present it to obtain replacement or service under the warranty.

The warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice. Attach a copy of your purchase receipt and store in a safe place.

To make a warranty claim call Customer Service on the phone number below or email aus_info@conair.com or you can return the defective product back to the place it was purchased where it will be replaced (see Point 12 in Conditions).

Please provide the following details:

1. Date of purchase
2. Retailer Name & Location:
3. Product Name/Model Number:
4. Confirm you have your purchase receipt:
5. Detail the problem with your product:

Conair Australia Pty Ltd
PO Box 146
Terrey Hills
NSW 2084

Conair New Zealand Ltd
PO Box 251159
Pakuranga, Auckland
New Zealand 2140



Vidal Sassoon and related logos are trademarks of the Procter & Gamble Company used under license by Conair

©2018 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

CUSTOMER SERVICE:
Australia: 1800 650 263
New Zealand: 0800 266 247

CONTACT US:
For advice, tips on your new VS product
E-mail us on: aus_info@conair.com

vssassoon.com.au

VSS500A
*than vs standard ceramic coating

Customer Service
Australia
1800 650 263
email : aus_info@conair.com

WARRANTY AGAINST DEFECTS

A. AUSTRALIAN CONSUMER LAW

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. 2. The guarantees under the Australian Consumer Law ("ACL") are provided in sections 51 to 59 inclusive of the ACL ("Statutory Guarantees") and the remedies are provided in sections 259 to 266 inclusive of the ACL ("Statutory Remedies").

B. VS SASSOON EXTENDED WARRANTY

1. In addition and subject to the Statutory Guarantees and Statutory Remedies, the following express warranty ("Warranty") commences from the date of purchase and continues for a period of 36 months ("Warranty Period") after which it expires. Subject to the conditions in Section C below, Conair warrants to the original purchaser ("Purchaser") of the VS Sassoon product that is the subject of this warranty ("Product") that if during the Warranty Period, the Product suffers from any defect caused by faults in materials or workmanship, Conair will a) replace the Product, or b) exchange defective parts in the Product or c) repair the Product, as Conair may choose in its discretion ("Warranty"). In this Warranty "Conair" means Conair Australia Pty Limited (ABN 64 068 492 044) of The Equinox Centre, Suite 101, 18 Rodborough Rd, Frenchs Forest, NSW, 2086. in relation to Products purchased in Australia and Conair New Zealand Ltd in relation to Products purchased in New Zealand.

2. To honour the Warranty, Conair must replace, or exchange parts in, or repair, the Product, as Conair determines, in accordance with paragraph B1 above, subject always to the conditions in Section C below.

3. If any of the conditions in Section C below are inconsistent with any provisions of the ACL or regulations made thereunder, those provisions of the ACL or regulations shall prevail to the extent of the inconsistency.

C. CONDITIONS

1. The Product must be used in accordance with manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Product be attributable to misuse, abuse, accident, act of God such as lightning, or nonobservance of manufacturer's instructions on the part of the user. This Warranty does not cover ordinary wear and tear in the Product or its parts.

Customer Service
New Zealand
0800 266 247
email: aus_info@conair.com

2. Conair does not accept liability for a) any loss or damage however suffered, caused by or arising out of any failure to use the Product in accordance with the manufacturer's instructions, and b) any indirect, consequential or economic loss or damage however caused.

3. This Warranty is immediately void if – a) any serial number or appliance plate is removed or defaced, b) the Product has been serviced or otherwise repaired by a person not authorized to do so by Conair or where non approved replacement parts are used.

4. The Product is designed for domestic use only. The Product must be connected to the electrical voltage supply as specified in the ratings label located on the Product. This Warranty does not cover defects arising from non-domestic use or incorrect voltage supply.

5. This Warranty may only be claimed against where proof of original purchase is presented, for example, original receipt or invoice.

6. Any parts of the Product that need to be replaced, or if the whole Product needs to be replaced, the replaced Product, become the property of Conair. The Warranty on any replacement Product or parts will expire on the same date that the Warranty Period on the original Product expires.

7. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Product which the Purchaser has under the ACL, and applicable laws in New Zealand, which rights and remedies by law may not be excluded. All other warranties and representations express and implied are hereby excluded.

8. The defect must have occurred during the Warranty Period and Purchaser bears the onus of proving that fact, and that the defect was not caused by any of the causes excluded from this Warranty.

9. This Warranty does not cover Products purchased from any person who is not a retailer serviced by Conair's authorised distributors or purchased second hand.

10. The Purchaser is responsible for all postage and freight charges and any other expenses incidental to claiming against this Warranty.

11. The Warranty excludes consumable items (such as blades or brushes) and normal wear and tear.

12. If you're certain your product is defective, and the product is covered by the terms of this warranty, you need to take the product back to the place you purchased it from, where the retailer will replace the product for you on our behalf. In this event, per the terms of this warranty you will need to present this portion of the warranty card and the purchase receipt as proof of purchase so please make sure you keep both this card and your receipt on hand for the duration of the warranty period.

SPARE PARTS

Replacement parts may be available for your product. Contact us on the phone or email address provided for more details. Please provide your product name/model number details, date of purchase and part you require.

 
SENSOR PROTECT™ TECHNOLOGY

Select the protect mode for enhanced heat protection. The intelligent heat control technology monitors and adjusts the plate temperature to deliver salon straightening with care. There are two ways in which to use the straightener; with or without the Protect mode.

• After turning the straightener on, it will automatically set to 200°C. Select a suitable temperature for your hair type by pressing the + or - buttons.

• If the protect mode is not activated the straightener will continue to operate at the temperature selected.

• To use the straightener in protect mode, first select a temperature, then press the 'Protect' button.

• Once the protect mode has been activated the protect symbol  will appear within the LCD screen next to the temperature.

• The selected temperature will begin to flash registering that the protect mode has been activated.


• After a few passes through the hair the Sensor Protect™ technology will monitor and automatically adjust the temperature according to your hair characteristics and will help to reduce the level of heat transfer on to the hair during straightening.

• To return to normal operation, press the 'Protect' button to cancel the protect mode. The unit will return to the original temperature selected.

HEAT RESISTANT STORAGE POUCH

The straightener comes with a storage pouch with fold out heat resistant mat for use during and after styling. During use do not place this appliance on any heat sensitive surface, even when using the heat mat provided. After use, switch off and unplug the appliance. Keep your appliance on the heat mat provided and allow to fully cool down. Continue to keep it out of the reach of children as it will remain hot for several minutes.

AUTO SHUT OFF

This straightener has an automatic shut off feature for added safety. If the straightener is switched on for more than 72 minutes continuously, it will automatically switch off. If you wish to continue using the straightener press and hold the button  for 1-2 seconds to turn the straightener on.

CARE AND MAINTENANCE

To help keep your straightener in the best possible condition follow the steps below:

• Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.

• Do not use the appliance at a stretch from the power point.

• Always unplug after use.

• Unplug the appliance and let it cool completely before cleaning it.

• To clean the appliance, use a damp cloth with a little soft detergent, then dry carefully. Make sure the appliance is completely dry before using again.


• To protect the plates, store the straightening iron with the plates closed tightly.

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

DANGER

• WARNING: Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.

• When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off. 

• If this appliance falls into water, unplug it immediately - DO NOT reach into the water.

WARNINGS: Before and During Use

• Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.

• If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.

• Do not operate this appliance or disconnect from the power supply with wet hands.

• Never use this appliance at the same time as styling products such as aerosols (spray).

• Be very careful when handling this appliance as parts of it may get extremely hot.

• Do not place the appliance on any heat sensitive surface or near flammable materials or objects.

• Do not immerse the appliance into water or other liquids.

• Keep the cord away from heated surfaces.

• Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.

• Do not cover this appliance with anything when it is switched on or hot.

• To avoid electric shock, do not drop or insert any object into an opening in this appliance.

• Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.

• Always place appliance with stand, if any, on a heat-resistant, stable flat surface.

WARNINGS: for Storage and Maintenance

• Always unplug the appliance immediately after use and before cleaning or maintenance.

• Do not leave the appliance unattended when plugged in or switched on.

• Always allow the appliance to cool down before storing away in a location where children cannot reach it.

• Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.

• Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.

• If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.

• If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

CAUTION

• This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person - responsible for their safety.

• Children should be supervised to ensure they do not play with the appliance.

• Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.

• Do not use any attachments other than those supplied by Conair Australia Pty Ltd.

• For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.