

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the unit is switched off.

WARNING: Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.



- Do not immerse in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.


IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described in this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Attachments may get hot during use. Allow them to cool before handling.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

Big Hair Hot Rollers

VS Sassoon's Big Hair Hot Rollers is designed to make rolling hair easy. The set features 5 extra large rollers for creating root lift and body with 5 super clips to secure the rollers.

The Big Hair Hot Rollers is the ideal styling tool for creating soft waves and curls or adding volume to hair.

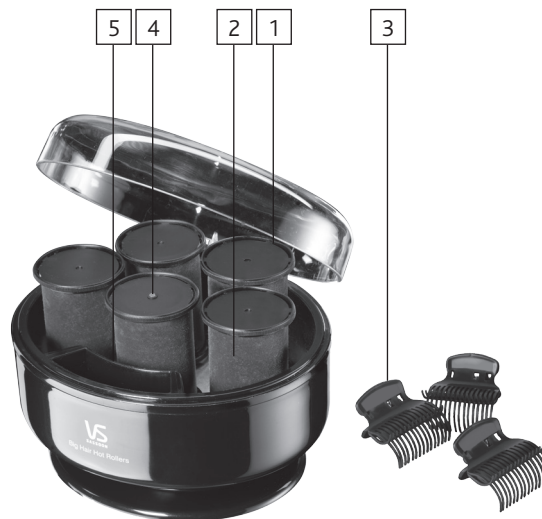

Features:

1. 5 extra large 38mm rollers to create volume and root lift
2. Flocked rollers for added control and frizz free results
3. 5 super clips
4. Heat ready indicator on centre roller - turns white when rollers are ready to use
5. Compact thermal case

How to use your Big Hair Hot Rollers

1. A plastic cover has been placed over the plug to protect it during transportation. Remove the plastic cover from the plug before use.
2. Place the hairsetter on a firm, flat surface. With lid closed and all rollers in place, plug into a suitable power outlet.
3. Allow rollers to heat with the lid closed, as this will provide the fastest, most efficient heat up. The rollers will be heated and ready to use in around 10 minutes. Once the rollers are heated, and the red dot on the centre roller has turned white, you can begin styling your hair. Refer to 'How to Curl and Style Your Hair' for further information.
4. When using the rollers, your hair should be clean and dry, or slightly damp - never wet.

IMPORTANT - When rollers are initially heating up, it is suggested to have the lid closed, as this provides the fastest, most efficient heat-up.

How to Curl and Style Your Hair

Your Big Hair Hot Rollers are best suited for medium to long hair lengths.

They will create waves, soft curls and give volume lift to hair.

1. Separate hair into equal sections. Ensure that the hair is combed through and free from knots and tangles.
2. Take small sections of hair at a time and place the ends of the hair on the roller and wind up towards the scalp, ensuring the ends of the hair section are secured tightly around the roller. Roll hair up firmly and secure by using one of the super clips provided. Leave in hair for approx 10-15mins.
3. To remove the roller from the hair, hold roller in one hand while removing the clip with the other. Gently drop the roller out of the hair section – do not pull, and let the curl bounce back after the roller is completely removed. Let hair cool for one minute for a firmly set curl, and then style your hair as desired.

IMPORTANT: After using the hairsetter several times, you will find the best timing for the texture of your hair and for the result you desire.

Styling tip

Using a light spray of hairspray or a styling spray for curls on each hair section before it is wound around the roller will allow the hair a stronger hold, especially for fine hair.

Cleaning and Maintenance

Your appliance is designed for household use and is virtually maintenance-free. This product represents the highest standards of workmanship and engineering research.

If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the hairsetter to cool. Clean the unit and the heating plates with a damp cloth. (Occasionally you may want to clean the rollers. Use a damp cloth and mild detergent or soap).

If any abnormal condition occurs, unplug the appliance, allow to cool and return it to your place of purchase.

Limited Two-Year Warranty

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS Sassoon website www.vssassoon.com.au

To make a warranty claim you must retain your proof of purchase. Further details can be found at www.vssassoon.com.au and click on 'customer service'.

Get more from your styling tools, visit
www.vssassoon.com.au
for news, styling tips and much more.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair
©2014 Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Customer Service Hotline (Australia): 1800 650 263
Customer Service e-mail: aus_info@conair.com
Conair New Zealand Ltd.,
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

VS
SASSOON

VS
SASSOON



instruction booklet
Big Hair Hot Rollers

VS3038A

IB-11/308B

LONDON • NEW YORK • SYDNEY
JOIN THE EVOLUTION.™