

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

**DANGER:** When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the unit is switched off.



**WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.


- Do not immerse in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

**IMPORTANT:** Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described in this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Attachments may get hot during use. Allow them to cool before handling.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

## Classic Salon Setter

VS Sassoon's Classic Salon Setter is designed to make rolling hair easy. The set features 20 multi-sized rollers in 3 sizes for creating all types of curls: 6 large, 5 medium and 9 small. With 20 metal clips and 10 super clips to secure the rollers, cool touch roller ends for comfortable control and a convenient clip storage compartment, the Classic Salon Setter is the ideal styling tool for creating soft waves and curls or adding volume to hair.

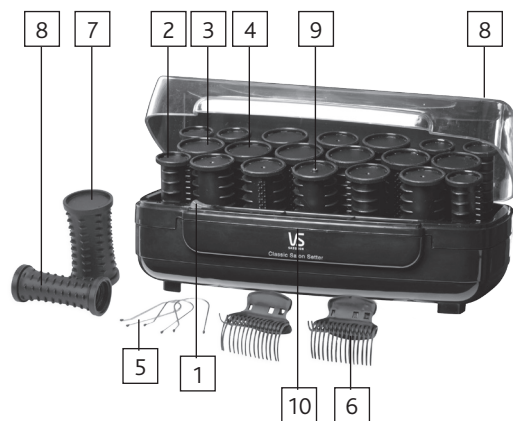

### Features:

1. On/off switch and indicator light
2. 9 small rollers
3. 5 medium rollers
4. 6 large rollers
5. 20 metal clips
6. 10 super clips
7. Cool touch roller ends on each of the rollers for comfortable control
8. Ribs on rollers grip hair for easy styling and heat transfer
9. Heat ready indicator on centre roller - turns white when rollers are heated
10. Clip storage compartment

### How to use your Classic Salon Setter

1. A plastic cover has been placed over the plug to protect it during transportation. Remove the plastic cover from the plug before use.
2. Place the hairsetter on a firm, flat surface. With lid closed and all rollers in place, plug into a suitable power outlet.
3. Once plugged in, switch on the on/off switch to the I position. The red indicator light will then alight to indicate that the rollers are heating up.  
Allow rollers to heat with the lid closed, as this will provide the fastest, most efficient heat up. The rollers will be heated and ready to use to use between 20-30 minutes. Once the rollers are heated, and the red dot on the centre roller has turned white, you can begin styling your hair. Refer to 'How to Curl and Style Your Hair' for further information.
4. When using the rollers, your hair should be clean and dry, or slightly damp - never wet.

**IMPORTANT -** When rollers are initially heating up, it is suggested to have the lid closed, as this provides the fastest, most efficient heat-up. When removing rollers to place in the hair, the lid must always be open. Leaving the lid closed when rollers are missing will cause the lid to melt. Take extra caution when heating up the appliance when rollers are missing.

### How to Curl and Style Your Hair

The Classic Salon Setter features 3 variable sized rollers, allowing for use on all hair types – from medium to long length hair.

**NOTE –** The firmness of the curl is determined by several factors: heat-up time, best roller selection and the length of time the roller is left in the hair.

**Small rollers:** use on short hair to create fullness and a tight curl. Tight curls can be used at the nape of the neck, and used to frame your face.

**Medium rollers:** use on medium to long hair to create a looser curl, yet bouncy and full.

**Large rollers:** use on medium to long hair to create voluptuous curls with full, extra volume.

1. Select the desired roller size that suits the hairstyle you wish to create and separate hair into equal sections. Ensure that the hair is combed through and free from knots and tangles.
2. Take one section of hair at a time and place the ends of the hair on the roller and wind up towards the scalp, ensuring the ends of the hair section are secured tightly around the roller. Roll hair up firmly and secure by using a metal clip.
3. For tight, firm curls use smaller rollers and leave in the hair for at least 10 minutes before removing. For soft, wavy curls use larger rollers and remove rollers from the hair after a shorter period of time.
4. To remove the roller from the hair, hold roller in one hand while removing the clip with the other. Gently drop the roller out of the hair section – do not pull, and let the curl bounce back after the roller is completely removed. Let hair cool for one minute for a firmly set curl, and then style your hair as desired.

**IMPORTANT:** After using the hairsetter several times, you will find the best roller selection, best timing for the texture of your hair and for the result you desire.

#### Cleaning and Maintenance

Your appliance is designed for household use and is virtually maintenance-free. This product represents the highest standards of workmanship and engineering research.

If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the hairsetter to cool. Clean the unit and the heating plates with a damp cloth. (Occasionally you may want to clean the rollers. Use a damp cloth and mild detergent or soap).

If any abnormal condition occurs, unplug the appliance, allow to cool and return it to your place of purchase.

#### Limited Two-Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

Get more from your styling tools, visit  
[www.vssassoon.com.au](http://www.vssassoon.com.au)  
for news, styling tips and much more.

Vidal Sassoon and related logos are trademarks of  
The Procter & Gamble Company used under licence by Conair  
©2014 Conair Australia Pty. Ltd.  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Customer Service Hotline (Australia): 1800 650 263  
Customer Service e-mail: [aus\\_info@conair.com](mailto:aus_info@conair.com)  
Conair New Zealand Ltd.,  
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand  
Customer Service Hotline (New Zealand): 0800 266 247

**VS**  
SASSOON



**VS**  
SASSOON



instruction booklet  
Classic Salon Setter

VS3060A

LONDON • NEW YORK • SYDNEY  
**JOIN THE EVOLUTION.™**

IB-8/370E