

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER:

When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the unit is switched off.

WARNING: Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.



- Do not immerse in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Attachments may get hot during use. Allow them to cool before handling.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

Fast Dry 2100W Dryer

The VS Fast Dry 2100W dryer has advanced fan technology and a longer lasting high torque motor to deliver powerful, penetrating airflow for super fast drying even on thicker hair. With ionic conditioning, the result will be a frizz-free, high shine finish.



Features:

1. 2100 watts
2. High torque motor for increased air pressure
3. Ionic technology
4. Ceramic technology
5. 3 heat and 2 speed settings
6. Cool shot
7. Concentrator nozzle
8. Removable rear filter
9. Fast dry brush

How to use your Fast Dry Dryer

This hairdryer features a lightweight, full power design for convenient and controlled styling.

1. Wash and condition your hair as usual.
2. Always towel-dry your hair before using the dryer.
3. Ensure the switch is set to the off ('0') setting before plugging into a suitable power outlet.
4. There are 3 heat and 2 speed settings, plus the cool shot button.
 - a. Use the low heat/speed setting as the hair begins to dry and for styling and scrunch drying. The low heat is also best for fine or damaged hair.
 - b. Use the medium heat/speed setting for normal hair.
 - c. Use the high heat/speed setting for initial drying. The highest setting is ideal for thick or hard to style hair.
5. Use the cool shot button on warm hair to rapidly cool the hair and set the style in place for a longer-lasting effect.

Styling Tips

Body and Volume

To help create extra body and volume in the hair, lean forward so the head is upside down when drying. Direct the airflow towards the roots for maximum lift. When the hair is dry, brush it into the required style.

Straightening

To create a smooth straight look, first divide the hair into sections. Attach the concentrator nozzle then, using a brush, hold the hair taut and roll ends slightly under as you dry.

Making Waves

To create tousled natural-looking waves, position head upside down. Using the dryer without the nozzle, grasp the hair at the roots and scrunch between the fingertips whilst drying. When dry, move the hair back into position for a casual, natural look.

The Attachments:



Slimline Concentrator -

Use the concentrator for directing airflow just where you want it, to ease styling and straightening. For additional control use one of the lower settings and point the airflow along the surface of the hair to be dried.

CAUTION: Take care not to direct the airflow directly onto the skin (e.g. scalp, neck ears, face, etc.) as hot air from the hairdryers can, particularly if held to close, cause discomfort or even burns.

How does the Ionic feature work?

Many aspects of modern living, including air conditioning, contact with man made fibres and air pollution add to the build-up of static electricity in the hair. Even brushing and towel-drying the hair can increase these levels. This static charge causes the scales, or cuticles of the hair, to push the strands apart, resulting in a rough hair surface. Consequently, hair may have a dull appearance. High levels of static charge cause hair to become 'flyaway' and difficult to style. The advanced internal ionic generator conditions hair by emitting negative ions to reduce static, by leaving hair silky and shiny with reduced frizz.

Cleaning and Maintenance

To help maintain optimum performance and prevent overheating of the hairdryer, the rear filter should be cleaned on a regular basis.

- Ensure that the appliance is switched off, unplugged from the power outlet and has cooled down.
- Holding the handle of the appliance firmly, turn the rear filter anti-clockwise and pull off.
- Using a soft brush, clean any hair and other debris that may build up in the filter.
- Replace the hinged rear filter and turn clockwise until it clicks into place.

Limited Two-Year Warranty

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS Sassoon website www.vssassoon.com.au

To make a warranty claim you must retain your proof of purchase. Further details can be found at www.vssassoon.com.au and click on 'customer service'.

Get more from your styling tools, visit
www.vssassoon.com.au
for news, styling tips and much more.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair
©2013 Conair Australia Pty Ltd
Suites 20 and 21,
7 Narabang Way, Belrose NSW 2085
Customer Service Hotline (Australia): 1800 650 263
Customer Service e-mail: aus_info@conair.com
Conair New Zealand Ltd.,
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

VS
SASSOON

VS
SASSOON



instruction booklet
Fast Dry 2100W Dryer

VS5197CA