



FOR MEN



METRO PRECISION BEARD TRIMMER

Model VS7050A



METRO PRECISION BEARD TRIMMER

The VS For men Metro Precision Beard Trimmer is compact and easy to use. Detachable diamond sharpened stainless steel blades for extreme sharpness and precision, with a 5-position trimmer guide for a variety of lengths. Complete with a range of grooming accessories and a convenient storage stand.

FEATURES

- Battery operated trimmer (2 x AA batteries included).
- 5-position trimmer guide (grades 1-5).
- Detachable blades.
- Moustache comb.
- Cleaning brush.
- Lubricating oil.
- Storage stand.

INSTRUCTIONS FOR USE

Preparation For Use

- Prior to initial use, test the trimmer on a small area of arm or leg hair. If any signs of allergic reaction or sensitivity occur, discontinue use. Do not use on very sensitive or irritated skin.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged.
- Ensure the trimming heads are free from hair and debris (refer to the Cleaning & Maintenance section for further information).

Inserting the Batteries

The trimmer requires 2 x AA batteries. We recommend using alkaline battery in the trimmer. To insert or replace the batteries, remove the battery compartment cover by firmly pushing down on the casing. Insert the batteries as indicated on the inside of the battery compartment.

Replace the casing by sliding it back into the main trimmer unit until it clicks into place. If the appliance remains unused for a while or if the batteries have run down, remove them from the appliance.

Do not mix old and new batteries. Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel cadmium) batteries.

Trimmer Guide

To attach the trimmer guide

- Ensure the appliance is switched off.
- Position the grooves on the inner sides of the trimmer guide over the corresponding notches on either side of the cutting head.
- Slide the trimmer guide downwards over the cutters until it will go no further.

To adjust the trimmer guide

- The marking on the handle should be aligned with the desired grade number indicated on the trimmer guide.

Grade 1 - 3mm
Grade 2 - 6mm
Grade 3 - 9mm
Grade 4 - 12mm
Grade 5 - 15mm

- Push the rear of the trimmer guide upwards with your thumb until it clicks into position, and the marking on the handle is aligned with the required grade number on the trimmer guide.
- Use the longest setting at first, until you become familiar with the adjustment. If you want a shorter cut, you can adjust the comb to a shorter position and go over the hair again until you achieve the desired length.

To remove the trimmer guide

- Switch the appliance off.
- Push the base of the trimmer guide upwards until it comes away from the cutting head.

For best performance:

- Use on clean, dry hair that has been combed until tangle-free.

To outline:

- Comb the hair to be trimmed in the direction of growth.
- Do not attach the guide.
- Switch the appliance on.
- Hold the trimmer upside down and, holding it gently against the skin at the required position, move away from the hair.
- Having defined the outline, hold the trimmer against the skin, the teeth of the trimmer pointing upwards yet flat against the skin, and move the trimmer against the direction of hair growth from the opposite direction of the defined outline.

To trim the beard:

- Attach the trimmer guide and select the grade required. If using more than one grade, start with the longer grade first.
- Switch the appliance on.
- Hold the trimmer against the hair, the teeth of the trimmer guide pointing upwards yet flat against the face.
- Move the trimmer upwards and outwards through the beard, a little at a time, against the direction of hair growth.
- The trimmer will work most efficiently when cutting through hair at its own speed. Never force the trimmer.
- Never switch the trimmer off whilst in the beard.

To trim the moustache:

- Attach the trimmer guide and select the grade required.
- Switch the appliance on.
- Hold the trimmer against the moustache; the teeth of the trimmer guide pointing upwards yet flat against the face.
- Move the trimmer upwards through the moustache, a little at a time, against the direction of hair growth.
- Once the moustache is trimmed to the desired length, remove the trimmer guide.
- Define the outline of the bottom of the moustache.

CLEANING & MAINTENANCE

To maintain optimum performance, the appliance should be cleaned after each use:

- Remove the comb guide after use. Rinse the comb guide under running water and dry thoroughly before storage or use.
- The cutting head of the trimmer is detachable for easy cleaning. Hold the trimmer pointing away from you with the cutters pointing upwards. Position your thumb underneath the cutter and push upwards to take the cutting head off.
- Using the cleaning brush remove any remaining hair from the trimmer blades.
- To replace the cutting head, align the lug on the rear of the head with the corresponding groove on the back of the trimmer, and snap down into place.
- When used regularly the clipper blades will not need to be oiled. However, if the appliance has not been used for a prolonged period of time it is advised to oil the blades before use. After cleaning, switch the appliance on and oil the blades using a few drops of the lubricating oil supplied. Only use the lubricating oil supplied with the appliance as this is specifically formulated and does not evaporate or slow the blades.

SAFETY CAUTIONS

WARNING! Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

- Do not use or leave the appliance where it can become wet or where there is a danger of it falling into basins or other vessels containing water.
- This appliance should only be used as described within this instruction book. Please retain for reference.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, contact the Conair Conair Customer Hotline 1800 650 263.
- Only use the attachment supplied with this appliance.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised. Children should always be supervised to ensure that they do not play with this product.
- Special care is required when using the appliance close to the ears, eyes and face.
- Always switch off the appliance when cleaning or when not in use.
- This appliance complies with the requirements of Directives 04/108/EEC (Electromagnetic Compatibility) and 06/95/EEC (Electrical Safety of Domestic Appliances).
- The trimmer contains 2x AA Alkaline batteries which should be removed for safe disposal at the end of its life.
- When the batteries have run down, they should be disposed of at a recycling centre to safeguard the environment. If a battery leaks, avoid touching it and dispose of it at a recycling centre.

Limited Two -Year Warranty

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS For Men website www.vsformen.com.au

Please retain a copy of your purchase receipt as proof of purchase within the warranty period.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair

CONAIR®

Conair Australia Pty Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia Customer Service Hotline (Australia): 1800 650 263
Customer Service e-mail: aus_info@conair.com

Conair New Zealand Limited, PO BOX 251159, Pakuranga, Auckland
1706 New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

IB-12/081B