



METRO WASHABLE PRECISION TRIMMER

Model VS7051A

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous.


To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, remove batteries after use since the proximity of water presents a hazard even when the appliance is switched off.



WARNING: Keep the appliance dry. Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.



- Do not immerse power handle in water or other liquids.
- Do not reach for an appliance that has fallen into water.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.



IMPORTANT: Always ensure the appliance is switched off when not in use or before cleaning. Do not leave unattended when switched on.


- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
 - Use this appliance only for its intended use as described within this instruction booklet.
 - This appliance is not intended for commercial use.
 - Never drop or insert any object into an opening.
 - Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
 - Do not place on any surface while it is operating.
 - Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
 - Do not use the appliance if it is damaged. In the event of damage, discontinue use and contact your dealer for instructions on returning it for examination or exchange.
- 
- 

METRO WASHABLE PRECISION TRIMMER

Thank you for purchasing the VS For Men Metro Washable Precision Trimmer. It features two interchangeable attachments for trimming nose and ear hair, eyebrow and sideburns. It safely and quickly trims unwanted hair and features stainless steel sharp blades for precision cutting results.

Features:

1. On/Off switch
2. Rotary trimmer for safe, hygienic trimming of nose and ear hair
3. Detail trimmer for tidying sideburns and precise trimming of eyebrows
4. Stainless steel sharp blades for precision cutting results
5. Power handle
6. Main protective cover for rotary trimmer
7. Protective cover for detail trimmer
8. Washable attachments
9. 1x AA battery (included)

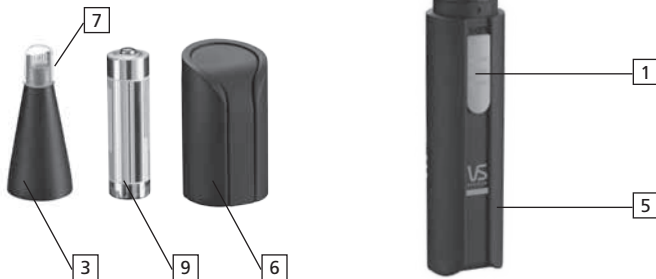

INSTRUCTIONS FOR USE

INSTRUCTIONS FOR USING BATTERIES

- Always purchase the correct size and grade of battery most suitable for intended use.
- Replace and dispose of old batteries promptly.
- Clean the battery compartment by blowing away any debris and also those of the device prior to battery installation.
- Ensure the battery is installed correctly with regard to polarity (+ and -).
- Remove battery from equipment which is not to be used for an extended period of time.

NB - Never immerse the power handle in water. Only the blade sections of the rotary trimmer and detail trimmer attachments are washable and can be placed under cool running water.

INSERTING THE BATTERIES

1. The battery compartment cover is located at the bottom of the trimmer. To remove compartment cover, simply slide the cover by pulling straight down.
2. Insert 1xAA alkaline battery (as provided), negative end first (as indicated in the compartment) into the battery compartment. Ensure batteries are installed correctly with regard to polarity (+ and -). Only use alkaline batteries.
3. To replace the battery compartment cover, line-up the cover with the bottom of the trimmer and slide over the compartment, ensuring that the plastic lug is positioned first. Slide the cover all the way to the top and then click into place.

NB – If you are not going to use the trimmer for an extended period of time, remove the battery. This will help to increase the life of your trimmer.



SWITCHING THE TRIMMER HEADS

1. Ensure the trimmer is switched off before changing the attachment heads.
2. To remove a trimming head, twist the top section of the trimmer (the trimming head attachment) to the right, until the line 'I' on the base of the trimming head attachment is positioned above the line '←' on the top of the trimmer, then pull straight off.
3. To attach a trimming head, position the line 'I' on the base of the trimming head attachment above the line '←' on the top of the trimmer. Then simply twist the head to the left until it clicks into place. The line 'I' should be positioned above the 'o' mark on the top of the trimmer.

USING THE TRIMMER

1. To use the trimmer, simply slide the on/off switch upwards, so that the 'I-ON' marking is visible.
2. After using the trimmer, slide the on/off switch down, so that the 'O-OFF' marking is visible.

TO TRIM HAIR FROM THE NOSE/EARS

1. Select the rotary blade attachment and switch the unit on.
2. Gently insert the trimmer into your nostril or ear canal to trim unwanted hair.
3. Move the trimmer in and out of the opening of the nostril or ear canal using a circular motion, taking care not to come too close to the border of the nostril or ear.

NB – Always turn the trimmer on BEFORE you insert into your nostril or ear canal to avoid painfully snagging hairs.

Never insert the trimmer more than 5-6mm into your nose or ear. Using any deeper than this can cause injury.



TO TRIM HAIR FROM THE EYEBROWS/SIDEBURNS

1. Select the detail trimmer attachment and switch the unit on.
2. Move the trimmer upwards and outwards through the hair you wish to remove. It is suggested to trim the hair in the direction of the hair growth, trimming hair against the direction of growth could cause a rash or irritation.
3. Move the trimmer slowly and carefully, so incorrect hairs are not trimmed.
4. It is not recommended to use the trimmer to completely remove eyebrows.

For more information on grooming tips and to keep up to date with the latest products, visit www.vsformen.com.au

CLEANING AND MAINTENANCE

To ensure long lasting performance of your trimmer, it is important to clean the blades regularly.

1. Ensure the trimmer is switched off before cleaning.
2. Thoroughly brush or gently blow away any loose hair and debris that has built up on the cutters.

Washing the attachments:

The rotary blade and detail trimmer attachments are washable, but should not be fully submerged in water, as this will cause damage to the attachments.

After use, only the trimmer attachments can be removed from the power handle and cleaned by placing under cool running water.

- Do not use hot water to clean the attachments
- Dry immediately and shake off excess water, then dry with a cloth.
- Ensure that the blade sections and casing of the attachments are dry before reattaching to the power handle.

Cleaning the Power Handle

After use, the power handle can be cleaned by wiping with a cloth that has been dampened in water and a mild detergent.



NEVER IMMERSE THE POWER HANDLE IN WATER.



LIMITED TWO YEAR WARRANTY

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS For Men website www.vsformen.com.au

Please retain a copy of your purchase receipt as proof of purchase within the warranty period.



Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair

CONAIR®

Conair Australia Pty Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia Customer Service Hotline (Australia): 1800 650 263
Customer Service e-mail: aus_info@conair.com

Conair New Zealand Limited, PO BOX 251159, Pakuranga, Auckland
1706 New Zealand
Customer Service Hotline (New Zealand): 0800 266 247





IB-12/124A

