



FOR MEN



**METRO TITANIUM PRECISION DELUXE
ALL-IN-ONE GROOMING SYSTEM**

Model VS7053A

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous.

To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

WARNING: Keep the appliance dry. Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.



- Do not immerse power handle in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface.


- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- Always unplug the appliance when fully charged.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Do not place on any surface while it is operating.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces
- Do not use the appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Never twist or pull on the trimmer cord.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

METRO TITANIUM PRECISION DELUXE ALL-IN-ONE GROOMING SYSTEM

Thank you for purchasing the Metro Titanium Precision Deluxe – a complete grooming system specially designed for all types of body grooming and facial hair trimming. This all-in-1 grooming system features 4 interchangeable attachments with titanium blade technology for exceptional precision and sharpness.

Features:

1. Rechargeable, cordless trimmer
2. Titanium blade technology for exceptional precision and sharpness
3. Precision trimmer for trimming facial hair, sideburns and neckline, as well as body hair
4. Detail trimmer for creating accurate lines and detailed fair hair effects
5. Foil shaver for smooth results
6. Rotary blade for trimming nose, ear and eyebrows
7. 5 position adjustable comb guide (3mm to 15mm) for facial hair trimming
8. Jawline blending comb guide
9. Washable attachments
10. On/Off switch
11. Attachment release button
12. Beard and moustache comb
13. Cleaning brush
14. Lubricating oil
15. Recharging/storage stand
16. AC power adaptor

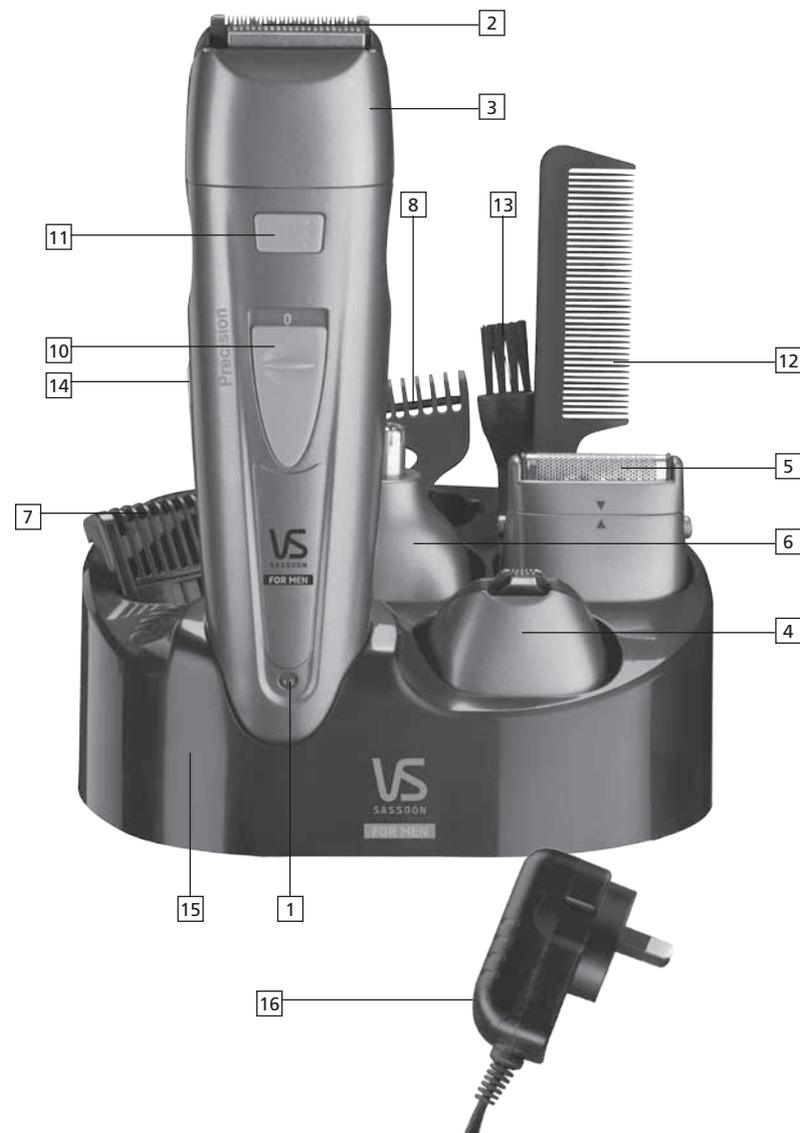

INSTRUCTIONS FOR USE

- A plastic cover has been placed over the plug to protect it from damage. Remove the plastic cover before inserting into a suitable power outlet.
- Always inspect the appliance to ensure the trimmer heads are free from hair, etc. Check also signs of damage and ensure that the blades are running smoothly.
- If the blades have been rinsed under water, ensure that the blades are properly oiled.
- Ensure the appliance is switched off before plugging into a suitable power outlet.

CHARGING THE TRIMMER (FOR CORDLESS OPERATION)

IMPORTANT: Before using the appliance for the first time, charge for a full 16 hour continuous charge. Maximum battery capacity will only be reached after 3 charging and discharging cycles. After 3 cycles, the trimmer must still be charged for 16 hours. In order to maintain optimum capacity of the rechargeable batteries, every 3 months the trimmer should be recharged for 16 hours.

The charging cord can be placed into the charging stand (as assembled) or removed and placed directly into the base of the trimmer.

1. Plug the AC power adaptor into a 230/240v power supply.
2. When the appliance is switched off, place the appliance onto the charging stand or plug the adaptor directly into the base of the trimmer.

3. Switch the adaptor on and the red LED charging light on the trimmer will illuminate to indicate that the adaptor is correctly inserted into the trimmer and connected to the mains power supply.
4. A 16 hour full charge will provide 30 minutes usage time.

INSERTING THE ADAPTOR CORD INTO THE STAND

1. Remove the trimmer, attachments and accessories from the stand.
2. Hold the recharging/storage stand upside down.
3. Insert the adaptor plug into the hole on the base of the stand and push firmly into position.
4. Route the cord through the channel on the base of the stand.
5. Place your thumb on the hinged back cover and push the cover over the adaptor plug to secure the cord and plug in place.

CHANGING THE ATTACHMENTS

1. Before changing any of the attachments, ensure that the appliance is switched off.
2. To remove an attachment head, hold the handle of the appliance with one hand, push in the attachment release button, hold the attachment head with the other hand and pull the head back and away from the handle.
3. To attach an attachment head, place the attachment head over the top of the handle, ensuring that the plastic lug is positioned at the back. Slide the attachment head down until it clicks into place.

WHAT ATTACHMENTS TO USE

	Precision Trimmer	Detail Trimmer	Foil Shaver	Rotary Blade
Beard				
Beard Line				
Stubble				
Moustache				
Neckline				
Sideburns				
Body Hair				
Nose Hair				
Ear Hair				
Eyebrows				

USING THE ATTACHMENTS AND COMB GUIDES

Precision Trimmer and 5 Position Adjustable Comb Guide

The precision trimmer attachment is ideal for grooming facial hair, sideburns and neckline, as well as body hair.

The 5 position adjustable comb guide is ideal for facial and body hair trimming at various cutting lengths – 3mm to 15mm.

1. Ensure the trimmer is switched off.
2. Attach the precision trimmer attachment.
3. Place the 5 position adjustable comb guide onto the back of the precision trimmer, ensuring that the top of the comb guide is positioned over the front of the precision trimmer blades.
4. Using your thumb, push the bottom of the comb guide onto the base of the trimmer blade until it clicks into place.
5. The comb guide will be set to the shortest of the 5 cutting lengths.

6. To adjust the comb guide, push and click the guide forward to the required position. Each positioned is labelled, showing the cutting length in mm.
7. To remove the comb guide, lift the comb guide up from the base of the trimmer blade and off the precision trimmer.

Jawline Blending Comb

The jawline blending comb is ideal for achieving a neat, finished trim under your chin.

1. Ensure the trimmer is switched off.
2. Attach the precision trimmer attachment.
3. Place the jawline blending comb guide onto the back of the precision trimmer, ensuring that the top of the comb guide is positioned over the front of the precision trimmer blades.
4. Using your thumb, push the bottom of the comb guide onto the base of the trimmer blade until it clicks into place.
5. To remove the comb guide, lift the comb guide up from the base of the trimmer blade and off the precision trimmer.

For best results, hold the trimmer in an upright position and begin trimming under your jawline, using short, even strokes.

Detail Trimmer

The detail trimmer is ideal for creating accurate edge lines and detailed tramlines in hair and facial hair.

Foil Shaver

The foil shaver is ideal for shaving facial and body hair close to the skin and is ideal for creating a clean, sharp edge to facial hair styles and for trimming hard to reach areas, particularly around the ears and nape of the neck. The foil shaver will leave the skin feeling

smooth and refreshed, with reduced irritation.

The foil shaver with this appliance should be used for dry shaving only.

For optimum results, it is recommended to trim the hair first if it is quite long.

NB – Always inspect the foil whilst shaving for signs of damage. Never shave with a damaged foil as this may result in injury.

1. Ensure the trimmer is switched off and that the skin is dry, not damp.
2. Attach the foil shaver attachment and switch the trimmer on.
3. Use your free hand to stretch the skin and make the hairs stand out.
4. Move the shaver slowly over the skin, applying minimal pressure and allow the shaver to fully shave tough areas of hair. Do not press.
5. For the closest shave, shave against the direction of hair growth, or with the hair growth, whichever is preferred, but remember that hair grows in different directions.

Rotary Blade Attachment

The rotary blade attachment features a rotary cutting action that provides safe, hygienic trimming of nose, ears and eyebrow hair.

To trim your nose and hair:

1. Ensure the trimmer is switched off.
2. Attach the rotary blade attachment and switch the trimmer on.
3. Gently insert the trimmer into your nostril or ear canal to trim unwanted hair.
4. Move the trimmer in and out of the opening of the nostril or ear canal using a circular motion, taking care not to come too close to the border of the nostril or ear.

NB – Always turn the trimmer on BEFORE you insert into your nostril or ear canal to avoid painfully snagging hairs. Never insert the trimmer more than 5-6mm into your nose or ear. Using any deeper than this can cause injury.

To trim your eyebrows:

1. Ensure the trimmer is switched off.
2. Attach the rotary blade attachment and switch the trimmer on.
3. Turn the trimmer onto the side and hold the trimmer sideways, of whichever is most comfortable for you to use.
4. Place the rotary blade at the ends of the eyebrow and gently trim the eyebrows against the direction of hair growth (or with the hair growth, whichever is preferred), holding the skin and allowing the hairs to stand out.

BEST CUTTING PERFORMANCE

1. Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged.
2. Ensure the attachment heads are free from hair, etc.
3. Ensure the trimmer is sufficiently charged.
4. Use on clean, dry hair that has been combed until tangle-free.
5. The trimmer will work most efficiently when cutting through hair at its own speed. Never force the trimmer.
6. Never switch the trimmer off whilst in the hair.

To Trim:

1. Ensure the trimmer is switched off.
2. Attach the required attachment and comb guide, if required. If using more than one cutting length, start with the longest length first to avoid cutting hair shorter than required, until you are familiar with the cutting length setting.

3. Switch the trimmer on.
4. Hold the trimmer with the teeth of the trimmer pointing upwards, yet flat against the skin.
5. Trim the hairs using a downward motion, following the direction of hair growth, or against the hair growth, whichever is preferred.
6. Since all hair grows in different directions, you may want to try different trimming methods (i.e upwards, downwards or across).
7. After achieving the desired length, use a downward motion to blend and smooth the moustache hairs.
8. After trimming, lightly go over the trimmed area with the foil shaver to remove any short hairs remaining. You can also use the foil shaver to create a clean, sharp edge to your stubble, moustache or sideburns.

To Outline:

1. Ensure the trimmer is switched off.
2. Attach the detail trimmer and do not attach a comb guide.
3. Hold the trimmer upside down, gently flat against the skin.
4. Move the trimmer in a downward direction.
5. Having defined the outline, hold the trimmer with the teeth pointing upwards, yet flat against the skin and move the trimmer upwards against the direction of hair growth. This will then trim the unwanted hair adjacent to the outline.

For more information on grooming tips and to keep up to date with the latest products, visit www.vsformen.com.au

CLEANING AND MAINTENANCE

To ensure long lasting performance of your trimmer, it is important to clean the blades regularly.

1. Ensure the trimmer is switched off before cleaning.
2. Thoroughly brush or gently blow away any loose hair and debris that has built up on the blades.

Washing and Oiling the Attachments:

The precision trimmer, detail trimmer, full size trimmer and rotary blade attachments are washable, but should not be fully submerged in water, as this will cause damage to the attachments. After use, only the trimmer attachments can be removed from the trimmer handle and cleaned by placing under cool running water.

- Do not use hot water to clean the attachments.
- Dry immediately and shake off excess water, then dry with a cloth.

NB – If the attachment heads are rinsed under water, the blades must be lubricated again using the lubricating oil provided. To oil the blades:

1. Attach a trimmer head to the handle.
2. Add a few drops of the oil supplied over the blades.
3. Switch the trimmer on for a minute and then turn off.
4. Wipe away any excess oil with a soft cloth.
5. Be careful not to use too much oil, and don't oil your trimmer more than necessary.
6. Oil the blades regularly to main optimum performance.
7. **DO THIS FOR THE PRECISION TRIMMER, DETAIL TRIMMER, FULL SIZE TRIMMER AND ROTARY BLADE ATTACHMENTS.**
8. This light, natural oil is similar to oil used in sewing machines, which can be purchased from your local art and crafts store.

5 Position Adjustable Comb Guide and Jawline Blending Comb Guide:

1. Remove the comb guide after use.
2. Use the cleaning brush to remove any hair from the comb guide.
3. The comb guide may be rinsed under running water, but must be completely dry before storage or use.

Foil Shaver:

NB – DO NOT RINSE OR OIL THE FOIL SHAVER AS IT IS PERMANENTLY LUBRICATED

1. Remove the foil shaver from the trimmer handle after use.
2. Gently tap the foil head to remove excess clippings. **DO NOT BRUSH THE FOIL ITSELF, AS THIS WILL DAMAGE THE FOIL.**

BATTERY DISPOSAL

The appliance contains Nickel Metal-Hydrate batteries. To protect the environment, the appliance must be disposed of safely at the end of its useful life. Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.



Ni-MH

For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

LIMITED TWO YEAR WARRANTY

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair

CONAIR®

Conair Australia Pty Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia Customer Service Hotline (Australia): 1800 650 263
Customer Service e-mail: aus_info@conair.com

Conair New Zealand Limited, PO BOX 251159, Pakuranga, Auckland
1706 New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

IB-12/241A