



FOR MEN



i-PRO intensive

Model VS7475A

I-PRO intensive

The VS For Men i-PRO intensive is a professional grade hair clipper with Lithium Ion technology to give sustained power performance for reliable mains or cordless use. The precision engineered hardened steel blades have a unique super sharp cutting angle for smooth, effortless cutting on any hair length or type.

FEATURES

- Mains or Cordless operational clipper - use corded for continuous power whilst plugged into the mains or use cordless for total flexibility and control.
- Lithium-ion technology with lightweight DC motor for powerful cutting action and sustained power performance.
- Precision engineered high grade hardened steel blades with unique super sharp cutting angle for smooth, effortless cutting.
- Lightweight for easy handling during use.
- Fine cut adjustment taper control for a high quality even finish.
- 3 Hour full charge for approximately 75 minutes of use.
- 30 Minutes quick charge for approximately 30 minutes of use.
- 8 Clipper cutting guides, grades 1-8, for a variety of lengths.
- Left and right ear taper comb guides.
- Cleaning brush.
- Lubricating oil.
- Storage pouch.
- 3 year guarantee.

INSTRUCTIONS FOR USE

Charging the Appliance

IMPORTANT! Only use the adaptor supplied with this appliance. This clipper is so easy to use, but before you do anything you must take your time to charge the unit for 3 hours before its first use. Even if you want to use it plugged in straight from the mains, this initial supercharge ensures optimum power performance to give smooth fast cutting every time. Maximum battery capacity will only be reached after 3 charging/discharging cycles. A full charge will provide approximately 75 minutes use. A 30 minute quick charge will provide approximately 30 minutes use.

When charging the appliance the blue LED charging light will flash slowly and continuously until the battery has fully charged, then the blue LED charging light will stop flashing but remain on.

Warning: If the charging light suddenly starts to flash rapidly then the appliance is faulty. If this happens then please stop charging and remove the adaptor from the mains and contact our Customer Care Centre for further advise (see the 'After Sales Service' section of the information booklet).

Mains Operation

- Ensure the appliance is switched off.
- Connect the adaptor to the base of the appliance and plug the adaptor into a suitable mains socket.
- The blue LED charging light will flash when the adaptor is correctly inserted into the appliance and connected to the mains.
- The appliance is now ready for use.
- **NOTE:** The appliance should not be used for longer than 20 minutes when operated from the mains.

Cordless Operation

- Insert the adaptor into the base of the appliance, plug into a suitable mains socket and switch on. The blue LED charging light will flash when the adaptor is correctly inserted into the appliance and connected to the mains.
- Once the appliance is fully charged the blue LED charging light will stop flashing but remain on, unplug the adaptor from the mains.

Oiling Instructions

IMPORTANT! It is highly recommended before each use to oil the blades with the oil provided. This ensures optimum cutting performance.

For the first use you will need to use the oil supplied with the product, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors to release the oil.

To oil the blades ensure the unit is switched on. Gently squeeze the oil tube and apply 2 drops of oil onto the blades. Leave the unit on for a further few seconds to allow the oil to thoroughly spread the length of the blades. Switch off the unit and remove any excess oil by gently dabbing with a cloth.

Preserving the batteries

In order to maintain the optimum capacity of the rechargeable batteries, the appliance has to be fully discharged every 6 months approximately. Then recharge the appliance to full capacity, again for 3 hours.

Comb Guides

This appliance is supplied with 8 comb guides and a left and right ear taper guide:

Cutting Length	Grade
3mm	#1
6mm	#2
9.5mm	#3
13mm	#4
16mm	#5
19mm	#6
22mm	#7
25mm	#8

- To attach a comb guide, ensure the appliance is switched off. Position the comb guide over the front of the clipper blade and slide over the head. Push and click the rear of the comb guide into position (see Fig.1).
- To remove the comb guide, ensure the appliance is switched off. Push the tab on the rear of the comb guide away from the head and lift off (see Fig.2).

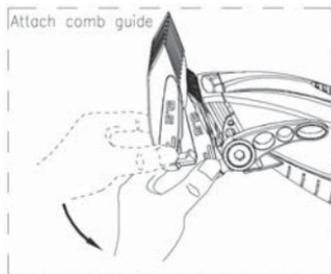


Fig.1

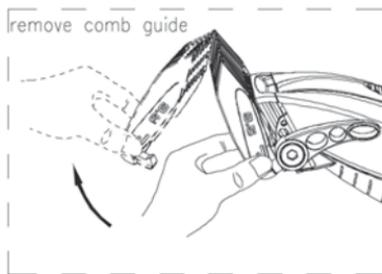


Fig.2

The appliance is also supplied with 2 taper guides
 The taper guides can be used above the ear to get a clean line.

- Attach either the left or right guide depending on which ear you are cutting above.
- Angle the clipper and gently stroke around the ear towards the back of the neck.

Taper Control

The taper control lever enables fine cut adjustment for precision clipping.

- To increase the cutting length, push the lever down.
- To reduce the cutting length, push the lever up.

Preparation for Use

- Always inspect the appliance before use to ensure the clipper blades are free from hair, debris etc.
- For best performance, use on clean, dry hair that has been combed until tangle-free.
- Ensure the appliance is sufficiently charged or plugged into the mains.
NOTE: The appliance should not be used for longer than 20 minutes when operated from the mains.

Clipping

For an all over even cut:

- Attach a comb guide as required – your clipper is supplied with 8 comb guides (grades 1-8). Each comb guide is labelled.
- Switch the clipper on and the blades will start to move.
- Starting at the nape of the neck, hold the clipper with the teeth of the clipper pointing upwards, ensuring that the comb guide is resting flat against the head.
- Slowly move the clipper upwards and outwards through the hair towards your crown, against the direction of the hair growth. The comb guide will help to lift the hair and the blades will cut the hair at the desired length.
- Once the desired length is achieved at the back of the hair, start clipping the top and sides.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head, and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
- You should achieve an even length cut all over your head.

For a shorter back and sides, with length on the top:

- Attach the longer comb guide as required for the top of your hair – your clipper is supplied with 8 comb guides (grades 1-8). Each comb guide is labelled.
- Switch the clipper on and the blades will start to move.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
- If you then wish to take the back and sides of your hair to a shorter length, switch off the appliance and attach a shorter comb guide.
- Starting at the nape of the neck, with the comb guide flat against the head, move the clipper upwards and outwards over the area you want to take shorter.
- Repeat on the sides of the hair, starting with the teeth of the clipper pointing upwards and comb guide flat against the area above the ear, again moving the clipper upwards and outwards.

Outlining:

- To tidy up the edges around your cut e.g. neckline and sideburns, detach the comb guides.
- Hold the appliance upside down, so the front of the clipper is facing towards your head.
- Hold the clipper straight on your sideburns or neckline and move the clipper downwards. This will give you a clean, smooth finish.

Cleaning & Maintenance

To maintain optimum performance, the appliance should be cleaned after each use:

- Remove the comb guide - the comb guides can be rinsed under running water. Please make sure they are dried thoroughly before storage or further use.
- Using the cleaning brush, brush and blow away any remaining hair from the blades.
- Do not disassemble the blades.



SAFE DISPOSAL

To minimise hazards to health and the environment at the end of this product's life, laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of this product at a suitable collection facility where it will be sent for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.

SAFETY CAUTIONS

WARNING! Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

- Do not use or leave the appliance where it can become wet or where there is a danger of it falling into basins or other vessels containing water.
- This appliance should only be used as described within this instruction book. Please retain for reference.
- Do not connect the appliance to the mains with wet hands.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped.
- Do not use the appliance if the lead is damaged.
- Only use the adaptor and attachments supplied with this appliance.
- Always unplug the appliance when fully charged.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Children should always be supervised to ensure that they do not play with this product.

- Special care is required when using the appliance close to the ears, eyes and face.
- Always switch off and unplug the appliance when cleaning or when not in use.
- Allow the appliance to cool before storing away.
- After use, do not coil the cord around the appliance as this may cause damage to the cord. Instead, coil the cord loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).
- This appliance contains Lithium Ion batteries. To protect the environment this appliance and its batteries must be disposed of safely. At the end of its life, please take this appliance to a recycling centre.
- If the battery is leaking do not touch it and take it to a recycling centre.

Limited Three -Year Warranty

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS For Men website www.vsformen.com.au

Please retain a copy of your purchase receipt as proof of purchase within the warranty period.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair



©2012 Conair Corporation USA

Conair Australia Pty Ltd, Suites 20 & 21,
7 Narabang Way, Belrose NSW 2085.

Australia Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: aus_info@conair.com

Conair New Zealand Limited, PO BOX 251159, Pakuranga, Auckland
1706 New Zealand

Customer Service Hotline (New Zealand): 0800 266 247