

**VS**  
SASSOON

INSTRUCTION  
BOOKLET


**BIG HAIR**  
HOT AIR STYLER

VSHA550A

## ABOUT YOUR STYLER

### CONGRATULATIONS!

The VS Sassoon Big Hair Styler combines the benefits of a hairdryer with a rotating brush in the one appliance to give you total styling control in one hand. Its unique styling action is perfect for adding gorgeous volume and shine to styles. The ceramic barrel gives fullness and body as you style whilst the soft bristles create ultimate shine and smoothness. Suitable to use on all hair lengths the 50mm brush is ideal for medium to long hair

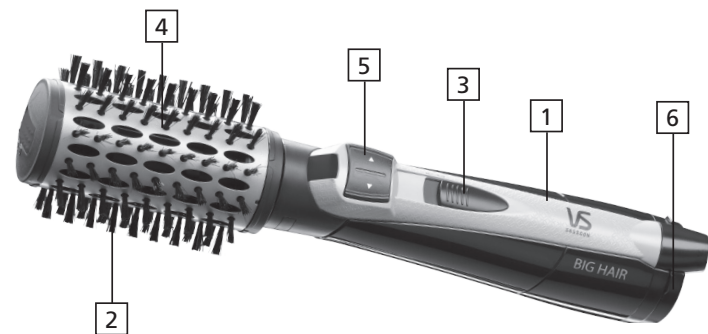

1. 800 watts of styling power
2. Removable 50mm ceramic barrel with soft brush bristles ideal for medium to long hair
3. 2 heat/speed settings plus a cool setting
4. Motorised brush
5. Multi-directional switches
6. Hinged rear filter
7. Protective brush cover (not shown)

#### 800 WATTS

Dry, style and get fast results with a styler that is fitted with a powerful motor.

#### CERAMIC TECHNOLOGY

This natural source of ions & ceramic enables your hair to more easily & effectively absorb heat to help minimise stress & damage.

#### ROTATING SOFT BRISTLES

The soft bristles gently smooth & shape your hair whilst adding unbelievable shine.

#### 3 SWITCH COMBINATIONS

2 heat / speed settings plus cool to set your style.

#### 2 ROTATION BUTTONS

Rotate left or right to add volume or softly rounded ends, or rotate in the opposite direction for a different look. Wherever your travels take you.

#### HINGED REAR FILTER

Having easy access to clean out the filter increases the performance & life of your hot air styler.

#### BRUSH COVER

A brush cover is included for protection & easy storage.

## TO STYLE

1. Remove the protective brush cover by sliding upwards and plug the styler into a power outlet - selecting either the low or high heat settings – Depress the ◀ or ▶ brush rotation buttons to ensure you understand the rotation direction before styling your hair .
2. Wash and condition your hair as usual. Comb hair before using to detangle.
3. Using a hair dryer, dry your hair first until it is 80% dry. For added volume, turn your head upside down as you dry.
4. Once hair is 80% dry, you should start to create your style using the Big Hair Styler. Ensure you section your hair using clips before styling . Take a hair section to start styling with approx. 2.5cm - 5cm wide and no more than 1cm thick (if you have thick hair make the section around 50mm thick).
5. Slide the on/off temperature switch to either the low or high heat setting.
6. Place the styler under the section of hair, close to the roots and brush through the section to remove tangles (without brush rotating).
7. For added volume at the root of the hair , hold the brush in place at the root (hair section is draped over top of brush) for a few seconds.
8. Move the brush through the hair section (hair is draped over top of brush), towards the ends and as you reach the end of the hair section, start to rotate the brush away from your head by pressing and holding the appropriate rotation direction switch.
9. As you do this it is important to resist the rotation of the brush by pulling the brush downwards. The brush should be rotating through the section of your hair (without the hair becoming wound round the brush head if you are holding the styler with the correct tension against the hair) to create a brushing effect as it dries and styles the hair.
10. For even more volume, allow the brush to rotate, winding the entire section of hair around the barrel, the brush will move upwards towards your scalp then release the the rotation switch and leave in the hair for a few seconds.
11. To release the section of hair, press and hold the opposite rotation button to unwind the hair section. If using the styler as outlined in points 14. and 15., do not wind the hair too tightly near the scalp as over time this could flatten your bristles.
12. Repeat for each hair section.
13. After use switch off and unplug the appliance.
14. Allow the styler to cool before storing.
15. Place the protective brush shield over the brush head to protect the bristles.

## Styling tips

- For fine hair types or to gain extra volume use a volumising mousse in your hair while damp before styling.
- To define layers and give shape to styles , follow step 12 and repeat through the section.
- To add volume to the roots and body through the top section of the hair, follow steps 10 to 12 but using an upward motion.
- For long lasting results, follow steps 10 to 14 but then slide the on/off switch to the cool setting for a few seconds, this will set the hair.

## FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation)

**IMPORTANT!** It may take several attempts to perfect this technique. If the brush spins too quickly and hair wraps around the brush head , simply release the rotation button and remove from the hair. Use the low heat setting (low brush speed) and practise rotating the brush on the lower ends of your hair until you feel comfortable with the styling action. If hair continues to wrap around the barrel you need to increase the downward tension. It is important to section your hair before styling and style section by section to get the best results.

**WARNING!** The ceramic brush barrel will get hot during use . Take care to avoid the hot surface of the styler coming in direct contact with the skin, in particular the eyes, ears, face and neck.

**LOVE YOUR STYLE™**  
vssassoon.com.au

## WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced. if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

### Limited Two Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at [aus\\_info@conair.com](mailto:aus_info@conair.com).

**To make a warranty claim you must retain your proof of purchase.**



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair

©2015 Conair Australia Pty Ltd  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Australia

**CUSTOMER SERVICE:**  
Australia: 1800 650 263  
New Zealand: 0800 266 247

**CONTACT US:**  
For advice, tips on your new VS product  
E-mail us on: [aus\\_info@conair.com](mailto:aus_info@conair.com)

[vssassoon.com.au](http://vssassoon.com.au)

VSHA550A

## HEAT SETTINGS

Your styler features two heat and a cool setting.

Off = "0" setting on switch

Low heat = "I" setting on switch .

High heat = "II" setting on switch

Cool setting = \* setting on switch (note : brush does not rotate on this setting)

- Use the high heat setting for initial drying, and the low heat setting as the hair begins to dry and for styling.
- Use the cool setting to set the style for longer lasting results after drying and styling.

## BRUSH ROTATION SETTINGS

Your styler has a two-way , rotation that can be used when styling (heat settings only) .

To make the brush head rotate press the switch marked ◀ or ▶ on the styler handle. These will make the brush head rotate in a clockwise or anticlockwise direction.

The styler has 2 heat/speed settings plus cool. When the styler is set on the high heat setting the brush head will rotate faster. When the styler is set on the low heat setting the brush head will rotate slower.

**Note:** The brush head does not rotate when used on the cool setting.

The styler can also be used as a fixed head brush for styling.

## THE ATTACHMENTS

### Attaching and removing the brush head.

Slip the brush head onto the body of the unit and lock into place by sliding the lock button located at the top of the brush attachment. To remove the brush attachment, unlock it and gently pull it off.

## USER MAINTENANCE

**IMPORTANT!** Check and clean the styler filter on a regular basis.– To help maintain optimum performance and prevent overheating of your appliance, the rear filter should be cleaned on a regular basis.

- Ensure that the appliance is switched off, unplugged from the power outlet and has cooled down.
- Holding the handle of the appliance firmly, click open the rear filter at the base of the styler down to open.
- Using a soft brush, clean any hair and other debris that may build up in the filter.
- Replace the rear filter by pushing back into position.

## IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

### DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- If this appliance falls into water, unplug it immediately - DO NOT reach into the water.



**WARNINGS:** Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.

**WARNINGS:** for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.

- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

### CAUTION

- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person - responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom.  
Ask you installer for advice.