

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the unit is switched off.



WARNING: Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.

- Do not immerse in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat-sensitive surface and always allow to cool before storing away.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described in this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Attachments may get hot during use. Allow them to cool before handling.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use an extension cord with this appliance.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

Compact Travel Setter

VS Sassoon's Compact Travel Setter is a multi-voltage hair roller set, suitable for worldwide use. It features 10 multi-sized rollers in 3 sizes for creating all types of curls: 3 large, 3 medium & 4 small + 2 additional small rollers with Ceramic Technology™ to deliver even heat distribution for a silky, smooth finish. With 12 metal clips and a soft travel pouch with cord storage, the Compact Travel Setter is the ideal styling tool for creating soft waves & curls or adding volume to your hair.



Features:

1. Multi voltage for worldwide use (100 - 240v)
2. 4 small rollers
3. 3 medium rollers
4. 3 large rollers
5. 2 additional small rollers
6. 12 metal clips
7. Stay cool end rings on each of the rollers for easy styling
8. Soft travel pouch with cord and clip storage
9. Heating base

How to use your Compact Travel Setter

1. A plastic cover has been placed over the plug to protect it during transportation. Remove the plastic cover from the plug before use.
2. Place the hairsetter on a firm, flat surface. With pouch lid closed, and all rollers in place, plug into a suitable power outlet.
3. Once plugged in, the rollers will begin heating up. Allow rollers to heat with lid closed, as this will provide the fastest, most efficient heat up. The rollers should be heated and ready to use within 5-10 minutes. Refer to 'How to Curl and Style Your Hair' for further information.
4. When using the rollers, your hair should be clean and dry, or slightly damp – never wet.
5. When not in use, the power cord should be safely secured inside the storage compartment located at the back of the travel pouch. Gently fold the power cord together and secure in place by sealing the velcro strip.

How to Curl and Style Your Hair

The Compact Travel Setter features 3 variable sized rollers, allowing for use on all hair types – from medium to long length hair.

NOTE – The firmness of the curl is determined by several factors: heat-up time, best roller selection and the length of time the roller is left in the hair.

Small rollers: use on short hair to create fullness and a tight curl. Tight curls can be used at the nape of the neck, and used to frame your face.

Medium rollers: use on medium to long hair to create a looser curl, yet bouncy and full.

Large rollers: use on medium to long hair to create voluptuous curls with full, extra volume.

1. Select the desired roller size that suits the hairstyle you wish to create and separate hair into equal sections. Ensure that the hair is combed through and free from knots and tangles.
2. Take one section of hair at a time and place the ends of the hair on the roller and wind up towards the scalp, ensuring the ends of the hair section are secured tightly around the roller. Roll hair up firmly and secure by using a metal clip.
3. For tight, firm curls use smaller rollers and leave in the hair for at least 10 minutes before removing. For soft, wavy curls use larger rollers and remove rollers from the hair after a shorter period of time.
4. To remove the roller from the hair, hold roller in one hand while removing the clip with the other. Gently drop the roller out of the hair section – do not pull, and let the curl bounce back after the roller is completely removed. Let hair cool for one minute for a firmly set curl, and then style your hair as desired.

IMPORTANT: After using the hairsetter several times, you will find the best roller selection, best timing for the texture of your hair and for the result you desire.

Multi Voltage

This hairsetter has a multi voltage feature for worldwide use. The voltage automatically converts for ease of use from 100-240v.

NOTE: This hairsetter has an internal automatic converter which will automatically convert the voltage without the need of a switch. A suitable plug adaptor will be required, please refer to the chart below.

Plug adaptor required	Voltage and plug adaptors	Country	Voltage setting
	British plug: 240V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)	240V
	European plug: 240V	Asia, Europe, Middle East, Noumea, Scandinavia, South America, Hong Kong (parts only)	240V
	Australian and New Zealand plug: 240V	Australia, New Zealand	240V
	American plugs: 120V	North America, Japan, Canada (parts of)	120V

What is Ceramic Technology™?

Hair damage is minimised, as the ceramic heat delivers even heat distribution from the styling appliance, avoiding harmful and damaging hot spots. Ceramic heat is a gentle, faster styling tool that retains heat longer versus non-ceramic heat for faster, superior styling results with enhanced shine.

Cleaning and Maintenance

Your appliance is designed for household use and is virtually maintenance-free. This product represents the highest standards of workmanship and engineering research.

If cleaning becomes necessary, disconnect the appliance from the power outlet. Allow the hairsetter to cool. Clean the unit and the heating plates with a damp cloth. (Occasionally you may want to clean the rollers. Use a damp cloth and mild detergent or soap).

If any abnormal condition occurs, unplug the appliance, allow to cool and return it to your place of purchase.

Limited Two-Year Warranty

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS Sassoon website www.vssassoon.com.au


To make a warranty claim you must retain your proof of purchase. Further details can be found at www.vssassoon.com.au and click on 'customer service'.

Get more from your styling tools, visit
www.vssassoon.com.au
for news, styling tips and much more.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair
©2014 Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Customer Service Hotline (Australia): 1800 650 263
Customer Service e-mail: aus_info@conair.com
Conair New Zealand Ltd.,
PO Box 251159, Pakuranga, Auckland, 1706, New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

VS
SASSOON

VS
SASSOON

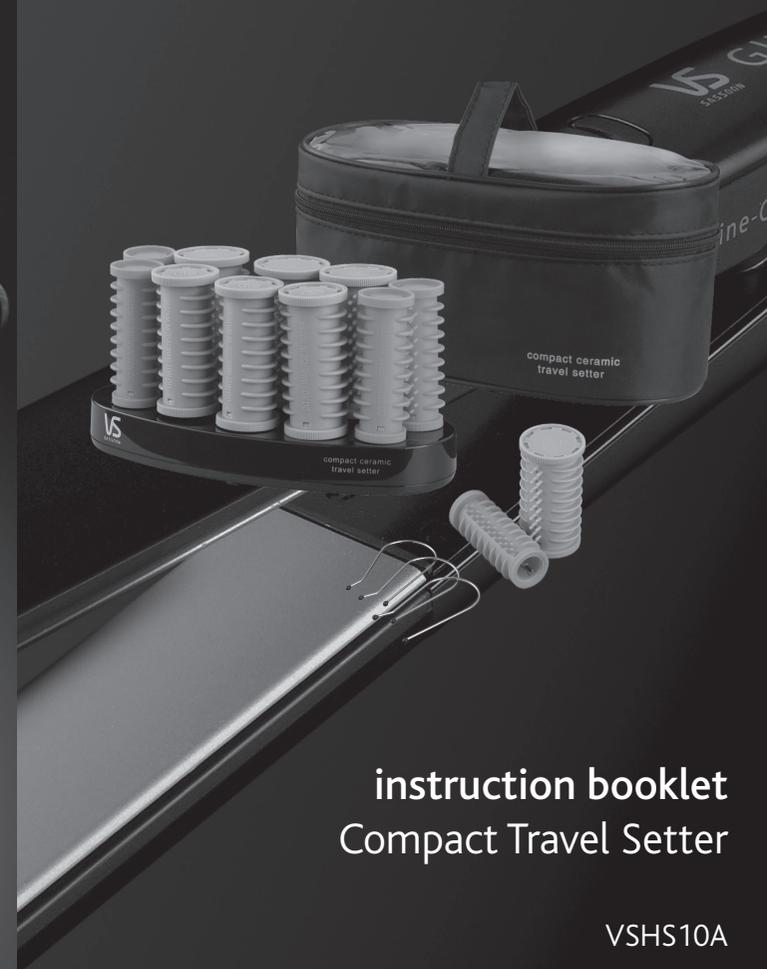

instruction booklet
Compact Travel Setter

VSHS10A

LONDON • NEW YORK • SYDNEY
JOIN THE EVOLUTION.™

IB-8/490C