

VS
SASSOON

INSTRUCTION
BOOKLET

Luxe

2200W SUPER POWER DRYER

VSLE5737LA

ABOUT YOUR DRYER

CONGRATULATIONS!

Lovers of sleek style as well as drying natural curls can have it all with this essential styling pack. Ideal for all hair types.



1. 2200W Lightweight Dryer
2. Heat/Speed Settings including Cool Shot
3. Argan Oil Infused Outlet Grill
4. Concentrator
5. Diffuser
6. Removable Rear Filter
7. Hanging Loop
8. 4x Rollers
9. 2x Sectioning Clips
10. Extra Large Luxury Cosmetic Case

2200 WATTS

Dry, style & get fast results with a dryer that is fitted with a powerful motor.

COMPACT & LIGHT WEIGHT

Style, smooth & dry your hair with comfort & control.

6 CONTROL SETTINGS

3 heat/speed settings, plus a cool shot to finish & set your style.

ARGAN OIL INFUSED

Results in smoother hair with gorgeous shine.

CONCENTRATOR

Used to direct the airflow along the length of your hair & help you to style with greater precision.

DIFFUSER

Used to build life, volume & dry your natural curls.

HANGING LOOP

Storing this dryer is super easy with a hanging loop.

FIRST USE

- Remove all packaging & point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation)

OPERATING INSTRUCTIONS

- Wash, condition & towel dry your hair
- Make sure the switch is set to the off ('0') setting before plugging into a suitable power outlet.
- Use the high setting II for initial drying or drying thick, hard to dry hair.
- Switch to the low setting I as the hair begins to dry & for styling & scrunch drying.
- If your hair is very fine & damaged, it may be best to use only the low setting.
- To finish, use the cool setting to cool the hair & set the style in place.

CAUTION: Take care not to direct the airflow directly onto the skin (e.g. scalp, neck, ears, face, etc.) as hot air from the hairdryers can, particularly if held too close, cause discomfort or even burns.

IMPORTANT: Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

THE ATTACHMENTS

Concentrator

Concentrator nozzles are designed to direct the airflow from your hair dryer to just where you want it, to ease styling & straightening. Nozzles also help you to direct the airflow along the length of the hair from roots to ends. This is important because it helps to smooth the outer surface or cuticle of the hair giving your hair style a smoother finish. For additional control try using one of the lower speed settings with a higher heat. Care should be taken not to direct the air flow directly onto the skin (e.g. the scalp, neck, ears & face). Never rest the concentrator nozzle on the hair & brush to hold it in place! You should always leave a 2cm to 3cm gap between the end of the nozzle & the hair around the brush.

Diffuser

The volumising diffuser attachment is designed to build life and volume into short to medium length hair, for drying any length of naturally curly hair and for scrunch drying to build and enhance curl in wavy and loose curly hair. The diffuser works by softening the air flow from the hairdryer and should always be used on the lowest speed and heat setting to enable it to operate at its most efficient. Cup the weight of your hair into the bowl of the diffuser and cup the edges of the diffuser with your free hand to prevent your hair blowing around.

USER MAINTENANCE

Blocked or clogged air intake vents will cause the dryer to overheat. The rear filter should be checked & cleaned on a regular basis. To help maintain optimum performance & prevent overheating of your hairdryer:

- Ensure that your styler is switched off, unplugged from the power outlet & has cooled down.
- Using a soft brush, clean any hair & other debris that may build up in the filter.

If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the dryer or heat turns off, unplug the cord & allow the dryer to cool for 15 minutes before restarting. Make sure the air vents are 100% clean.

STYLE TIPS

STRAIGHT

// Create a smooth straight look by using your dryer with the ultra-slim concentrator nozzle. Divide your hair into sections & hold the hair taut using a brush whilst directing the airflow down the hair shaft.

VOLUME

// Create tousled natural-looking waves with lots of volume by using your dryer without the nozzle. Flip your head upside down. Grasp your hair at the roots & scrunch between your fingertips whilst drying. When dry, finger comb to arrange your hair as required. Remember to keep it casual & tousled for maximum volume.

CURLS

// Enhance your natural curls by using your dryer on the lowest speed setting & lowest heat setting: it literally diffuses & softens the airflow, which helps to form, not frizz, your curls.

EXPERT TIP

// Set your style by finishing with the cool or setting. Finish with a spritz of light hold hair spray, for extra hold if needed.

LOVE YOUR STYLE™
vssassoon.com.au

2 YEAR WARRANTY

Retain this section of the warranty card with your receipt/proof of purchase. You must present it to obtain replacement or service under the warranty.

The warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice. Attach a copy of your purchase receipt & store in a safe place.

To make a warranty claim call Customer Service on the phone number below or email aus_info@conair.com or you can return the defective product back to the place it was purchased where it will be replaced (see Point 12 in Conditions).

Please provide the following details:

1. Date of purchase
2. Retailer Name & Location:
3. Product Name/Model Number:
4. Confirm you have your purchase receipt:
5. Detail the problem with your product:

Conair Australia Pty Ltd
PO Box 146
Terrey Hills
NSW 2084

Conair New Zealand Ltd
PO Box 251159
Pakuranga, Auckland
New Zealand 2140

CONAIR

Certain trademarks used under license from The Procter & Gamble Company or its affiliates.

©2019 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

CUSTOMER SERVICE:
Australia: 1800 650 263
New Zealand: 0800 266 247

CONTACT US:
For advice, tips on your new VS product
E-mail us on: aus_info@conair.com

vssassoon.com.au

VSLE5737LA

Customer Service
Australia
1800 650 263
email : aus_info@conair.com

WARRANTY AGAINST DEFECTS

A. AUSTRALIAN CONSUMER LAW

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure & compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality & the failure does not amount to a major failure. 2. The guarantees under the Australian Consumer Law ("ACL") are provided in sections 51 to 59 inclusive of the ACL ("Statutory Guarantees") & the remedies are provided in sections 259 to 266 inclusive of the ACL ("Statutory Remedies").

B. VS SASSOON EXTENDED WARRANTY

1. In addition & subject to the Statutory Guarantees & Statutory Remedies, the following express warranty ("Warranty") commences from the date of purchase & continues for a period of 60 months ("Warranty Period") after which it expires. Subject to the conditions in Section C below, Conair warrants to the original purchaser ("Purchaser") of the VS Sassoon product that is the subject of this warranty ("Product") that if during the Warranty Period, the Product suffers from any defect caused by faults in materials or workmanship, Conair will a) replace the Product, or b) exchange defective parts in the Product or c) repair the Product, as Conair may choose in its discretion ("Warranty"). In this Warranty "Conair" means Conair Australia Pty Limited (ABN 64 068 492 044) of The Equinox Centre, Suite 101, 18 Rodborough Rd, Frenchs Forest, NSW, 2086. in relation to Products purchased in Australia & Conair New Zealand Ltd in relation to Products purchased in New Zealand.
2. To honour the Warranty, Conair must replace, or exchange parts in, or repair, the Product, as Conair determines, in accordance with paragraph B1 above, subject always to the conditions in Section C below.
3. If any of the conditions in Section C below are inconsistent with any provisions of the ACL or regulations made thereunder, those provisions of the ACL or regulations shall prevail to the extent of the inconsistency.

C.CONDITIONS

1. The Product must be used in accordance with manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Product be attributable to misuse, abuse, accident, act of God such as lightning, or nonobservance of manufacturer's instructions on the part of the user. This Warranty does not cover ordinary wear & tear in the Product or its parts.

Customer Service
New Zealand
0800 266 247
email: aus_info@conair.com

2. Conair does not accept liability for a) any loss or damage however suffered, caused by or arising out of any failure to use the Product in accordance with the manufacturer's instructions, & b) any indirect, consequential or economic loss or damage however caused.
3. This Warranty is immediately void if – a) any serial number or appliance plate is removed or defaced, b) the Product has been serviced or otherwise repaired by a person not authorized to do so by Conair or where non approved replacement parts are used.
4. The Product is designed for domestic use only. The Product must be connected to the electrical voltage supply as specified in the ratings label located on the Product. This Warranty does not cover defects arising from non-domestic use or incorrect voltage supply.
5. This Warranty may only be claimed against where proof of original purchase is presented, for example, original receipt or invoice.
6. Any parts of the Product that need to be replaced, or if the whole Product needs to be replaced, the replaced Product, become the property of Conair. The Warranty on any replacement Product or parts will expire on the same date that the Warranty Period on the original Product expires.
7. The benefits provided by this Warranty are in addition to all other rights & remedies in respect of the Product which the Purchaser has under the ACL, & applicable laws in New Zealand, which rights & remedies by law may not be excluded. All other warranties & representations express & implied are hereby excluded.
8. The defect must have occurred during the Warranty Period & Purchaser bears the onus of proving that fact, & that the defect was not caused by any of the causes excluded from this Warranty.
9. This Warranty does not cover Products purchased from any person who is not a retailer serviced by Conair's authorised distributors or purchased second hand.
10. The Purchaser is responsible for all postage & freight charges & any other expenses incidental to claiming against this Warranty.
11. The Warranty excludes consumable items (such as blades or brushes) & normal wear & tear.
12. If you're certain your product is defective, & the product is covered by the terms of this warranty, you need to take the product back to the place you purchased it from, where the retailer will replace the product for you on our behalf. In this event, per the terms of this warranty you will need to present this portion of the warranty card & the purchase receipt as proof of purchase so please make sure you keep both this card & your receipt on hand for the duration of the warranty period.

SPARE PARTS

Replacement parts may be available for your product. Contact us on the phone or email address provided for more details. Please provide your product name/model number details, date of purchase & part you require.

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully & keep for future reference.

DANGER

- WARNING: Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- If this appliance falls into water, unplug it immediately - DO NOT reach into the water.
- Burn hazard. Keep appliance out of reach from young children, particularly during use & cool down.
- When the appliance is connected to the power supply, never leave it unattended.
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

WARNINGS: Before & During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the



air openings free of lint & other debris.

- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.
- WARNINGS:** for Storage & Maintenance
- Always unplug the appliance immediately after use & before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

CAUTION

- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience & knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person - responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use & as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.