



TURBO POWER CLIPPER

Model VSM318DNA

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: Unplug unit when not in use. All appliances are electrically live even when switched off.

WARNING: This appliance must not be taken into a bathroom.



- This appliance should only be used as described in this booklet. Please retain for reference.
- Do not immerse in water or other liquids.
- Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Use this appliance only for its intended use as described within

this instruction booklet.

- This appliance is not intended for commercial use.
- Never drop or insert any object into any opening.
- Ensure appliance is switched off before plugging it into the power outlet.
- Do not place appliance on any surface while it is operating.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

TURBO POWER CLIPPER

Thank-you for purchasing the VS Sassoon for men Turbo Power Clipper, a professional grade rechargeable clipper with titanium blades, taper control and 50% more power to give you the edge you need in looking good.

The Turbo Power Clipper is a direct drive cord/cordless powerful clipper with a range of accessories.

Features:

- 1) Titanium Blade technology
- 2) Turbo Boost Power Button
- 3) 5 position taper adjustment lever
- 4) On/Off switch
- 5) Charging Indicator light
- 6) Charging adaptor
- 7) 8 x Clipper Cutting guides
- 8) Left and right ear comb guides
- 9) Barber comb
- 10) Blade Cover
- 11) Cleaning Brush
- 12) Lubricating oil
- 13) Storage pouch
- 14) 6 sectioning clips
- 15) Nose and ear trimmer head
- 16) 2 x blending comb attachments for 20mm trimmer



INSTRUCTIONS FOR USE

CORDED USE – OPERATION WITH THE POWER CORD

IMPORTANT: Only use the mains adaptor supplied with this appliance.

1. Ensure the clipper is switched off.
2. Connect the adaptor to the base of the clipper and plug the adaptor into a suitable AC 100/240V mains socket.
3. The clipper is now ready for use.
 - NOTE: The clipper should not be used for longer than 20 minutes when operated from the mains.

CORDLESS USE - CHARGING

1. Ensure the clipper is switched off.
2. Connect the adaptor to the base of the clipper and plug the adaptor into the mains.
3. The Charging Indicator Light will indicate that the adaptor is connected to the main unit and is plugged in.
4. When charging for the first time, or when the clipper has not been used for a considerable time, the appliance must be charged continuously for 16 hours. This will provide around 40 minutes of use.
5. Ordinarily, this clipper may be charged overnight.
6. Once the clipper is charged, unplug the adaptor from the mains and disconnect from the appliance.
7. The appliance is now ready for use.

BEFORE USE

Always inspect the appliance to ensure the clipper head is free from hair, etc. and is running smoothly. Check also for signs of damage and ensure that the tips of the two blades are parallel. Failure to do this can result in injury.

The appliance is supplied with a left and right ear comb guide and 8 hair combs. The comb guides are marked with the following grade number:

- Grade 1 = 3mm
- Grade 2 = 6mm
- Grade 3 = 9.5mm
- Grade 4 = 13mm
- Grade 5 = 16mm
- Grade 6 = 19mm
- Grade 7 = 22mm
- Grade 8 = 25mm

USING THE COMB GUIDES

1. Ensure the clipper is switched off.
2. Slide the comb guide over the top and sides of the blades and pull down over the back of the blades until it clicks into place.

TO REMOVE COMB GUIDE

1. Switch the appliance off.
2. Push the base of the comb guide away from the blades.

ADJUSTABLE TAPER LEVER

The adjustable taper lever enables the cutting length to be adjusted between grade lengths.

1. To increase the cutting length, push the lever down.
2. To reduce the cutting length, push the lever up.

BEST CUTTING PERFORMANCE

1. Ensure the clipper is sufficiently charged.
2. Use on clean, dry hair that has been combed until tangle-free.
3. Attach the appropriate clipper guide as required. If using more than one grade, start with the longer first.
4. Switch the clipper on.
5. Hold the clipper against the hair, the teeth of the clipper pointing upwards, yet flat against the head.

6. Move the clipper upwards and outwards through the hair, a little at a time clipping against the direction of the hair growth.
7. The clipper will work most efficiently when cutting through the hair at its own speed. Never force the clipper.
8. Never switch the clipper off whilst in the hair.

TURBO BOOST FEATURE



This clipper is equipped with a turbo boost button. When activated, this will provide 15% more cutting power. This is useful for cutting through thicker hair.

CLEANING & MAINTENANCE

After each use, clean the head as follows:

1. Switch the clipper off or unplug if mains operated.
2. Remove the head from the clipper as shown below (fig 1).
3. Using the cleaning brush, gently brush and blow any hairs from the blade and head.
4. Replace the head as shown below (fig 2). Make sure that the taper lever is set to the lowest position before replacing blade.
5. Do not disassemble the blades for cleaning.

When used regularly, it is advisable to oil the blades before use. After cleaning, switch the appliance on, and oil the blades by adding a few drops of the oil supplied over the blades. Only use the lubricating oil supplied with this appliance as this is specifically formulated for high speed clippers and does not evaporate or slow the blades.

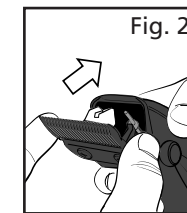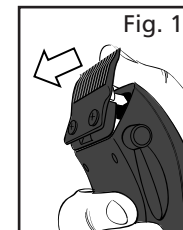

BATTERY DISPOSAL

This appliance contains Ni-MH batteries. To protect the environment, the appliance must be disposed of safely at the end of its life. Please take to a recycling centre for safe disposal.

LIMITED TWO YEAR WARRANTY

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS For Men website www.vsformen.com.au

Please retain a copy of your purchase receipt as proof of purchase within the warranty period.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair

CONAIR®

Conair Australia Pty Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia Customer Service Hotline (Australia): 1800 650 263
Customer Service e-mail: aus_info@conair.com
Conair New Zealand Limited, PO BOX 251159, Pakuranga, Auckland
1706 New Zealand
Customer Service Hotline (New Zealand): 0800 266 247

IB-13/069A