

VS
SASSOON

FOR MEN



THE TRIM BUDDY

TOOL TIPS

for the lithium powered nose, ear
& facial hair trimmer.

VSM702A

HEY YOU!
TAKE A BOW FINE SIR.

THINGS ARE LOOKING UP
& **YOU'VE JUST MADE A
QUALITY PURCHASE**
WITH THIS NEW GROOMING TOOL.

WE KNOW YOU'VE GOT THIS, BUT BEFORE YOU JUMP INTO
USING YOUR NEW SIDE KICK, HERE'S A FEW TIPS & TRICKS
TO KNOW BEFORE LETTING YOUR CREATIVITY RUN LOOSE.

 
HIT UP VSFORMEN.COM.AU FOR MORE GROOMING & INSPIRATION.



THE TRIM BUDDY

BRAVO. YOU'VE MADE A QUALITY PURCHASE.

The Trim Buddy is the lithium powered nose, ear & facial hair trimmer.

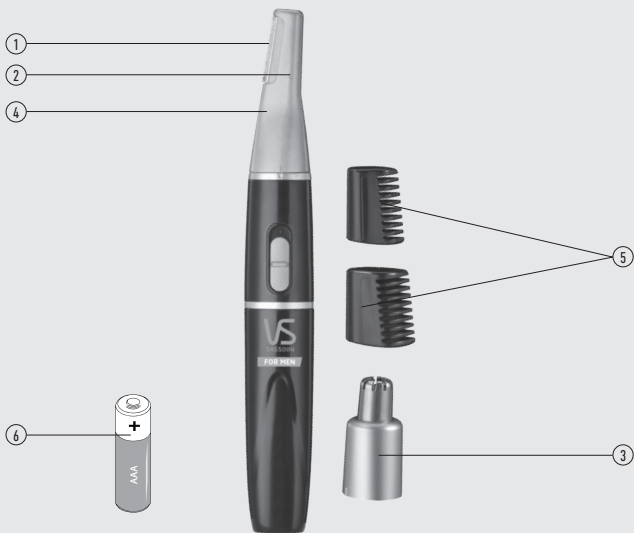

- 1. Diamond sharpened blades
- 2. Linear Trimming Blade
- 3. Rotary Trimming Blade

- 4. Removable washable blades
- 5. 2 comb guides (4mm & 7mm)
- 6. 1x AAA lithium battery

PREPPING YOUR NEW TOOL

INSERTING THE BATTERY

- To insert the AAA lithium battery, first ensure that the trimmer is switched off. Then remove the battery compartment cover at the back of the appliance by pulling straight down (Fig.1). Insert the AAA lithium battery, negative end up.
- If the appliance remains unused for a while or if the battery has run down, remove from the appliance. This will increase the life of the trimmer.
- After inserting the battery, replace the battery compartment cover.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the appliance prior to battery installation.
- Ensure the battery is installed correctly with regard to polarity (+ and -).
- Exhausted batteries are to be removed from the appliance and safely disposed of.
- When the battery has run down, it should be disposed of at a recycling centre to safeguard the environment. If the battery leaks avoid touching and dispose of at a recycling centre.
- Non-rechargeable batteries are not to be recharged.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel cadmium) batteries.
- Store unused batteries in their original packaging, away from metal objects that could short-circuit them. Never short-circuit batteries.

 


Fig.1

BEFORE USING

- Always inspect the trimmer for noticeable signs of damage.
- Always inspect the trimmer before use to ensure the blades are free from hair, debris etc.
- Ensure the battery is correctly inserted before use.
- For best performance use on clean, dry hair that has been combed until tangle-free.

USING THE COMB GUIDES

The Trim Buddy comes with 2 comb guides for precise trimming of your neckline, sideburns & eyebrows.

SMALL COMB - 4MM	For trimming sideburns
LARGE COMB - 7MM	For trimming eyebrows

ATTACHING A COMB GUIDE

To attach a comb guide, ensure that the trimmer is switched off. Slide the comb guide over the top of the linear trimming blade. When attaching the comb guide, make sure that the teeth of the comb and the linear trimming blade are facing in the same direction and that the top of the comb guide is even with the top of the trimmer.

REMOVING A COMB GUIDE

To remove the comb guide, ensure the appliance is switched off. If you want to completely remove hair, use the linear trimming blade without the comb guide. The comb guides are great for pre-trimming and at-length trimming.

CHANGING THE TRIMMING BLADES

To remove a trimming blade, turn the head counter clockwise until the 'I' mark aligns with the "•" mark, then lift the head gently (Fig. 2). To attach a trimming blade, align the "I" mark on the head with the "•" mark on the body and then turn clockwise until the "I" marks are aligned and locked into position (Fig.3).



Fig.2

 


Fig.3

CAUTION: WHEN REMOVING THE BLADE OR COMB GUIDE ATTACHMENT, BE CAREFUL NOT TO CUT YOUR FINGERS AS THE BLADES ARE SHARP.

TRIMMING TIPS

Hit up www.vsformen.com.au for more grooming & inspiration.

USING THE LINEAR TRIMMING BLADE

1. Attach the linear trimming blade.
2. Switch the trimmer on by sliding the On/Off switch upwards so that the "I" marking is visible.
3. Place the trimmer at a slight right angle to the skin and trim in the direction of hair growth. It is suggested to trim the hair in the direction of hair growth, as trimming against the direction of growth could cause a rash or irritation.
4. Pull the skin firmly with one hand during the trimming process to ensure the closest trim possible.
5. Move the trimmer slowly and carefully, so as not to cut any hair you do not intend to trim.
6. Trim, shape and define your facial hair as needed.

NOTE: Be careful not to apply excess pressure to the blade, as this may damage the blade and can result in injury to the skin during trimming.

USING THE ROTARY BLADE

1. Attach the rotary trimming blade.
2. Switch the trimmer on by sliding the On/Off switch upwards so that the "I" marking is visible
3. Insert the trimmer into the nose or ear and gently move the trimmer in a circular motion.
4. Always turn the trimmer on BEFORE you insert into your nostril or ear canal to avoid painfully snagging hairs.
5. Never insert the trimmer more than 5–6mm into your nose or ears.
6. Never turn the trimmer off whilst in the nose and ears.

TRIMMER CLEANING & MAINTENANCE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. To ensure long-lasting performance of your trimmer, it is important to clean the blades after every use.

The blades are washable for easy cleaning.

To remove the trimming blade, follow the instructions at **CHANGING THE TRIMMING BLADES**.

1. First, take a small brush and brush away any loose hairs that have collected in the blades.
2. Rinse the trimming blades under running water (Fig. 4).
3. For proper functioning of the trimmer, the handle cannot touch or be immersed in water.
4. After cleaning, make sure to shake off excess water and dry the heads of the trimming blades before replacing onto the handle.

To clean the handle of your Trim Buddy, simply wipe with a cloth that has been dampened in water and mild detergent.

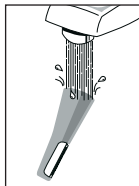 


Fig.4

NEVER IMMERSE THE HANDLE OF THE TRIMMER IN WATER.

LIMITED TWO YEAR WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials.

This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com.

**TO MAKE A WARRANTY CLAIM YOU MUST
RETAIN YOUR PROOF OF PURCHASE.**

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, remove the batteries after use since the proximity of water presents a hazard even when the appliance is switched off.



WARNING: Do not use or leave the trimmer in a position where it can become wet or there is a danger of it falling into a basin or other vessels containing water. Keep the appliance dry, unless it otherwise specified. Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.

- Do not immerse appliance in water or other liquids.
- Do not reach for an appliance that has fallen into water.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always ensure the appliance is switched off when not in use or before cleaning. Do not leave unattended when switched on. Do not place on any heat sensitive surface.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Do not place on any surface while it is operating.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use the appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.



Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under license by Conair.

©2016 Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW 2086
Australia

Conair New Zealand Limited
PO BOX 251159
Pakuranga, Auckland 1706
New Zealand

CONTACT US

For advice & tips on your new VS product email us on:
aus_info@conair.com

CUSTOMER SERVICE

Australia: 1800 650 263
New Zealand: 0800 266 247

Visit VSFORMEN.COM.AU for grooming tips & inspiration.

VS
SASSOON

FOR MEN

**YOU WERE
BORN TO
BE REAL,
NOT TO BE
PERFECT**

IB-16/178