

VS
SASSOON

FOR MEN



THE V DOUBLE

TOOL TIPS

for the dual blade self-cut clipper
for a faded or short even cut.

VSM7575A

HEY YOU!
TAKE A BOW FINE SIR.

THINGS ARE LOOKING UP
& **YOU'VE JUST MADE A
QUALITY PURCHASE**
WITH THIS NEW GROOMING TOOL.

WE KNOW YOU'VE GOT THIS, BUT BEFORE YOU JUMP INTO USING YOUR NEW SIDE KICK, HERE'S A FEW TIPS & TRICKS TO KNOW BEFORE LETTING YOUR CREATIVITY RUN LOOSE.

HIT UP VSFORMEN.COM.AU FOR MORE GROOMING & INSPIRATION + HANDY VIDEOS ON HOW TO GET THE MOST OUT OF YOUR NEW V DOUBLE.



THE V DOUBLE

BRAVO. YOU'VE MADE A QUALITY PURCHASE.

The V Double is the dual blade self-cut clipper for a faded or short even cut.



1. Innovative dual blades
2. Diamond sharpened blades
3. Lithium-ion power
4. DC direct drive motor
5. Cordless use

6. Ergonomic design fits in the palm of your hand
7. 4 comb guides - Grades #1 - 4 (3mm to 13mm)
8. Ear taper cutting comb guide

9. Removable, washable blades
10. Storage pouch
11. Cleaning brush
12. Oil



PREPPING YOUR NEW TOOL

CHARGING

The V Double is so easy to use. But before you start using your new tool, you must take the time to charge it for **3 hours** before its first use. Your new tool comes with a small amount of charge, but the initial super charge will ensure your new tool will have optimum power performance to give you smooth fast cutting, every time.

- Before using for the first time, fully charge your new tool continuously for 3 hours.
- Maximum battery capacity will only be reached after 3 charging & discharging cycles.
- Ensure your new tool is switched off.
- Insert the small plug on the charging adaptor into the socket on the side of your new tool.
- Plug the charging adaptor into a suitable mains power socket and switch on.
- The red charging LED indicator light on your new tool will flash when correctly connected to the mains power. When it is fully charged, the red charging LED indicator light will remain on.
- A full charge will supply 60 minutes cordless runtime.
- A quick charge of 30 minutes will supply 15 minutes cordless runtime.
- When the clipper is about to run out of energy, the charging LED indicator light will flash to indicate that there is less than 15% battery capacity remaining.
- To maintain optimum capacity of the li-ion battery, it is highly recommended to fully discharge & then recharge your tool for 3 hours every 6 months.

WARNING: IF THE CHARGING LIGHT SUDDENLY STARTS TO FLASH RAPIDLY, THE APPLIANCE IS FAULTY. IF THIS DOES HAPPEN, PLEASE STOP CHARGING AND REMOVE THE ADAPTER FROM THE POWER SOURCE AND CONTACT OUR CUSTOMER CARE CENTRE FOR FUTHER ADVICE.

OILING THE BLADES

To get the sharpest, most precise cut, it is highly recommended to oil the blades before each use.

Using the oil supplied with your new tool, unscrew the cap & cut off the very end of the plastic tube with a pair of scissors to release the oil.

Switch your tool on, gently squeeze the oil tube & apply 5 drops of oil onto both side of the dual blades. Leave the tool on for a further few seconds to allow the oil to thoroughly spread across each of the blades. Switch off the tool & remove any excess oil by gently dabbing with a cloth.

TO GET THE SHARPEST, MORE PRECISE CUT,
IT IS HIGHLY RECOMMENDED TO OIL THE BLADES
BEFORE EACH USE.

GETTING TO KNOW YOUR NEW TOOL

The V Double has an ergonomically designed head to fit in the palm of your hand for an easy 'DIY' hair cut. It is similar to a traditional clipper, but with the convenience of 2 blade sets, instead of 1.

The V Double allows you to keep it long on top & faded on the sides or short all-over. You decide.

A MODERN TAKE ON THE TRADITIONAL CLIPPER

Just like riding a bike, new things can take some practice, and The V Double Cut is no different. The more you use it, the more comfortable you become.

This clipper has been designed with a dual blade system, so its quite similar to how to use a traditional clipper to self-cut, but its made even easier with additional of the dual blade system.

FOR AN ALL-OVER SHORT CUT

Start cutting at the back of the head, near the nape of the neck. Hold your new tool with the teeth of the clipper pointing upwards, so that the comb guide is flat on the head. Slowly move the clipper upwards through the hair and towards the front of the head in a forwards sweeping motion. Once at the front of the head, engage the opposite blade in a backward sweeping motion to move from the front of the head, to the nape of the neck.

Continue with this sweeping cutting motion, running from the nape of the neck to the front of the head until you reach an all-over same length.

HANG IN THERE!

When you first begin cutting, you may notice that some hair is being cut while other are left long – this is perfectly normal, especially if you are cutting longer hair. This is because hair grows in different directions. Continue cutting in a back and forth sweeping motion until all hair is cut to the same length.

FOR LONGER ON TOP & FADED ON THE SIDES

The V Double now makes it even easier to create a DIY faded look on the sides, with a longer length on top.

SLOWLY MOVE THE CLIPPER UPWARDS THROUGH THE HAIR IN A FOWARDS SWEEPING MOTION, USING BOTH SIDES OF THE CLIPPER BLADES.

HOW TO USE THE V DOUBLE

BEFORE USING

- Always inspect the clipper for noticeable signs of damage.
- Always inspect the clipper before use to ensure the blades are free from hair, debris etc.
- Ensure the clipper blades are well oiled before using.
- Ensure the clipper is sufficiently charged before use.
- For best performance use on clean, dry hair that has been combed until tangle-free.
- Prior to use always inspect the head for warts, moles, spots and broken skin. If using the clipper on yourself either use mirrors or ask another person to check for you.
- Special care should be taken when cutting hair in areas that have warts, moles, spots or broken skin, to prevent injury.
- Remove any head jewellery such as earrings and necklaces before use.

The V Double is for use on the head only. Never use this clipper on the face or any other area of the body.

SELECTING A CUTTING LENGTH

The V Double comes with 4 lock-in comb guides + an ear taper guide for trimming around the ears.

GRADE #1	3mm
GRADE #2	6mm
GRADE #3	9.5mm
GRADE #4	13mm
EAR TAPER	Tapering around left & right ears

ATTACHING THE COMB GUIDE

To attach a comb guide, make sure the clipper is switched off.

While holding the clipper with the blades facing upwards, place the comb guide over the top of the dual blades and slide each of the sides of the comb guide into the slots either side of the blades until it clicks into place.

REMOVING THE COMB GUIDE

To remove the comb guide, place your fingers each side of the comb guide and gently pull down and away from the clipper.

GOOD TO KNOW!

The V Double can also be used without the comb guide for an even shorter crew cut. This will cut at a length of 1.0mm.

USING THE EAR TAPER COMB GUIDE

The V Double also comes with a left & right ear taper comb guide. This can be used to trim around and above the ear for a clean finish.

FINISHING THE SIDEBURNS & BACK OF THE NECK

The V Double can also be used without a comb guide attached to finish the sideburns and clean up the back of the neck.

To do this, simply remove the comb guide, flip the clipper over and use the blades for neatening edges.

THE V DOUBLE CAN ALSO BE USED WITHOUT THE
COMB GUIDE FOR AN EVEN SHORTER CREW CUT.
THIS WILL CUT AT A LENGTH OF 1.0MM.

CLIPPING TIPS

Hit up www.vsformen.com.au for more grooming & inspiration + handy videos on how to get the most out of your V Double.

1. Attach the comb guide length of your choice.
2. Switch on the clipper using the on/off sliding switch located on top of the clipper. The green LED will illuminate and the blades will start to move.
3. Hold your new tool with the teeth of the clipper pointing upwards, so that the comb guide is flat on the head
4. Begin cutting on the nape of your neck (fig.1). Slowly move the clipper upwards through the hair and towards the front of the head in a forwards sweeping motion, taking care on areas where there may be warts, moles, spots and broken skin.
5. Once at the front of the head, engage the opposite blade in a backward sweeping motion to move from the front of the head, to the nape of the neck. Continue with this sweeping cutting motion, running from the nape of the neck to the front of the head until you reach an all-over same length.
6. Only apply gentle pressure. Never force the clipper – if resistance is experienced lift clipper away from the head, empty hair from the clipper and resume clipping.
7. If using on areas where there are folds of skin, ensure the skin is stretched taught prior to cutting hair in this area.
8. If you experience any discomfort stop using immediately.
9. Use the ear taper comb guide to around and above the ear for a clean finish. Or, remove the comb guide, flip the clipper over and use the blades for finishing touches on the edges of your sideburn, neck and around the ears.

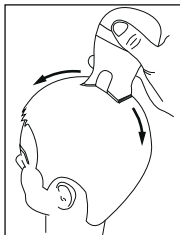


Fig. 1.

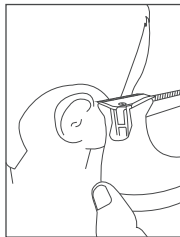


Fig. 2.

GOOD TO KNOW!

The V Double can also be used without the comb guide for an even shorter crew cut. This will cut at a length of 1.0mm.

HANG IN THERE!

When you first begin cutting, you may notice that some hair is being cut while other are left long – this is perfectly normal, especially if you are cutting longer hair. This is because hair grows in different directions. Continue cutting in a back and forth sweeping motion until all hair is cut to the same length.

FOR LONGER ON TOP & FADED ON THE SIDES

The V Double now makes it even easier to create a DIY faded look on the sides, with a longer length on top.

1. Start with the 9.5mm (Grade #3) length comb guide first, depending on how long you want the top part of the fade to be. This can depend on how long your hair is on the top.
2. Remove the bulk of hair on the lower half of the head and sides using the 9.5mm (Grade #3) comb guide, ensuring you stay just below the curvature of the head. Using a sweeping backwards and forwards cutting motion, start cutting at the nape of the neck and work your way around the head from left to right, making sure you stay just below the curvature of the head.
3. Attach the 3mm (Grade #1) shortest length comb guide. In this step you are going to cut the shortest length of the fade. Do not cut your shortest length any higher than above the ear, ideally it should be aligned with the middle of the ear (or lower, if preferred). Using a sweeping backwards and forwards cutting motion, start cutting at the nape of the neck and work your way around the head from left to right.
4. To blend the fade and bridge the gap, attach the 6mm (Grade #2) comb guide and cut the hair between the longest and shortest length that you cut in steps 2 and 3, using the same sweeping backwards and forwards cutting motion, starting at the nape of the neck and working your way around the head from left to right.
5. To cut the length on top of your head, attach the 13mm (Grade #4) longest length comb guide. Starting at the back of the head, above your fade, use a sweeping backwards and forwards cutting motion moving towards the front of the head.

FOR EASY FADING

STEP 1. LONGEST LENGTH FADE	Grade #3 (9.5mm)	STEP 3. MIDDLE LENGTH FADE	Grade # 2 (6mm)
STEP 2. SHORTEST LENGTH FADE	Grade # 1 (3mm)	STEP 4. CUTTING ON TOP	Grade #4 (13mm)

CLIPPER CLEANING & MAINTENANCE

To maintain optimum performance, the appliance should be cleaned after each use:

- Remove the comb guide after use. Rinse the comb guide under running water and dry thoroughly before storage or use.
- For hassle free maintenance the blades can be removed and washed after use. To remove the dual blades, place your thumbs against the edge of the blades and push them away from you. The blades should easily come free. Rinse the blade set under running water and dry thoroughly before storage or use.
- When reattaching the dual blade set, ensure motor spindle is in the actuator arm (fig.3.). To reattach the blade set simply line-up the blades with the base of the clipper and push into place.

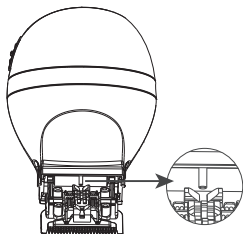


Fig. 3.

- After each use ensure hair is emptied from the blade area and use the cleaning brush to clean thoroughly.
- It is highly recommended to apply a small amount of oil (provided) to the blades before each use.
- Wipe the outside with a damp cloth and dry thoroughly before use or storage.

BATTERY DISPOSAL

The Crew Cut clipper contains a Li-ion battery. To protect the environment, the appliance must be disposed of safely at the end of its useful life.



LI-ION

Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.

For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

FOR MORE INFORMATION ABOUT THE RECYCLING OF ELECTRICAL AND BATTERY OPERATED APPLIANCES, PLEASE CONTACT YOUR LOCAL COUNCIL OFFICE OR YOUR HOUSEHOLD WASTE DISPOSAL SERVICE.

LIMITED THREE YEAR WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for thirty-six months from the date of purchase if the appliance is defective in workmanship or materials.

This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com.

**TO MAKE A WARRANTY CLAIM YOU MUST
RETAIN YOUR PROOF OF PURCHASE.**

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off



WARNING: Do not use or leave the AC power adaptor in a position where it can become wet or there is a danger of it falling into a basin or other vessels containing water. Keep the appliance dry, unless it otherwise specified. Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.

- Do not immerse appliance in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- Always unplug the appliance when fully charged.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Do not place on any surface while it is operating.
- Keep the cord away from heated surfaces
- Never twist or pull on the power cord.
- Do not use an extension cord with this appliance.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use the appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.



Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under license by Conair.

©2016 Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW 2086
Australia

Conair New Zealand Limited
PO BOX 251159
Pakuranga, Auckland 1706
New Zealand

CONTACT US

For advice & tips on your new VS product email us on:
aus_info@conair.com

CUSTOMER SERVICE

Australia: 1800 650 263
New Zealand: 0800 266 247

Visit VSFORMEN.COM.AU for grooming tips & inspiration.

VS
SASSOON

FOR MEN

**YOU WERE
BORN TO
BE REAL,
NOT TO BE
PERFECT**

IB-16/169