

VS
SASSOON

FOR MEN



THE CRAFTED TRIM

TOOL TIPS

for the waterproof beard
& stubble trimmer

VSM7847A

HEY YOU!
TAKE A BOW FINE SIR.

THINGS ARE LOOKING UP
& **YOU'VE JUST MADE A
QUALITY PURCHASE**
WITH THIS NEW GROOMING TOOL.

WE KNOW YOU'VE GOT THIS, BUT BEFORE YOU JUMP INTO
USING YOUR NEW SIDE KICK, HERE'S A FEW TIPS & TRICKS
TO KNOW BEFORE LETTING YOUR CREATIVITY RUN LOOSE.

HIT UP VSFORMEN.COM.AU FOR MORE GROOMING & INSPIRATION.



IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off



WARNING: Do not use or leave the AC power adaptor in a position where it can become wet or there is a danger of it falling into a basin or other vessels containing water. Keep the appliance dry, unless it otherwise specified. Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.

- Do not immerse appliance in water or other liquids.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- Always unplug the appliance when fully charged.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Do not place on any surface while it is operating.
- Keep the cord away from heated surfaces
- Never twist or pull on the power cord.
- Do not use an extension cord with this appliance.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use the appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

THE CRAFTED TRIM

BRAVO. YOU'VE MADE A QUALITY PURCHASE.

The Crafted Trim is the waterproof beard & stubble trimmer.



1. Precision W-Tech blades
2. 32mm wide trimming blade
3. 1 comb guide with 30 positions (0.5mm to 15mm)
4. Short beard guide

5. Integrated grooved wheel adjusts trimming settings
6. Foil shaver
7. 100% waterproof
8. Cordless use
9. Cleaning brush

PREPPING YOUR NEW TOOL

CHARGING

The Crafted Trim is so easy to use. But before you start using your new tool, you must take the time to charge it overnight for 16 hours before its first use. Your new tool comes with a small amount of charge, but the initial charge will ensure your new tool will have optimum power performance to give you smooth fast cutting, every time.

- Before using for the first time, fully charge your new tool continuously for 16 hours.
- Maximum battery capacity will only be reached after 3 charging & discharging cycles.
- Subsequent recharges will only require 8 hours.
- Ensure your new tool is switched off.
- Insert the small plug on the charging adaptor into the socket on the bottom of your new tool.
- The red charging LED indicator light on your new tool will on when correctly connected to the mains power. When it is fully charged, the red charging LED indicator light will remain on.
- A full charge will supply 60 minutes cordless runtime.
- To maintain optimum capacity of the rechargeable battery, it is highly recommended to fully discharge & then recharge your tool for 8 hours every 3 months.

HOW TO USE THE CRAFTED TRIM

BEFORE USING

- Always inspect the trimmer blades and foil shaver for noticeable signs of damage.
- Always inspect the trimmer blades and foil shaver before use to ensure they are free from hair, debris etc.
- If the foil is cracked, broken or loose, do not use it again and replace with a new foil. Using a foil in a faulty condition can cause injury.
- Ensure the trimmer is sufficiently charged before use.
- Do not shave on open wounds, cuts, burns, warts, moles or on sunburned skin.
- Do not use the foil shaver if you suffer from skin irritations or infections, such as psoriasis or eczema. If at all unsure always consult your doctor before use.

SELECTING A CUTTING LENGTH

Your Crafted Trim comes with 1 comb guide with 30 positions (0.5mm to 15mm) for crafting a short stubble look, or keeping your beard in top shape and an integrated grooved wheel control that adjusts the trimming settings in 0.5mm steps. Simply turn the wheel up and down to your desired cutting length setting.

GOOD TO NOTE: Always put the comb guide on BEFORE turning the trimmer on, and turn the trimmer off before removing it.

To remove the comb guide, set the comb guide so its aligned with the triangle mark (Fig. 1). With the trimmer switched off, pull the comb guide up to remove it.

To replace the comb guide, set the comb guide to the triangle mark (Fig. 1). With the trimmer switched off, press the comb guide down then turn the dial to put it on.

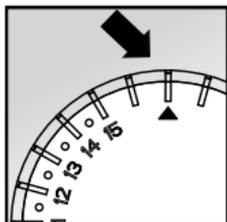


Fig.1

FOR TRIMMING STUBBLE & SHORT BEARDS

The comb guide of your Crafted Trim comes with a special detachable short beard guide. It is specially designed for trimming stubble short beards (positions 0.5mm to 6mm) and ensures an even more accurate cut.

Beyond 6mm, it is recommended to shift the short beard guide to the back of your trimmer in order to maintain an effective cutting performance.

To unlock the short beard guide, carefully push the buttons (Fig. 2) on both sides of the comb guide using your thumb and index finger. Lift the short beard guide up and make it swivel through a 180° angle until it reaches the back of the appliance (Fig. 3).

To put the short beard guide back, unlock it then fold it back over the front of the appliance, until you hear a clicks into place.



Fig.2

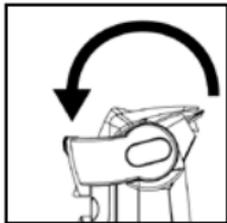


Fig.3

GET IT WET IN THE SHOWER OR SIMPLY USE DRY. YOUR CALL.

Your Crafted Trim is designed for trimming and shaving wet in the shower, or you can use it dry. Your call!

WARNING: The power cord of the adaptor must be unplugged from the handle before using your Crafted Trim in the shower. The charging power adaptor is not waterproof. It should always remain dry.

CHANGING BETWEEN THE TRIMMING BLADE + FOIL SHAVER ATTACHMENT

1. Before changing the attachment heads, make sure your trimmer is switched off.
2. Remove the comb guide from your trimmer.
3. To remove the trimming blade, push the tip of the blade upwards and away from you using your thumb (Fig.4).
4. Slide the foil shaver head over the top of the trimmer handle, then carefully push the shaver head down until you hear it click into place (Fig.5).
5. To remove the foil shaver head, push the base of the foil shaver head upward and away from you using your thumb (Fig.6).
6. To reattach the trimming blade, slide the back of the head over the top of the trimmer handle, then push the blade head downwards.



Fig.4



Fig.5

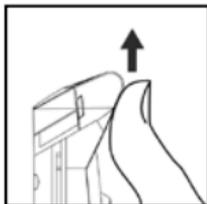


Fig.6

TRIMMING TIPS

Hit up www.vsformen.com.au for more grooming tips & inspiration.

USING THE TRIMMING BLADES + COMB GUIDE

1. Switch the trimmer on by sliding the On/Off switch upwards so that the "I" marking is visible.
2. Select your desired cutting length. To adjust the cutting length of your trimmer, simply turn the wheel up and down (clockwise and anti-clockwise) to your desired cutting length setting. If trimming longer than 6mm, it's advised to move the short beard guide to the back of the trimmer.
3. When trimming, hold the comb guide flat against the skin. For the most precise, consistent trim, the tips of the teeth and the little corners protruding from the comb should always be in contact with the skin. If not, the precision of the cut may change. (Fig. 7-8).
4. It is suggested to trim the hair in the direction of hair growth, as trimming against the direction of growth could cause a rash or irritation.
5. Pull the skin firmly with one hand during the trimming process to ensure the closest trim possible.
6. Move the trimmer slowly and carefully, so as not to cut any hair you do not intend to trim.
7. Trim, shape and define your facial hair as needed.



Fig.7

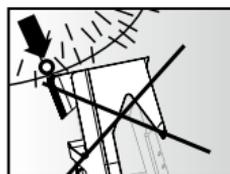


Fig.8

NOTE: Be careful not to apply excess pressure to the blade, as this may damage the blade and can result in injury to the skin during trimming.

USING THE FOIL SHAVER

PREPARING THE SKIN

Before using the foil shaver, make sure that the skin is perfectly clean and free from grease or cream. Exfoliating the skin once or twice a week before shaving helps to maintain healthy and fresh skin, but it also helps to:

- Prevent hairs from growing under the skin, resulting in in-grown hairs
- Remove dead skin cells and refine the texture of your skin, resulting in a closer shave
- Prepare your skin to help it absorb skin care products.

We recommend exfoliating ideally the day before, as well as just before shaving. This will help straighten the hair and make it easier to shave. Avoid exfoliating just after shaving.

Having a warm shower before use will also help to soften the hair.

1. Attach the foil shaving head.
2. Switch the trimmer on by sliding the On/Off switch upwards so that the "I" marking is visible.
3. Always keep the shaver perpendicular to the surface to be shaved.
4. Always work with both hands: stretch the skin with one hand and move the trimmer with the other hand.
5. Slowly move the shaver, exerting light pressure. As a precaution, the operation of the trimmer may slow down substantially if the foil shaving head is pressed too hard against the skin.

BEFORE USING THE FOIL SHAVER, MAKE SURE THAT THE SKIN IS PERFECTLY CLEAN AND FREE FROM GREASE OR CREAM.

TRIMMER CLEANING & MAINTENANCE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. To ensure long-lasting performance of your trimmer, it is important to clean the blades + the comb guide after every use.

The blades are washable for easy cleaning.

To remove the trimming blade, follow the instructions at **CHANGING BETWEEN THE TRIMMING BLADE + FOIL SHAVER ATTACHMENT**.

1. First, take a small brush and brush away any loose hairs that have collected in the blades.
2. Rinse the trimming blades under running water. The comb guide can also be rinsed separately.
3. After cleaning, make sure to shake off excess water and dry the head of the trimming blades + comb guide before replacing onto the handle.

OIL FREE TRIMMING BLADES, THE WAY IT SHOULD BE

The blades of your trimmer have a reservoir pad for releasing the necessary amount of oil for proper operation, time after time.

Nevertheless, it is recommended that the reservoir pad be refilled occasionally when you notice cutting performance is not as high.

To remove the trimming blade, follow the instructions at **CHANGING BETWEEN THE TRIMMING BLADE + FOIL SHAVER ATTACHMENT**. Squeeze a few drops of oil onto the reservoir pad (Fig. 9).

Then replace the blades on the trimmer.

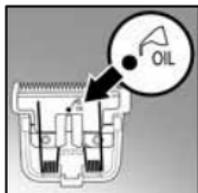


Fig.9

KEEPING YOUR FOIL SHAVER IN TIP TOP SHAPE

To remove the foil shaver head, follow the instructions at CHANGING BETWEEN THE TRIMMING BLADE + FOIL SHAVER ATTACHMENT.

1. To make cleaning easier, the foil of the shaving head is removable.
2. To remove it, press the fasteners on its sides (Fig. 10) using your thumb and your index finger and lift it up.

BE CAREFUL NOT TO PUSH ON THE FOILS, THEY ARE DELICATE AND CAN EASILY BE DAMAGED.

3. Rinse the shaver cutter and foil frame under running water or in a sink. Do not use hot water. Use only warm or cold water.
4. After wet cleaning, allow the foil frame and cutters to air-dry before closing the foil frame and shaver head. The cutter can also be cleaned with a cleaning brush.
5. Replace shaver head back onto the handle until it clicks into place. Wipe the surface of the main unit with a dry towel. Do not dry the foil area. Let the shaving head air-dry.

NEVER use thinners, other solvents or any harsh cleaners.

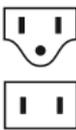 
6. Once the foil shaver is dried, carefully place the protective cap on.



Fig.10

WORLDWIDE VOLTAGE

This appliance has a multi voltage feature for worldwide use. The voltage automatically converts for ease of use from 100v - 240v. This appliance has an automatic internal converter which will automatically convert the voltage without the need of a switch. A suitable plug adaptor will be required, please refer to the chart below.

Plug adaptor required	Voltage and plug adaptors	Country	Voltage setting
	British plug: 240V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)	240V
	European plug: 240V	Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only)	240V
	Australian and New Zealand plug: 240V	Australia, New Zealand	240V
	American plugs: 120V	North America, Japan, Canada (parts of)	120V

BATTERY DISPOSAL

The Crafted Trim contains a Nickel Metal-Hydrate battery. To protect the environment, the appliance must be disposed of safely at the end of its useful life.



Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.

Ni-MH

For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

LIMITED TWO YEAR WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials.

This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com.

**TO MAKE A WARRANTY CLAIM YOU MUST
RETAIN YOUR PROOF OF PURCHASE.**



Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under license by Conair.

©2016 Conair Australia Pty. Ltd.
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW 2086
Australia

Conair New Zealand Limited
PO BOX 251159
Pakuranga, Auckland 1706
New Zealand

CONTACT US

For advice & tips on your new VS product email us on:
aus_info@conair.com

CUSTOMER SERVICE

Australia: 1800 650 263
New Zealand: 0800 266 247

Visit VSFORMEN.COM.AU for grooming tips & inspiration.

VS
SASSOON

FOR MEN

**YOU WERE
BORN TO
BE REAL,
NOT TO BE
PERFECT**

IB-15/011B