

VS
SASSOON

INSTRUCTION
BOOKLET

PREMIER COLLECTION
ULTIMATE SALON ROLLER

VSP3029A

ABOUT YOUR STYLER

CONGRATULATIONS!

The VS Sassoon Ultimate Salon Rollers are an ideal styling product that can be used to create soft, loose waves & curls to large voluptuous curls with extra volume. It features 20 multi-sized rollers in 3 sizes for creating all types of curls: 8 large, 6 medium and 6 small. With ionic conditioning and ceramic tourmaline technology for a silky, smooth finish, a convenient cord keeper system that rewinds the cord inside the base at a touch of a button for no fuss storage, this hairsetter is suitable for all hair types.



- | | |
|----------------------------------|---|
| 1. Ionic conditioning technology | 9. Cool touch roller ends on each of the rollers for comfortable control |
| 2. Ceramic tourmaline technology | 10. Flocked coating on each of the rollers are gentle on the hair |
| 3. On/off switch | 11. Heat ready indicator on centre roller - turns white when rollers are heated |
| 4. On/off indicator light | 12. 12 variable temperature settings from 90°C to 140°C |
| 5. 6 small rollers | 13. Cord keeper system |
| 6. 6 medium rollers | |
| 7. 8 large rollers | |
| 8. 20 smart clips | |

UP TO 140°C

Personalise and select from 12 temperature settings to suit your hair and style requirements.

20 MULTI SIZED ROLLERS

8 large, 6 medium & 6 small rollers for soft loose waves & curls to large voluptuous curls with extra volume.

CERAMIC TOURMALINE TECHNOLOGY

Assists in the deep penetration of heat and is a natural source of negative ions for reduced frizz and silky smooth finish with enhanced shine.

IONIC CONDITIONING

Harnesses an internal ionic generator which conditions hair to reduce static, leaving hair silky and shiny.

RETRACTABLE CORD STORAGE

Rewinds the cord inside the base for no fuss storage.

FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation)

OPERATING INSTRUCTIONS

1. Place the hairsetter on a firm, flat surface. With lid closed and all rollers in place, plug into a suitable power outlet. Your hairsetter is designed with a cord keeper system for no fuss storage. Gently pull the power cord out from the base, ensuring that the power cord is pulled all the way out until you see the red marker. With lid closed and all rollers in place, plug into a suitable power outlet.
2. Once plugged in, turn the unit on by sliding the on/off switch to the on position. The on/off indicator light will turn red and the rollers will begin heating up.
3. Allow rollers to heat with the lid closed, as this will provide the fastest, most efficient heat up. The rollers will be heated and ready to use within 2 minutes. Once the rollers are heated, and the red dot on the centre roller has turned white, you can begin styling your hair. Refer to 'How to Curl and Style Your Hair' for further information.
5. When using the rollers, your hair should be clean and dry, or slightly damp - never wet.

IMPORTANT: When rollers are initially heating up, it is suggested to have the lid closed, as this provides the fastest, most efficient heat-up. When removing rollers to place in the hair, the lid must always be open. Leaving the lid closed when rollers are missing will cause the lid to melt. Take extra caution when heating up the appliance when rollers are missing.

STYLE TIPS

CURLS & WAVES

// To create defined curls and soft waves, place the roller underneath a section of hair no wider than the roller and roll up towards the scalp and secure with a heated clip. Continue throughout the hair until all sections have been styled. For long, lasting defined curls, the rollers should be left in the hair for a longer period of time before removing or until the rollers and clips have completely cooled. For softer, glamorous waves the rollers should be left in the hair for a shorter period of time.

MOVEMENT & BODY

// To create movement and body through the length of the hair, we suggest rolling the rollers into the hair at a slight angle, away from your face. Stop two thirds up the hair section and use the heated clips to secure the rollers. For softer, glamorous waves the rollers should be left in the hair for a shorter period of time. Once the rollers and clips have cooled, remove them from the hair and comb through with your fingers for a natural undone look.

TOUSLED

// For a more tousled look, finger comb the curls to break them up once the hair has cooled.

EXPERT TIPS

// The type of curl achieved depends not just on the size the barrel but also on the section of hair that you wind around the barrel of the curling tong. For looser, free-flowing curls, use bigger sections. Create a more defined, tighter curl by using sections. Pin the curl in the rolled shape and leave to cool for longer lasting results. Finish with a bit of hairspray for extra protection & hold prior to curling.

LOVE YOUR STYLE™
vssassoon.com.au

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Limited Three Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for thirty six months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at aus_info@conair.com.

To make a warranty claim you must retain your proof of purchase.



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair

©2019 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

CUSTOMER SERVICE:
Australia: 1800 650 263
New Zealand: 0800 266 247

CONTACT US:
For advice, tips on your new VS product
E-mail us on: aus_info@conair.com
vssassoon.com.au
VSP3029A

IB-8/122G

THE CORD KEEPER SYSTEM

To use this system, unwind the cord by simply pulling the power cord from the base until it stops. As soon as the red marker is visible on the power cord, stop pulling, the power cord has now reached the maximum length (max length is 1.5m). Do not pull beyond this point, as it could cause damage to the power cord. To rewind the power cord, pull gently on the plug and the cord will begin rewinding inside the base of the hair setter.

CAUTION: Always make sure the power cord is completely unwound before turning the appliance on. The cord rewinds quickly: to avoid injury, hold the plug with one hand, while holding the hairsetter with the other.

VARIABLE TEMPERATURE SETTINGS

The 12 variable temperature settings provide variable heat for many different hair types. These settings allow you to choose the required temperature setting according to your particular need and hair type.

| Temperature Setting Guide | |
|---------------------------------------|------------------------------|
| Variable Temperature Control Settings | Hair Type |
| Setting 1 – 3 (90°C to 100°C) | Delicate, fine hair |
| Setting 3 – 7 (100°C to 120°C) | Average, normal hair |
| Setting 7 - 12 (120°C to 140°C) | Thick and hard to style hair |

HOW TO CURL AND STYLE YOUR HAIR

Ultimate Salon Rollers feature 3 variable sized rollers, allowing for use on all hair types – from medium to long length hair.

NOTE – The firmness of the curl is determined by several factors: heat-up time, best roller selection and the length of time the roller is left in the hair.

Small rollers: use on short hair to create fullness and a tight curl. Tight curls can be used at the nape of the neck, and used to frame your face.

Medium rollers: use on medium to long hair to create a looser curl, yet bouncy and full.

Large rollers: use on medium to long hair to create voluptuous curls with full, extra volume.

1. Select the desired roller size that suits the hairstyle you wish to create and separate hair into equal sections. Ensure that the hair is combed through and free from knots and tangles.

2. Take one section of hair at a time and place the ends of the hair on the roller and wind up towards the scalp, ensuring the ends of the hair section are secured tightly around the roller. Roll hair up firmly and secure by using a metal clip.

3. For tight, firm curls use smaller rollers and leave in the hair for at least 10 minutes before removing. For soft, wavy curls use larger rollers and remove rollers from the hair after a shorter period of time.

4. To remove the roller from the hair, hold roller in one hand while removing the clip with the other. Gently drop the roller out of the hair section – do not pull, and let the curl bounce back after the roller is completely removed. Let hair cool for one minute for a firmly set curl, and then style your hair as desired.

IMPORTANT: After using the hairsetter several times, you will find the best timing for the texture of your hair and for the result you desire.

IONIC CONDITIONING

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution add to the build-up of static electricity in the hair. Even brushing and towel-drying the hair can increase these levels. This static charge causes the scales, or cuticles of the hair, to push hair strands apart, resulting in a rough hair surface. Consequently, hair may have a dull appearance. High levels of static charge cause hair to become 'flyaway' and difficult to style. The advanced internal ionic generator conditions hair by emitting negative ions to reduce static, by leaving hair silky and shiny with reduced frizz.

BUZZING NOISE

This product will make a faint buzzing noise, due to the Ionic conditioning technology™ function. This noise is completely normal, and part of standard operation of this product. To make a warranty claim, you must retain your proof of purchase. Further details can be found at www.vssassoon.com.au and click on 'customer service'.

CERAMIC TOURMALINE TECHNOLOGY

Ceramic tourmaline technology provides even heat distribution. Assists in the deep penetration of heat and is a natural source of negative ions for reduced frizz and a silky, smooth finish with enhanced shine.

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- If this appliance falls into water, unplug it immediately- DO NOT reach into the water.
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down;
- Always place appliance with stand, if any, on a heat-resistant, stable flat surface.
- When the appliance is connected to the power supply, never leave it unattended.

WARNING: Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the



air openings free of lint and other debris.

- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.

WARNINGS: for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

CAUTION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.