



5Q
BRILLIANCE
HAIRDRYER

HEALTHY
HAIR
RADIANT
SHINE

ULTRA-FAST DRYING - 70% FASTER*
BEST FOR LONG TERM HAIR PROTECTION

POWERED BY SMART DIGITAL MOTOR TECHNOLOGY

10X LONGER MOTOR LIFE*

VSP5QA

ABOUT YOUR DRYER

Introducing the VS Sassoon 5Q Brilliance High Performance Hairdryer. Experience the new premium salon quality standard in hair dryers with the dryer that proves not all hot air is the same. The VS Sassoon 5Q features a breakthrough EC Digital Motor technology to dry smarter for the ultimate salon blow dry at home.

NEW ADVANCED SUPER ANTI-FRIZZ TECHNOLOGY WITH 50% MORE IONS~ FOR ENHANCED SMOOTHNESS & SHINE

ULTRA-FAST DRYING - 70% FASTER*

POWERED BY DIGITAL MOTOR TECHNOLOGY BEST FOR HAIR PROTECTION - HEAVY DUTY - 10X LONGER MOTOR LIFE*

ABOUT ADVANCED SMART EC DIGITAL MOTOR TECHNOLOGY:

- Most dryer motors use carbon brushes that wear out over time causing the motor to stop working. This next generation smart EC Digital Motor (also known as Brushless) uses magnets & electronics to drive the motor, extending the life of the dryer by 10x^.
- Ultra-fast airflow delivers superior drying power to reduce drying time.
- Lighter & quieter operation with patented noise reduction technology for up to 40% less noise#.



1. Rear filter
2. Heat & speed settings
3. True cold setting
4. Concentrator
5. Hanging loop
6. Diffuser

ULTRA-FAST SMARTER DRYING POWER	Up to 70%* faster controlled airflow to reduce drying time, even when used on a lower temperature to minimise heat damage.
QUIET TONE NOISE REDUCED	Specifically designed air intake system for up to 40% less noise#.
EC DIGITAL MOTOR	New generation motor uses magnets & electronics to drive the motor to deliver high velocity airflow & heavy-duty long life performance (up to 5,000hrs vs 500hrs for a standard AC motor dryer) for 10x longer motor life^ . Built to last salon performance with a 5 year warranty.
LIGHTWEIGHT & EVENLY BALANCED	Easy comfortable drying with lightweight design. 15% lighter weight^ for easier handling - only 508g.
ULTRA IONIC ANTI-FRIZZ TECHNOLOGY	Superior Ionic Conditioning System delivers 50% more~ frizz controlling active ions to eliminate static & dramatically reduce frizz. Active ions surround the hair to smooth hair & give an ultimate shine boost as you dry.
CERAMIC TECHNOLOGY	Generates full spectrum, infra-red heat which works to help minimise heat damage with fewer hot spots than a standard dryer for better long-term protection of your hair & smooth styling
CONTROLLED STYLING	6 speed & heat combinations & true cold setting with an ultra-slimline concentrator for precision, styling & smoothing.
TRUE COLD SETTING	Lockable true cold setting to finish & set your style with a blast of really cold air.
CONCENTRATOR	Used to direct the airflow along the length of your hair & help you to style with greater precision.
DIFFUSER	Build life, volume & dry your natural curls. Scrunch dry to create texture & loose waves.

THE ATTACHMENTS

Concentrator

Concentrator nozzles are designed to direct the airflow from your hair dryer to just where you want it, to ease styling & straightening. Nozzles also help you to direct the airflow along the length of the hair from roots to ends. This is important because it helps to smooth the outer surface or cuticle of the hair giving your hair style a smoother finish. For additional control try using one of the lower speed setting with a higher heat.

Care should be taken not to direct the air flow directly onto the skin (e.g. the scalp, neck, ears & face). Never rest the concentrator nozzle on the hair & brush to hold it in place! You should always leave a 2cm to 3cm gap between the end of the nozzle & the hair around the brush.

Diffuser

The volumising diffuser attachment is designed to build life & volume into short to medium length hair, for drying any length of naturally curly hair & for scrunch drying to build & enhance curl in wavy & loose curly hair.

The diffuser works by softening the air flow from the hairdryer & should always be used on the lowest speed & heat setting to enable it to operate at its most efficient. Cup the weight of your hair into the bowl of the diffuser & cup the edges of the diffuser with your free hand to prevent your hair blowing around.

SUPERIOR IONIC CONDITIONING

Many aspects of modern living, including air conditioning, contact with man-made fibers & air pollution add to the build-up of static electricity in your hair. Even simply brushing & towel-drying your hair can increase these levels. This static charge causes the scales, or cuticles of the hair, to push hair strands apart, resulting in a rough hair surface. Consequently, your hair may have a dull appearance.

High levels of static charge cause your hair to become 'flyaway' & difficult to style. The advanced internal ionic generator conditions hair by emitting 50% more~ frizz controlling active negative ions to reduce static, leaving your hair silky & shiny with reduced frizz.

FIRST USE

- Remove all packaging & point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation)

OPERATING INSTRUCTIONS

- Wash, condition & towel dry your hair
- Make sure the switch is set to the off ('0') setting before plugging into a suitable power outlet.
- Use the high heat & high speed setting for initial drying or drying thick, hard to dry hair.
- Switch to the low speed setting as the hair begins to dry & for styling & scrunch drying.
- If your hair is very fine & damaged, it may be best to use the low heat setting.
- To finish, use the cold shot button to rapidly cool the hair & set the style in place.

CAUTION: Take care not to direct the airflow directly onto the skin (e.g. scalp, neck ears, face, etc.) as hot air from the hairdryers can, particularly if held too close, cause discomfort or even burns.

IMPORTANT: Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

STYLE TIPS

STRAIGHT

// Create a smooth straight look by using your dryer with the ultra-slim concentrator nozzle. Divide your hair into sections & hold the hair taut using a brush whilst directing the airflow down the hair shaft.

VOLUME

// Create tousled natural-looking waves with lots of volume by using your dryer without the nozzle. Flip your head upside down. Grasp your hair at the roots & scrunch between your fingertips whilst drying. When dry, finger comb to arrange your hair as required. Remember to keep it casual & tousled for maximum volume.

CURLS

// Enhance your natural curls by using your dryer with the diffuser on the lowest speed setting & lowest heat setting: it literally diffuses & softens the airflow, which helps to form, not frizz, your curls.

EXPERT TIP

// Set your style by finishing with the cold shot or setting. Finish with a spritz of light hold hair spray, for extra hold if needed.

LOVE YOUR STYLE™
vssassoon.com.au

5 YEAR WARRANTY

Retain this section of the warranty card with your receipt/proof of purchase. You must present it to obtain replacement or service under the warranty.

Register your product warranty vssassoon.com.au/warranty or vssassoon.co.nz/warranty for warranty support and to stay up to date with the latest news from VS Sassoon.

The warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice. Attach a copy of your purchase receipt and store in a safe place.

To make a warranty claim call Customer Service on the phone number below or email aus_info@conair.com or you can return the defective product back to the place it was purchased where it will be replaced (see Point 12 in Conditions).

Please provide the following details:

1. Date of purchase
2. Retailer Name & Location:
3. Product Name/Model Number:
4. Confirm you have your purchase receipt:
5. Detail the problem with your product:

Conair Australia Pty Ltd

PO Box 146
Terrey Hills
NSW 2084

Conair New Zealand Ltd

PO Box 251159
Pakuranga, Auckland
New Zealand 2140



Certain trademarks used under license from The Procter & Gamble Company or its affiliates.

CUSTOMER SERVICE:

Australia: 1800 650 263
New Zealand: 0800 266 247

CONTACT US:

For advice, tips on your new VS product
E-mail us on: aus_info@conair.com

vssassoon.com.au

VSP5QA

Customer Service

Australia
1800 650 263
email : aus_info@conair.com

WARRANTY AGAINST DEFECTS

A. AUSTRALIAN CONSUMER LAW

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. 2. The guarantees under the Australian Consumer Law ("ACL") are provided in sections 51 to 59 inclusive of the ACL ("Statutory Guarantees") and the remedies are provided in sections 259 to 266 inclusive of the ACL ("Statutory Remedies").

B. VS SASSOON EXTENDED WARRANTY

1. In addition and subject to the Statutory Guarantees and Statutory Remedies, the following express warranty ("Warranty") commences from the date of purchase and continues for a period of 60 months ("Warranty Period") after which it expires. Subject to the conditions in Section C below, Conair warrants to the original purchaser ("Purchaser") of the VS Sassoon product that is the subject of this warranty ("Product") that if during the Warranty Period, the Product suffers from any defect caused by faults in materials or workmanship, Conair will a) replace the Product, or b) exchange defective parts in the Product or c) repair the Product, as Conair may choose in its discretion ("Warranty"). In this Warranty "Conair" means Conair Australia Pty Limited (ABN 64 068 492 044) of The Equinox Centre, Suite 101, 18 Rodborough Rd, Frenchs Forest, NSW, 2086. in relation to Products purchased in Australia and Conair New Zealand Ltd in relation to Products purchased in New Zealand.

2. To honour the Warranty, Conair must replace, or exchange parts in, or repair, the Product, as Conair determines, in accordance with paragraph B1 above, subject always to the conditions in Section C below.

3. If any of the conditions in Section C below are inconsistent with any provisions of the ACL or regulations made thereunder, those provisions of the ACL or regulations shall prevail to the extent of the inconsistency.

C. CONDITIONS

1. The Product must be used in accordance with manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Product be attributable to misuse, abuse, accident, act of God such as lightning, or nonobservance of manufacturer's instructions on the part of the user. This Warranty does not cover ordinary wear and tear in the Product or its parts.

Customer Service

New Zealand
0800 266 247
email: aus_info@conair.com

2. Conair does not accept liability for a) any loss or damage however suffered, caused by or arising out of any failure to use the Product in accordance with the manufacturer's instructions, and b) any indirect, consequential or economic loss or damage however caused.

3. This Warranty is immediately void if – a) any serial number or appliance plate is removed or defaced, b) the Product has been serviced or otherwise repaired by a person not authorized to do so by Conair or where non approved replacement parts are used.

4. The Product is designed for domestic use only. The Product must be connected to the electrical voltage supply as specified in the ratings label located on the Product. This Warranty does not cover defects arising from non-domestic use or incorrect voltage supply.

5. This Warranty may only be claimed against where proof of original purchase is presented, for example, original receipt or invoice.

6. Any parts of the Product that need to be replaced, or if the whole Product needs to be replaced, the replaced Product, become the property of Conair. The Warranty on any replacement Product or parts will expire on the same date that the Warranty Period on the original Product expires.

7. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Product which the Purchaser has under the ACL, and applicable laws in New Zealand, which rights and remedies by law may not be excluded. All other warranties and representations express and implied are hereby excluded.

8. The defect must have occurred during the Warranty Period and Purchaser bears the onus of proving that fact, and that the defect was not caused by any of the causes excluded from this Warranty.

9. This Warranty does not cover Products purchased from any person who is not a retailer serviced by Conair's authorised distributors or purchased second hand.

10. The Purchaser is responsible for all postage and freight charges and any other expenses incidental to claiming against this Warranty.

11. The Warranty excludes consumable items (such as blades or brushes) and normal wear and tear.

12. If you're certain your product is defective, and the product is covered by the terms of this warranty, you need to take the product back to the place you purchased it from, where the retailer will replace the product for you on our behalf. In this event, per the terms of this warranty you will need to present this portion of the warranty card and the purchase receipt as proof of purchase so please make sure you keep both this card and your receipt on hand for the duration of the warranty period.

SPARE PARTS

Replacement parts may be available for your product. Contact us on the phone or email address provided for more details. Please provide your product name/model number details, date of purchase and part you require.

CORD STORAGE

Keep the cord away from heated surfaces. After use NEVER wrap the cord tightly around the dryer as this creates stress on the internal cord wires at the high flex point of entry, causing it to rupture & short circuit. Coil cord loosely by the side of the appliance in storage.

STORAGE

Unplug the appliance when not in use or before cleaning. Ensure that the appliance is switched off & has cooled down before storing.

USER MAINTENANCE

Blocked or clogged air intake vents will cause the dryer to overheat. The rear filter should be checked & cleaned on a regular basis. To help maintain optimum performance & prevent overheating of your hairdryer:

- Ensure that your styler is switched off, unplugged from the power outlet & has cooled down.
- Holding the handle of your styler firmly, twist & pull the rear filter down to remove.
- Using a soft brush, clean any hair & other debris that may build up in the filter.
- Replace the rear filter by pushing & twisting back into position.

If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the dryer or heat turns off, unplug the cord & allow the dryer to cool for 15 minutes before restarting. Make sure the air vents are 100% clean.

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully & keep for future reference.

DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- If this appliance falls into water, unplug it immediately- DO NOT reach into the water.

WARNING: Before & During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.

- Do not immerse the appliance into water or other liquids.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint & other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.



- Burn hazard. Keep appliance out of reach from young children, particularly during use & cool down.
- Always place appliance with stand, if any, on a heat-resistant, stable flat surface.

WARNINGS: for Storage & Maintenance

- Always unplug the appliance immediately after use & before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

CAUTION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience & knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use & as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.