

VS
SASSOON


**INSTRUCTION
BOOKLET**

ABOUT YOUR STYLER

CONGRATULATIONS!

The Luxe straightener gives long lasting results & nourishes your hair with Argan infused ceramic technology.

This beautifully designed straightener, effortlessly glides through the hair for perfect results with every pass.

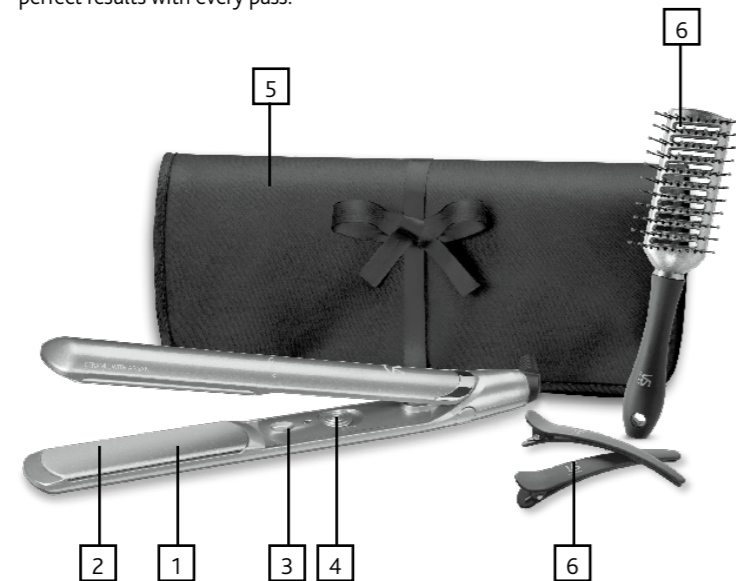

1. Argan Infused Ceramic Plates
2. Ceramic Heater
3. Multi-Voltage
4. Temperature Selector
5. Salon Wrap
6. Styling Brush & Sectioning Clips

FIRST USE

- When using the unit for the first time, you might notice a little smoke & distinct odour: this is common & will disappear by next use.
- Each time you use the appliance, you may see some steam. Do not be concerned, this could be because of the evaporation of the natural oils of the hair, residual hair products, or excess moisture evaporating from your hair.

OPERATING INSTRUCTIONS

As the Luxe Straighten & Smooth is a revolutionary new type of styler, it works very differently to the styling tools you may have used in the past. As such it's important to carefully read through the instructions before using for the first time.

INSTRUCTIONS FOR USE

- Ensure hair is dry & combed through. Divide hair into sections.
- Slide the switch to the heat setting suitable for your hair type.
- The red indicator light will blink until the heat setting selected has been reached.
- Place a section of hair between the straightening plates, close to the roots.
- Hold the hair firmly between the straightening plates & slide down the length of the hair from root to tip.
- Repeat as necessary.
- Allow the hair to cool before combing through.
- After use, switch off & unplug the appliance.
- Allow to cool before storing away.

HEAT SETTINGS

If you have delicate, fine or coloured hair, use the lower heat settings. For thicker hair, use the higher heat settings.

It is suggested to always complete a test on initial use to ensure the correct temperature is used on the hair type. Start on the lowest setting & increase the temperature until desired result is achieved.

Below is a guide of the temperature settings:

- I = 180°C
- II = 200°C
- III = 235°C

Auto Shut Off

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 72 minutes for 50Hz, 60 minutes for 60Hz continuously, it will automatically switch off. If you wish to continue using the appliance after this time, simply slide the switch to the heat setting suitable for your hair type I, II or III to turn the power on.

Salon Wrap

The appliance comes with a salon wrap for use during & after styling. During use do not place the appliance on any heat sensitive surface, even when using the heat wrap provided. After use, switch off & unplug the appliance. Continue to keep it out of reach of children as it will remain hot for several minutes.

IMPORTANT: The satin material is not heat resistant & the appliance should not be placed on this material whilst hot.

MULTI-VOLTAGE

This straightener has a multi-voltage feature for worldwide use. It has an internal automatic converter which will automatically convert the voltage switch from 120V~, 220-240V~ without the need of a switch. A suitable plug adaptor will be required, please refer to the chart below.

Plug adaptor required	Voltage & plug adaptors	Country
	British plug: 230V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)
	European plug: 230V	Asia, Europe, Middle East, Noumea, Scandinavia, South America, Hong Kong (parts only)
	Australian & New Zealand plug: 240V	Australia, New Zealand
	American plugs: 100-120V	North America, Japan, Canada (parts of)

CARE & MAINTENANCE

To help keep your appliance in the best possible condition follow the steps below:

- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

STYLE TIPS

STRAIGHTEN

- // For the best results, start with clean, dry & thoroughly combed through hair. Straighten your hair in sections making sure you go over each section once only to get a gorgeous, silky finish. Apply a heat spray for extra protection & longer lasting results.

HEAT

- // Experiment with various heat settings. Top temperatures may be too hot for fine, delicate or colour-treated hair, so bring the heat down to one of the lower settings if this applies to your tresses.

WAVES

- // Straight hair doesn't have to be poker straight. Create volume by making a curved movement with your wrist as you glide the straightener down the hair length.

SHORTER STYLES

- // Straight hair isn't just for long styles. Create a classic glossy bob by using this straightener on your shorter cut.

LOVE YOUR STYLE™
vssassoon.com.au

2 YEAR WARRANTY

Retain this section of the warranty card with your receipt/proof of purchase. You must present it to obtain replacement or service under the warranty.

The warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice. Attach a copy of your purchase receipt & store in a safe place.

To make a warranty claim call Customer Service on the phone number below or email aus_info@conair.com or you can return the defective product back to the place it was purchased where it will be replaced (see Point 12 in Conditions).

Please provide the following details:

1. Date of purchase
2. Retailer Name & Location:
3. Product Name/Model Number:
4. Confirm you have your purchase receipt:
5. Detail the problem with your product:

Conair Australia Pty Ltd
PO Box 146
Terrey Hills
NSW 2084

Conair New Zealand Ltd
PO Box 251159
Pakuranga, Auckland
New Zealand 2140



Certain trademarks used under license from The Procter & Gamble Company or its affiliates.

©2019 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

CUSTOMER SERVICE:
Australia: 1800 650 263
New Zealand: 0800 266 247

CONTACT US:
For advice, tips on your new VS product
E-mail us on: aus_info@conair.com

vssassoon.com.au

VSS2598LA

Customer Service
Australia
1800 650 263
email : aus_info@conair.com

Customer Service
New Zealand
0800 266 247
email: aus_info@conair.com

WARRANTY AGAINST DEFECTS

A. AUSTRALIAN CONSUMER LAW

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure & compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality & the failure does not amount to a major failure.
2. The guarantees under the Australian Consumer Law ("ACL") are provided in sections 51 to 59 inclusive of the ACL ("Statutory Guarantees") & the remedies are provided in sections 259 to 266 inclusive of the ACL ("Statutory Remedies").

B. VS SASSOON EXTENDED WARRANTY

1. In addition & subject to the Statutory Guarantees & Statutory Remedies, the following express warranty ("Warranty") commences from the date of purchase & continues for a period of 24 months ("Warranty Period") after which it expires. Subject to the conditions in Section C below, Conair warrants to the original purchaser ("Purchaser") of the VS Sassoon product that is the subject of this warranty ("Product") that if during the Warranty Period, the Product suffers from any defect caused by faults in materials or workmanship, Conair will a) replace the Product, or b) exchange defective parts in the Product or c) repair the Product, as Conair may choose in its discretion ("Warranty"). In this Warranty "Conair" means Conair Australia Pty Limited (ABN 64 068 492 044) of The Equinox Centre, Suite 101, 18 Rodborough Rd, Frenchs Forest, NSW, 2086. in relation to Products purchased in Australia & Conair New Zealand Ltd in relation to Products purchased in New Zealand.
2. To honour the Warranty, Conair must replace, or exchange parts in, or repair, the Product, as Conair determines, in accordance with paragraph B1 above, subject always to the conditions in Section C below.
3. If any of the conditions in Section C below are inconsistent with any provisions of the ACL or regulations made thereunder, those provisions of the ACL or regulations shall prevail to the extent of the inconsistency.

C.CONDITIONS

1. The Product must be used in accordance with manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Product be attributable to misuse, abuse, accident, act of God such as lightning, or nonobservance of manufacturer's instructions on the part of the user. This Warranty does not cover ordinary wear & tear in the Product or its parts.

2. Conair does not accept liability for a) any loss or damage however suffered, caused by or arising out of any failure to use the Product in accordance with the manufacturer's instructions, & b) any indirect, consequential or economic loss or damage however caused.
3. This Warranty is immediately void if – a) any serial number or appliance plate is removed or defaced, b) the Product has been serviced or otherwise repaired by a person not authorized to do so by Conair or where non approved replacement parts are used.
4. The Product is designed for domestic use only. The Product must be connected to the electrical voltage supply as specified in the ratings label located on the Product. This Warranty does not cover defects arising from non-domestic use or incorrect voltage supply.
5. This Warranty may only be claimed against where proof of original purchase is presented, for example, original receipt or invoice.
6. Any parts of the Product that need to be replaced, or if the whole Product needs to be replaced, the replaced Product, become the property of Conair. The Warranty on any replacement Product or parts will expire on the same date that the Warranty Period on the original Product expires.
7. The benefits provided by this Warranty are in addition to all other rights & remedies in respect of the Product which the Purchaser has under the ACL, & applicable laws in New Zealand, which rights & remedies by law may not be excluded. All other warranties & representations express & implied are hereby excluded.
8. The defect must have occurred during the Warranty Period & Purchaser bears the onus of proving that fact, & that the defect was not caused by any of the causes excluded from this Warranty.
9. This Warranty does not cover Products purchased from any person who is not a retailer serviced by Conair's authorised distributors or purchased second hand.
10. The Purchaser is responsible for all postage & freight charges & any other expenses incidental to claiming against this Warranty.
11. The Warranty excludes consumable items (such as blades or brushes) & normal wear & tear.
12. If you're certain your product is defective, & the product is covered by the terms of this warranty, you need to take the product back to the place you purchased it from, where the retailer will replace the product for you on our behalf. In this event, per the terms of this warranty you will need to present this portion of the warranty card & the purchase receipt as proof of purchase so please make sure you keep both this card & your receipt on hand for the duration of the warranty period.

SPARE PARTS

Replacement parts may be available for your product. Contact us on the phone or email address provided for more details. Please provide your product name/model number details, date of purchase & part you require.

IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully & keep for future reference.

DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- If this appliance falls into water, unplug it immediately - DO NOT reach into the water.
- Burn hazard. Keep appliance out of reach from young children, particularly during use & cool down.
- When the appliance is connected to the power supply, never leave it unattended.
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
- **WARNINGS:** Before & During Use
 - Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
 - If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
 - Do not operate this appliance or disconnect from the power supply with wet hands.
 - Never use this appliance at the same time as styling products such as aerosols (spray).
 - Be very careful when handling this appliance as parts of it may get extremely hot.
 - Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
 - Keep the cord away from heated surfaces.
 - Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint & other debris.
 - Do not cover this appliance with anything when it is switched on or hot.



- To avoid electric shock, do not drop or insert any object into an opening in this appliance.
- Burn hazard. Keep appliance out of reach from young children, particularly during use & cool down;
- Always place appliance with stand, if any, on a heat-resistant, stable flat surface.
- Do not immerse the appliance into water or other liquids.

WARNINGS: for Storage & Maintenance

- Always unplug the appliance immediately after use & before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

CAUTION

- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience & knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person - responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use & as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask you installer for advice.